


Shimming process

Kit 9900194-008 Shimming process installation information

This shim kit is to replace the crush ring within the pump housing. If the housing, drive shaft, shaft bearings or end cover is replaced during servicing, the original crush ring can no longer be used to assure proper bearing set.

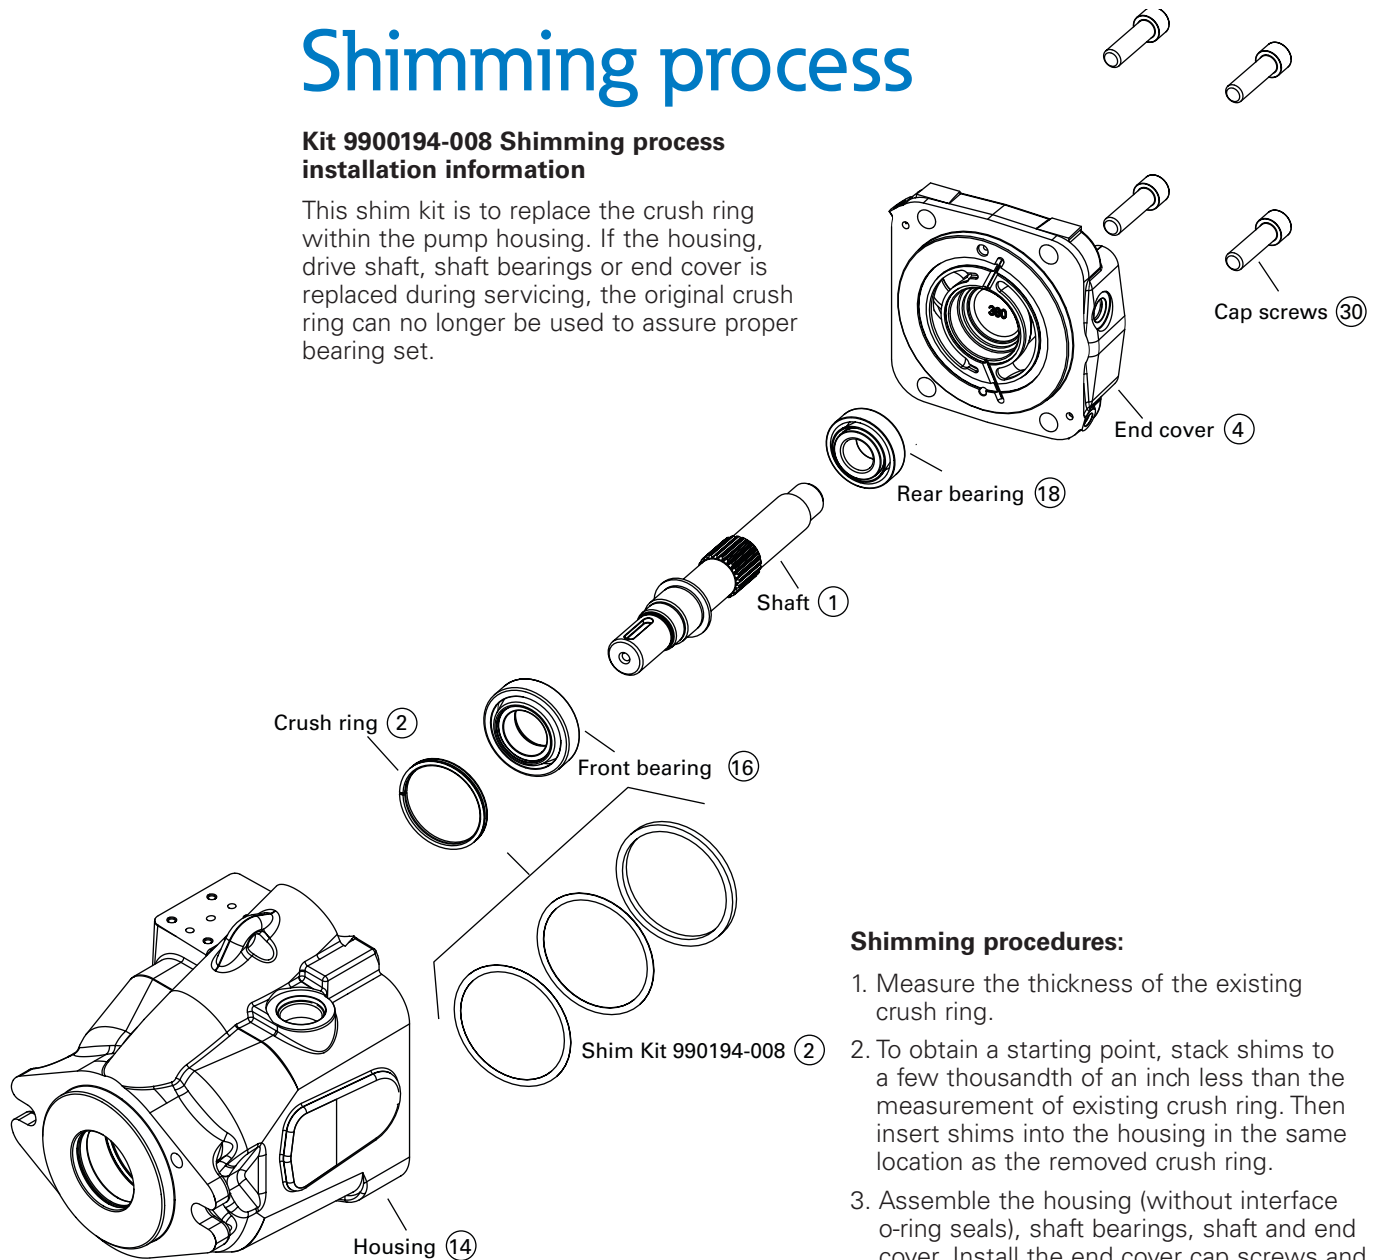

Shimming procedures:

1. Measure the thickness of the existing crush ring.
2. To obtain a starting point, stack shims to a few thousandth of an inch less than the measurement of existing crush ring. Then insert shims into the housing in the same location as the removed crush ring.
3. Assemble the housing (without interface o-ring seals), shaft bearings, shaft and end cover. Install the end cover cap screws and torque to 97 +/- 9 lb_f-ft.
4. Using a dial indicator, measure drive shaft end play. Target shaft end play range is .001" to .003" (.03 to .08 mm) clearance. Add shims to achieve proper shaft end play. If no movement of the shaft is observed, shims will need to be removed and steps 3 and 4 repeated.
5. Finish the assembly of the pump.

EATON

Powering Business Worldwide

Eaton
Hydraulics Business USA
14615 Lone Oak Road
Eden Prairie, MN 55344
USA
Tel: 952-937-9800
Fax: 952-294-7722
www.eaton.com/hydraulics

Eaton
Hydraulics Business Europe
Route de la Longeraie 7
1110 Morges
Switzerland
Tel: +41 (0) 21 811 4,600
Fax: +41 (0) 21 811 4601

Eaton
Hydraulics Business Asia Pacific
11th Floor Hong Kong
New World Tower
300 Huaihai Zhong Road
Shanghai 200021
China
Tel: 86-21-6387-9988
Fax: 86-21-6335-3912