



# Cutler-Hammer

## Multiple Metering

Renewal Parts

Supersedes RP00501001E  
Pages 1-8 dated June 2002

<i>Description</i>	<i>Page</i>
Meter Packs . . . . .	2
Main Devices . . . . .	3 – 5
Residential Meter Stacks — Ring . . . . .	6
Commercial Meter Stacks . . . . .	7
Miscellaneous Parts . . . . .	8



## Meter Packs

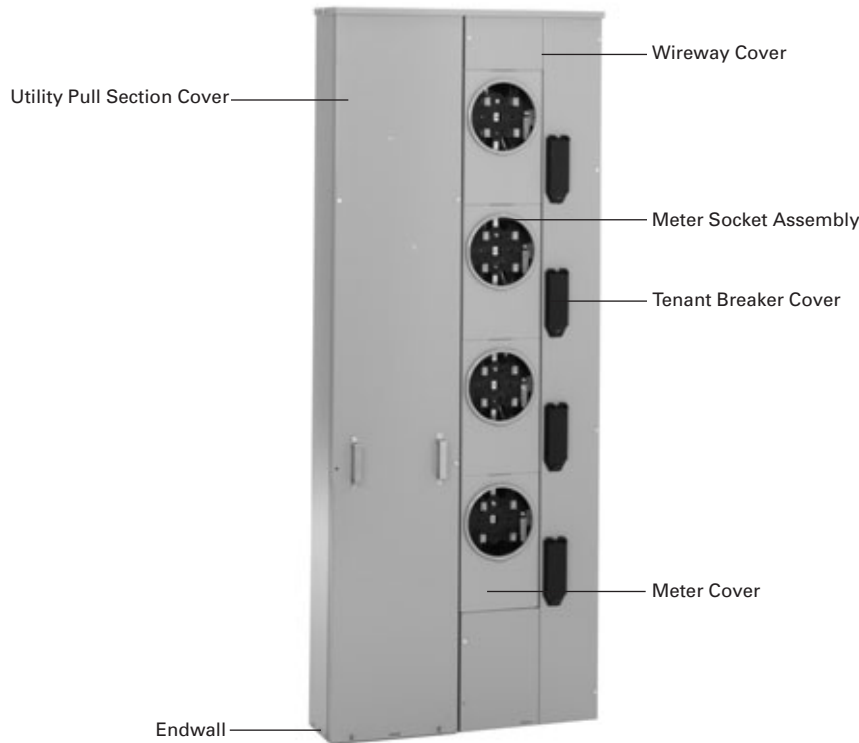 


Table 1. Meter Packs

Catalog Numbers								
Meter Pack	Utility Pull Section Cover	Wireway Cover	Meter Socket Assembly	Tenant Breaker Cover	Meter Cover	Endwall (with Knockouts)	Endwall (without Knockouts)	Vertical Bus Bars
1MP2122R	MP2122UCVR	MPCCVR01	1MMMS	1MMBC1	1MMCP1	MP122NWLK	MP122NWL	MM1223VBUS
1MP3124R	MP1234UCVR	MPCCVR04	1MMMS	1MMBC1	1MMCP1	MP1234NWLK	MP1234NWL	MM1223VBUS
1MP4124R	MP1234UCVR	MPCCVR05	1MMMS	1MMBC1	1MMCP1	MP1234NWLK	MP1234NWL	MM124VBUS
1MP5126R	MP1256UCVR	MPCCVR02 ①	1MMMS	1MMBC1	1MMCP1 ②	MP1256NWLK	MP1256NWL	MM1223VBUS
1MP6126R	MP1256UCVR	MPCCVR03 ①	1MMMS	1MMBC1	1MMCP1 ②	MP1256NWLK	MP1256NWL	MM1223VBUS
1MP2204R	MP202UCVR	MPCCVR06	1MMMS	1MMBC2	1MMCP2	MP2024NWLK	MP2024NWL	MM202VBUS
1MP3206R	MP2034UCVR	MPCCVR09	1MMMS	1MMBC2	1MMCP2	MP2024NWLK	MP2024NWL	MM2023VBUS
1MP4206R	MP2034UCVR	MPCCVR10	1MMMS	1MMBC2	1MMCP2	MP2024NWLK	MP2024NWL	MM204VBUS
1MP5206R	MP2056UCVR	MPCCVR07 ③	1MMMS	1MMBC2	1MMCP2	MP2056NWLK	MP2056NWL	MM2023VBUS
1MP6206R	MP2056UCVR	MPCCVR08 ③	1MMMS	1MMBC2	1MMCP2	MP2056NWLK	MP2056NWL	MM2023VBUS
1MP2122RRL ④	MP2122LUCVR	MPCCVR01	1MMMS ⑤	1MMBC1	1MMRC125 ⑥	MP122NWLK	MP122NWL	MM1223VBUS
1MP3124RRL ④	MP1234UCVR	MPCCVR04	1MMMS ⑤	1MMBC1	1MMRC125 ⑥	MP1234NWLK	MP1234NWL	MM1223VBUS
1MP4124RRL ④	MP1234UCVR	MPCCVR05	1MMMS ⑤	1MMBC1	1MMRC125 ⑥	MP1234NWLK	MP1234NWL	MM124VBUS
1MP5126RRL ④	MP1256UCVR	MPCCVR02	1MMMS ⑤	1MMBC1	1MMRC125 ⑥	MP1256NWLK	MP1256NWL	MM1223VBUS
1MP6126RRL ④	MP1256UCVR	MPCCVR03	1MMMS ⑤	1MMBC1	1MMRC125 ⑥	MP1256NWLK	MP1256NWL	MM1223VBUS
1MP2204RRL ④	MP202UCVR	MPCCVR06	1MMMS ⑤	1MMBC2	1MMRC200	MP2024NWLK	MP2024NWL	MM202VBUS
1MP3206RRL ④	MP2034UCVR	MPCCVR09	1MMMS ⑤	1MMBC2	1MMRC200	MP2024NWLK	MP2024NWL	MM2023VBUS
1MP4206RRL ④	MP2034UCVR	MPCCVR10	1MMMS ⑤	1MMBC2	1MMRC200	MP2024NWLK	MP2024NWL	MM204VBUS
1MP5206RRL ④	MP2056UCVR	MPCCVR07	1MMMS ⑤	1MMBC2	1MMRC200	MP2056NWLK	MP2056NWL	MM2023VBUS
1MP6206RRL ④	MP2056UCVR	MPCCVR08	1MMMS ⑤	1MMBC2	1MMRC200	MP2056NWLK	MP2056NWL	MM2023VBUS

① For center wireway cover, order **MPCENCVR1**.

② For top position, use meter socket cover **1MMCP1T**.


③ For center wireway cover, order **MPCENCVR2**.

④ For catalog numbers with a "B" suffix (ringless with horn bypass), all replacement parts are the same with the exception of the meter socket assembly. Refer to Footnote ⑤ for correct catalog number.

⑤ For ringless style meter packs with horn bypass, order **1MMMSB**.

⑥ For top position, use meter socket cover **1MMRC125T**.

**Main Devices**

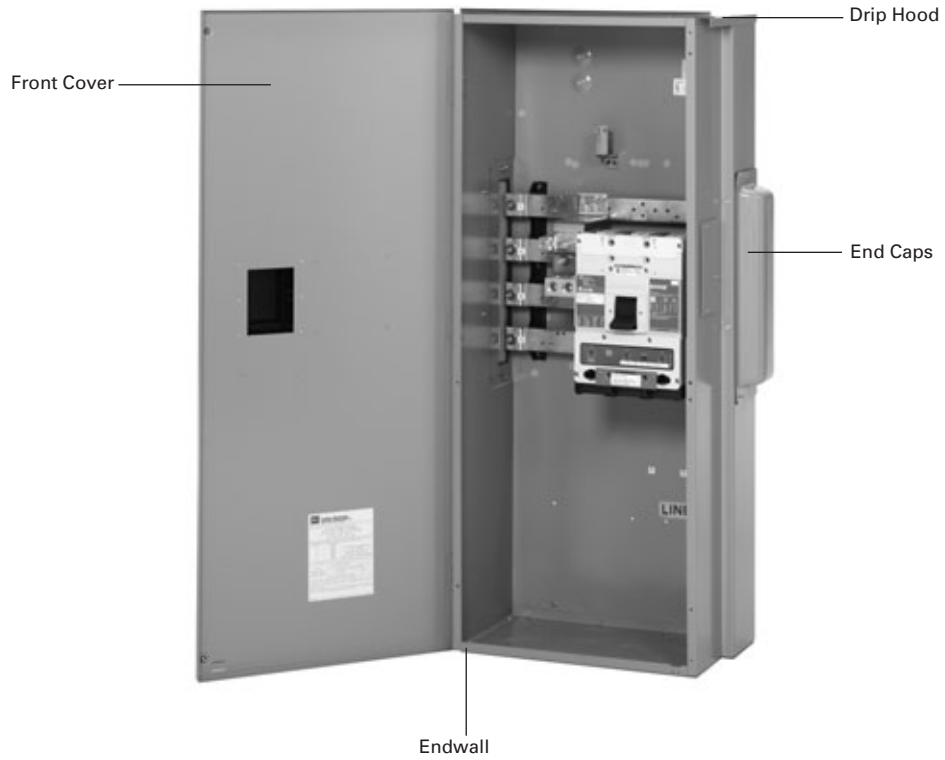 

**Table 2. End Caps**

Description	Catalog Numbers
Right Side (Bumped)	47-28172-2A
Left Side (Flat)	47-24139A

**Table 3. Terminal Box**

Catalog Numbers				
Terminal Box	Front Cover	Drip Hood	Endwall (with Knockouts)	Endwall (without Knockouts)
1MTB800R 1MTB1200R 3MTB400R	MMFCVR1 MMFCVR1 MTBFCVR1	MMDH1 MMDH1 MMDH4	MMEW1 MMEW1 MTBEW1	MMEWNK01 MMEWNK01 MTBEWNK01
3MTB600R 3MTB800R 3MBT1200R	MTBFCVR1 MMFCVR1 MMFCVR1	MMDH4 MMDH1 MMDH1	MTBEW1 MMEW1 MMEW1	MTBEWNK01 MMEWNK01 MMEWNK01

## Main Devices (Continued)

Table 4. Main Circuit Breaker

Catalog Numbers				
Circuit Breaker	Front Cover	Drip Hood	Endwall (with Knockouts)	Endwall (without Knockouts)
1MCB250R 1MHCB250R 1MCB300R 1MHCB300R	MCBFCVR1 MCBFCVR1 MCBFCVR1 MCBFCVR1	MMDH1 MMDH1 MMDH1 MMDH1	MMEW1 MMEW1 MMEW1 MMEW1	MMEWVK01 MMEWVK01 MMEWVK01 MMEWVK01
1MCB350R 1MHCB350R 1MCB400R 1MHCB400R	MCBFCVR1 MCBFCVR1 MCBFCVR1 MCBFCVR1	MMDH1 MMDH1 MMDH1 MMDH1	MMEW1 MMEW1 MMEW1 MMEW1	MMEWVK01 MMEWVK01 MMEWVK01 MMEWVK01
1MCB500R 1MHCB500R 1MCB600R 1MHCB600R	MCBFCVR1 MCBFCVR1 MCBFCVR1 MCBFCVR1	MMDH1 MMDH1 MMDH1 MMDH1	MMEW1 MMEW1 MMEW1 MMEW1	MMEWVK01 MMEWVK01 MMEWVK01 MMEWVK01
1MCB700R 1MHCB700R 1MCB800R 1MHCB800R	MCBFCVR2 MCBFCVR2 MCBFCVR2 MCBFCVR2	MMDH1 MMDH1 MMDH1 MMDH1	MMEW1 MMEW1 MMEW1 MMEW1	MMEWVK01 MMEWVK01 MMEWVK01 MMEWVK01
1MCB900R 1MHCB900R 1MCB1000R 1MHCB1000R	MCBFCVR2 MCBFCVR2 MCBFCVR2 MCBFCVR2	MMDH1 MMDH1 MMDH1 MMDH1	MMEW1 MMEW1 MMEW1 MMEW1	MMEWVK01 MMEWVK01 MMEWVK01 MMEWVK01
1MCB1200R 1MHCB1200R 1MCB1400RB 1MCB1400RT	MCBFCVR2 MCBFCVR2 MCBFCVR3 MCBFCVR3	MMDH1 MMDH1 MCBDH1 MCBDH1	MMEW1 MMEW1 — —	MMEWVK01 MMEWVK01 MMEWVK03 MMEWVK03
1MCB1600RB 1MCB1600RT 1MCB2000RB 1MCB2000RT	MCBFCVR3 MCBFCVR3 MCBFCVR3 MCBFCVR3	MCBDH1 MCBDH1 MCBDH1 MCBDH1	— — — —	MMEWVK03 MMEWVK03 MMEWVK03 MMEWVK03
3MCB250R 3MHCB250R 3MCB300R 3MHCB300R	MCBFCVR1 MCBFCVR1 MCBFCVR1 MCBFCVR1	MMDH1 MMDH1 MMDH1 MMDH1	MMEW1 MMEW1 MMEW1 MMEW1	MMEWVK01 MMEWVK01 MMEWVK01 MMEWVK01
3MCB350R 3MHCB350R 3MCB400R 3MHCB400R	MCBFCVR1 MCBFCVR1 MCBFCVR1 MCBFCVR1	MMDH1 MMDH1 MMDH1 MMDH1	MMEW1 MMEW1 MMEW1 MMEW1	MMEWVK01 MMEWVK01 MMEWVK01 MMEWVK01
3MCB500R 3MHCB500R 3MCB600R 3MHCB600R	MCBFCVR1 MCBFCVR1 MCBFCVR1 MCBFCVR1	MMDH1 MMDH1 MMDH1 MMDH1	MMEW1 MMEW1 MMEW1 MMEW1	MMEWVK01 MMEWVK01 MMEWVK01 MMEWVK01
3MCB700R 3MHCB700R 3MCB800R 3MHCB800R	MCBFCVR2 MCBFCVR2 MCBFCVR2 MCBFCVR2	MMDH1 MMDH1 MMDH1 MMDH1	MMEW1 MMEW1 MMEW1 MMEW1	MMEWVK01 MMEWVK01 MMEWVK01 MMEWVK01
3MCB900R 3MHCB900R 3MCB1000R 3MHCB1000R	MCBFCVR2 MCBFCVR2 MCBFCVR2 MCBFCVR2	MMDH1 MMDH1 MMDH1 MMDH1	MMEW1 MMEW1 MMEW1 MMEW1	MMEWVK01 MMEWVK01 MMEWVK01 MMEWVK01
3MCB1200R 3MHCB1200R 3MCB1400RB 3MCB1400RT	MCBFCVR2 MCBFCVR2 MCBFCVR3 MCBFCVR3	MMDH1 MMDH1 MCBDH1 MCBDH1	MMEW1 MMEW1 — —	MMEWVK01 MMEWVK01 MMEWVK03 MMEWVK03
3MCB1600RB 3MCB1600RT 3MCB2000RB 3MCB2000RT	MCBFCVR3 MCBFCVR3 MCBFCVR3 MCBFCVR3	MCBDH1 MCBDH1 MCBDH1 MCBDH1	— — — —	MMEWVK03 MMEWVK03 MMEWVK03 MMEWVK03

## Main Devices (Continued)

Table 5. Main Fusible Switch

Catalog Numbers				
Fusible Switch	Front Cover	Drip Hood	Endwall (with Knockouts)	Endwall (without Knockouts)
1MFS400RB 1MFS400RT 1MFS600RB 1MFS600RT	MMFCVR1 MFSFCVR1 MMFCVR1 MFSFCVR1	MMDH1 MMDH1 MMDH1 MMDH1	MMEW1 — MMEW1 —	MMEWVKO1 MMEWVKO1 MMEWVKO1 MMEWVKO1
1MFS800RB 1MFS800RT 1MFS1200RB 3MFS400RB	MMFCVR1 MFSFCVR1 MFSFCVR2 MMFCVR1	MMDH1 MMDH1 MMDH2 MMDH1	MMEW1 — MMEW2 MMEW1	MMEWVKO1 MMEWVKO1 MMEWVKO2 MMEWVKO1
3MFS400RT 3MFS600RB 3MFS600RT 3MFS800RB	MFSFCVR1 MMFCVR1 MFSFCVR1 MMFCVR1	MMDH1 MMDH1 MMDH1 MMDH1	— MMEW1 — MMEW1	MMEWVKO1 MMEWVKO1 MMEWVKO1 MMEWVKO1
3MFS800RT 3MFS1200RB	MFSFCVR1 MFSFCVR2	MMDH1 MMDH2	— MMEW2	MMEWVKO1 MMWENKO2

Table 6. Main Bolted Pressure Contact Switch

Catalog Numbers				
Bolted Pressure Contact Switch	Front Cover	Drip Hood	Endwall (with Knockouts)	Endwall (without Knockouts)
1BPS1200RB 1BPS1200RT 3BPS1200RB 3BPS1200RT  3BPS1600RB 3BPS1600RT 3BPS2000RB 3BPS2000RT	No replacement parts available at this time.			

Table 7. Main Fusible Switch with Pullbox

Catalog Numbers					
Fusible Switch with Pullbox	Front Cover	Pullbox Cover	Drip Hood	Endwall (with Knockouts)	Endwall (without Knockouts)
1MFS400RUG 1MFS600RUG 1MFS800RUG 1MFS1200RUG	MFPFCVR1 MFPFCVR1 MFPFCVR1 MFPFCVR2	MFPBCVR1 MFPBCVR1 MFPBCVR1 MFPBCVR2	MMDH1 MMDH1 MMDH1 MMDH2	MMEW1 MMEW1 MMEW1 MMEW2	MMEWVKO1 MMEWVKO1 MMEWVKO1 MMEWVKO2
3MFS400RUG 3MFS600RUG 3MFS800RUG 3MFS1200RUG	MFPFCVR1 MFPFCVR3 MFPFCVR3 MFPFCVR2	MFPBCVR1 MFPBCVR3 MFPBCVR3 MFPBCVR2	MMDH1 MMDH5 MMDH5 MMDH2	MMEW1 MMEW4 MMEW4 MMEW2	MMEWVKO1 MMEWVKO4 MMEWVKO4 MMEWVKO2

Table 8. Pullbox

Catalog Numbers				
Pullbox	Front Cover/ Pullbox Cover	Drip Hood	Endwall (with Knockouts)	Endwall (without Knockouts)
1UGPB400R 1UGPB800R 1UGPB1200R	PBFCVR1 PBFCVR2 PBFCVR3	PBDH1 PBDH2 PBDH3	PBEW1 PBEW2 PBEW3	PBEWVKO1 PBEWVKO2 PBEWVKO3
3UGPB400R 3UGPB800R 3UGPB1200R	PBFCVR1 PBFCVR2 PBFCVR3	PBDH1 PBDH2 PBDH3	PBEW1 PBEW2 PBEW3	PBEWVKO1 PBEWVKO2 PBEWVKO3

## Residential Meter Stacks — Ring

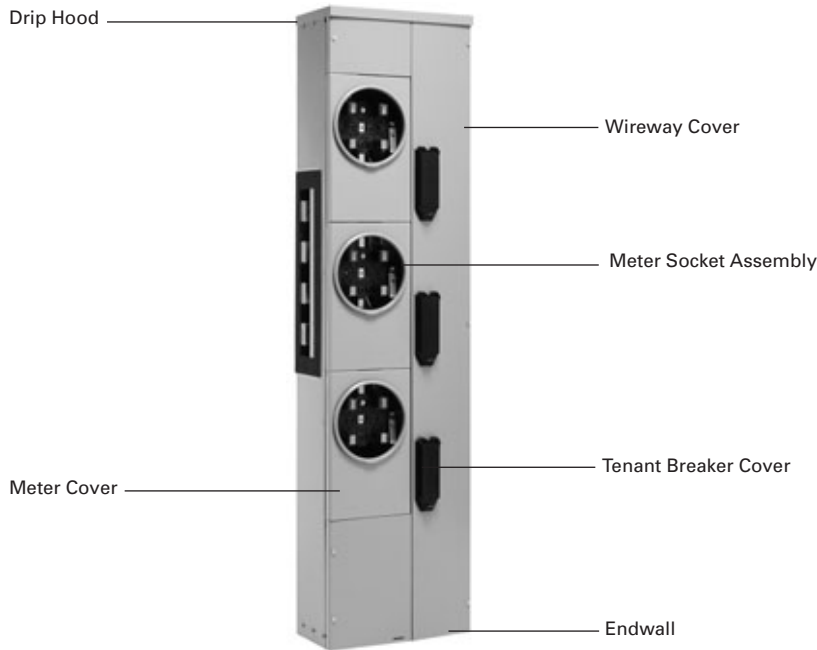 


Table 9. Residential Meter Stacks — Ring

Catalog Numbers								
Meter Stack	Wireway Cover	Meter Socket Assembly	Tenant Breaker Cover	Meter Cover	Endwall (with Knockouts)	Endwall (without Knockouts)	Drip Hood	Vertical Bus Bar
3MM212	MMCCVR2123	—	①	1MMCP1	MM12N1WLK	MM12N1WL	MMDH3	MM1223VBUS
3MM212R	MMCCVR2123R	1MMMS	1MMBC1	1MMCP1	MM12N1WLK	MM12N1WL	MMDH3	MM1223VBUS
1MM312	MMCCVR3121	1MMMS	①	1MMCP1	MM12N1WLK	MM12N1WL	MMDH3	MM1223VBUS
1MM312R	MMCCVR3121R	1MMMS	1MMBC1	1MMCP1	MM12N1WLK	MM12N1WL	MMDH3	MM1223VBUS
3MM312	MMCCVR3123	1MMMS	①	1MMCP1	MM12N1WLK	MM12N1WL	MMDH3	MM1223VBUS
3MM312R	MMCCVR3123R	1MMMS	1MMBC1	1MMCP1	MM12N1WLK	MM12N1WL	MMDH3	MM1223VBUS
1MM412	MMCCVR4121	1MMMS	①	1MMCP1	MM12N1WLK	MM12N1WL	MMDH3	MM124VBUS
1MM412R	MMCCVR4121R	1MMMS	1MMBC1	1MMCP1	MM12N1WLK	MM12N1WL	MMDH3	MM124VBUS
3MM412	MMCCVR4123	1MMMS	①	1MMCP1	MM12N1WLK	MM12N1WL	MMDH3	MM124VBUS
3MM412R	MMCCVR4123R	1MMMS	1MMBC1	1MMCP1	MM12N1WLK	MM12N1WL	MMDH3	MM124VBUS
1MM512	MMCCVR5121	1MMMS	①	1MMCP1	MM12N1WLK	MM12N1WL	MMDH3	MM125VBUS
1MM512R	MMCCVR5121R	1MMMS	1MMBC1	1MMCP1	MM12N1WLK	MM12N1WL	MMDH3	MM125VBUS
3MM512	MMCCVR5123	1MMMS	①	1MMCP1	MM12N1WLK	MM12N1WL	MMDH3	MM125VBUS
3MM512R	MMCCVR5123R	1MMMS	1MMBC1	1MMCP1	MM12N1WLK	MM12N1WL	MMDH3	MM125VBUS
1MM612	MMCCVR6121	1MMMS	①	1MMCP1	MM12N1WLK	MM12N1WL	MMDH3	MM126VBUS
1MM612R	MMCCVR6121R	1MMMS	1MMBC1	1MMCP1	MM12N1WLK	MM12N1WL	MMDH3	MM126VBUS
3MM612	MMCCVR6123	1MMMS	①	1MMCP1	MM12N1WLK	MM12N1WL	MMDH3	MM126VBUS
3MM612R	MMCCVR6123R	1MMMS	1MMBC1	1MMCP1	MM12N1WLK	MM12N1WL	MMDH3	MM126VBUS
3MM220	MMCCVR2203	1MMMS	①	1MMCP2	MM20N1WLK	MM20N1WL	MMDH4	MM2023VBUS
3MM220R	MMCCVR2203R	1MMMS	1MMBC2	1MMCP2	MM20N1WLK	MM20N1WL	MMDH4	MM2023VBUS
1MM320	MMCCVR3201	1MMMS	①	1MMCP2	MM20N1WLK	MM20N1WL	MMDH4	MM2023VBUS
1MM320R	MMCCVR3201R	1MMMS	1MMBC2	1MMCP2	MM20N1WLK	MM20N1WL	MMDH4	MM2023VBUS
3MM320	MMCCVR3203	1MMMS	①	1MMCP2	MM20N1WLK	MM20N1WL	MMDH4	MM2023VBUS
3MM320R	MMCCVR3203R	1MMMS	1MMBC2	1MMCP2	MM20N1WLK	MM20N1WL	MMDH4	MM2023VBUS
1MM420	MMCCVR4201	1MMMS	①	1MMCP2	MM20N1WLK	MM20N1WL	MMDH4	MM204VBUS
1MM420R	MMCCVR4201R	1MMMS	1MMBC2	1MMCP2	MM20N1WLK	MM20N1WL	MMDH4	MM204VBUS
3MM420	MMCCVR4203	1MMMS	①	1MMCP2	MM20N1WLK	MM20N1WL	MMDH4	MM204VBUS
3MM420R	MMCCVR4203R	1MMMS	1MMBC2	1MMCP2	MM20N1WLK	MM20N1WL	MMDH4	MM204VBUS

① NEMA® 1 meter stacks do not come with breaker covers.

## Residential Meter Stacks — Ring (Continued)

**Table 9. Residential Meter Stacks — Ring (Continued)**

Catalog Numbers								
Meter Stack	Wireway Cover	Meter Socket Assembly	Tenant Breaker Cover	Meter Cover	Endwall (with Knockouts)	Endwall (without Knockouts)	Drip Hood	Vertical Bus Bar
3MM212RRL ①	MMCCVR2123R	1MMMS ②	1MMBC1	1MMRC125 ③	MM12NWLK	MM12NWL	MMDH3	MM1223VBUS
1MM312RRL ①	MMCCVR3121R	1MMMS ②	1MMBC1	1MMRC125 ③	MM12NWLK	MM12NWL	MMDH3	MM1223VBUS
3MM312RRL ①	MMCCVR3123R	1MMMS ②	1MMBC1	1MMRC125 ③	MM12NWLK	MM12NWL	MMDH3	MM1223VBUS
1MM412RRL ①	MMCCVR3121R	1MMMS ②	1MMBC1	1MMRC125 ③	MM12NWLK	MM12NWL	MMDH3	MM124VBUS
3MM412RRL ①	MMCCVR4123R	1MMMS ②	1MMBC1	1MMRC125 ③	MM12NWLK	MM12NWL	MMDH3	MM124VBUS
1MM512RRL ①	MMCCVR5121R	1MMMS ②	1MMBC1	1MMRC125 ③	MM12NWLK	MM12NWL	MMDH3	MM125VBUS
3MM512RRL ①	MMCCVR5123R	1MMMS ②	1MMBC1	1MMRC125 ③	MM12NWLK	MM12NWL	MMDH3	MM125VBUS
1MM612RRL ①	MMCCVR6121R	1MMMS ②	1MMBC1	1MMRC125 ③	MM12NWLK	MM12NWL	MMDH3	MM126VBUS
3MM612RRL ①	MMCCVR6123R	1MMMS ②	1MMBC1	1MMRC125 ③	MM12NWLK	MM12NWL	MMDH3	MM126VBUS
3MM220RRL ①	MMCCVR2203R	1MMMS ②	1MMBC2	1MMRC200	MM20NWLK	MM20NWL	MMDH4	MM2023VBUS
1MM320RRL ①	MMCCVR3201R	1MMMS ②	1MMBC2	1MMRC200	MM20NWLK	MM20NWL	MMDH4	MM2023VBUS
3MM320RRL ①	MMCCVR3203R	1MMMS ②	1MMBC2	1MMRC200	MM20NWLK	MM20NWL	MMDH4	MM2023VBUS
1MM420RRL ①	MMCCVR4201R	1MMMS ②	1MMBC2	1MMRC200	MM20NWLK	MM20NWL	MMDH4	MM204VBUS
3MM420RRL ①	MMCCVR4203R	1MMMS ②	1MMBC2	1MMRC200	MM20NWLK	MM20NWL	MMDH4	MM204VBUS

① For catalog numbers with a “B” suffix (ringless with horn bypass), all replacement parts are the same with the exception of the meter socket assembly. Refer to Footnote ② for correct catalog number.

② For ringless style meter stacks with horn bypass, order **1MMMSB** meter socket assembly.

③ For top position, use meter socket cover **1MMRC125T**.

## Commercial Meter Stacks

**Table 10. Commercial Meter Stacks (Lever Bypass)**

Catalog Numbers									
Meter Stack	Wireway Cover		Meter Socket Assembly	Tenant Breaker Cover	Meter Cover		Endwall (with Knockouts)	Endwall (without Knockouts)	Drip Hood
35MM120R12	MSLWCVR1	—	MSLMSA1	MSBCVR1	MSLMCVR1 ④	37MMSK1 ⑤	—	MSLEW1	MSLDH1
35MM220R12	MSLWCVR2	—	MSLMSA1	MSBCVR1	MSLMCVR1 ④	37MMSK1 ⑤	—	MSLEW1	MSLDH1
35MM320R12	MSLWCVR3	—	MSLMSA1	MSBCVR1	MSLMCVR1 ④	37MMSK1 ⑤	—	MSLEW1	MSLDH1
35MM420R12	MSLWCVR4 ④	MSLWCVR13 ⑤	MSLMSA1	MSBCVR1	MSLMCVR1 ④	37MMSK1 ⑤	—	MSLEW2	MSLDH2
37MM140R12	MSLWCVR9 ④	MSLWCVR14 ⑤	MSLMSA2	MSBCVR1	MSLMCVR1 ④	37MMSK1 ⑤	—	MSLEW1	MSLDH1
37MM120R12	MSLWCVR5 ④	MSLWCVR15 ⑤	MSLMSA2	MSBCVR1	MSLMCVR1 ④	37MMSK1 ⑤	—	MSLEW1	MSLDH1
37MM220R12	MSLWCVR6 ④	MSLWCVR16 ⑤	MSLMSA2	MSBCVR1	MSLMCVR1 ④	37MMSK1 ⑤	—	MSLEW1	MSLDH1
37MM320R12	MSLWCVR7 ④	MSLWCVR17 ⑤	MSLMSA2	MSBCVR1	MSLMCVR1 ④	37MMSK1 ⑤	—	MSLEW1	MSLDH1
37MM420R12	MSLWCVR8 ④	MSLWCVR18 ⑤	MSLMSA2	MSBCVR1	MSLMCVR1 ④	37MMSK1 ⑤	—	MSLEW2	MSLDH2

④ Used for product built October 2002 and prior.

⑤ Used for product built after October 2002.

**Table 11. Commercial Meter Stack (Test Bypass)**

Catalog Numbers							
Meter Stack	Wireway Cover	Meter Socket Assembly	Tenant Breaker Cover	Meter Cover	Endwall (with Knockouts)	Endwall (without Knockouts)	Drip Hood
35SS120RAB	MSTWCVR1	MSTMSA1	MSBCVR1	MSTMCVR1	MSTEW1	MSTEWNK01	MSTDH1
35SS120RAC	MSTWCVR2	MSTMSA1	MSBCVR1	MSTMCVR1	MSTEW1	MSTEWNK01	MSTDH1
35SS120RBC	MSTWCVR3	MSTMSA1	MSBCVR1	MSTMCVR1	MSTEW1	MSTEWNK01	MSTDH1
35SS220RAB	MSTWCVR4	MSTMSA1	MSBCVR1	MSTMCVR1	MSTEW2	MSTEWNK02	MSTDH1
35SS220RAC	MSTWCVR5	MSTMSA1	MSBCVR1	MSTMCVR1	MSTEW2	MSTEWNK02	MSTDH1
35SS220RBC	MSTWCVR6	MSTMSA1	MSBCVR1	MSTMCVR1	MSTEW2	MSTEWNK02	MSTDH1
35SS320RAB	MSTWCVR7	MSTMSA1	MSBCVR1	MSTMCVR1	MSTEW2	MSTEWNK02	MSTDH1
35SS320RAC	MSTWCVR8	MSTMSA1	MSBCVR1	MSTMCVR1	MSTEW2	MSTEWNK02	MSTDH1
35SS320RBC	MSTWCVR9	MSTMSA1	MSBCVR1	MSTMCVR1	MSTEW2	MSTEWNK02	MSTDH1
37SS120R	MSTWCVR10	MSTMSA2	MSBCVR1	MSTMCVR1	MSTEW1	MSTEWNK01	MSTDH1
37SS220R	MSTWCVR11	MSTMSA2	MSBCVR1	MSTMCVR1	MSTEW2	MSTEWNK02	MSTDH1
37SS320R	MSTWCVR12	MSTMSA2	MSBCVR1	MSTMCVR1	MSTEW2	MSTEWNK02	MSTDH1

**Miscellaneous Parts**

NEMA is the registered trademark and service mark of the National Electrical Manufacturers Association.

**Table 12. Miscellaneous Parts**

Description	Part Number
Phase Balancing Kit, Single-Phase Commercial Metering A and C Phase Balancing Kit (3MM) Breaker Mounting Kit, Commercial Metering (One 3-Pole Breaker per Kit)	<b>99-4177-3</b> <b>99-4184</b> <b>99-4176-2</b>
Breaker Mounting Kit, 1MM/1MP, 200 Amperes, (One 2-Pole Breaker per Kit) Mounting Kit, Meter Center Mounting Kit, Meter Pack	<b>99-4176</b> <b>99-4172</b> <b>99-4173</b>
Bonding Strap Kit, All Meter Packs (Except CECHA 3 and 4 Socket) Bonding Strap Kit, CHECA 3 and 4 Socket Meter Packs Sealing Screw Kit, Ringless Devices (6 Screws)	<b>99-4174</b> <b>99-2379</b> <b>99-4175</b>
Sealing Screw Kit, 3 and 4 Meter Sockets, Ringless Devices (4 Screws) Padlock Bracket Mounting Bracket Kit — All Breaker and Fusible Mains Mounting Bracket Kit — 400 and 600 Ampere 3MTB Exterior Breaker Cover	<b>99-2589</b> <b>99-2512-5</b> <b>99-4183</b> <b>99-4183-3</b> <b>49-6070</b>

Eaton Electrical  
 1000 Cherrington Parkway  
 Moon Township, PA 15108-4312  
 USA  
 tel: 1-800-525-2000  
 www.eatonelectrical.com

