

# Eaton Intelligent Power Manager (IPM) setup guide

The first time you use IPM, you will be required to activate the software in the [Setup Wizard](#) or later in the [Settings > License](#) menu.

To activate your IPM license, you will be required to perform an offline activation for the initial activation. Subsequent renewals or updates may be performed online if the IPM instance has access to the internet.

## Activate IPM with these easy steps:

- 1** Simply cut and paste the activation ID from the email into the [Activation ID](#) field. Be careful to not copy any leading or trailing spaces.
- 2** Click on the [Export the activation request](#) button. This will generate and download a “capability request” file.
- 3** Open the Eaton licensing website by clicking on the dedicated [Open licensing website](#) button and click on the [Register](#) link.

Activate License

Activation id \* **1**

The field is required

Don't have an activation code? Find your reseller

Activate license online

You may activate your software license later. You will then have 7 days to do it from the menu Settings / License.

Offline activation

**1** Export the activation request **2** Export

**2** Send the activation request to the licensing website to get the license file Open licensing website

**3** Import the license file to software (No file selected) Import file

Cancel Activate License

EATON

Login

With User Name  
 With Activation ID

Username


Password

Forgot password? | Register

Log in


**3**

- 4 Enter your registration information in the form, including the name of your preferred reseller if you know it and select **Complete** when finished.

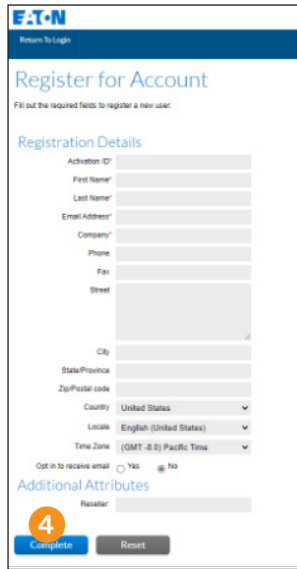

**Please note** that we may contact you in the future regarding updates and/or renewal of the IPM software. Your contact information will not be used for marketing purposes without your express consent and opt-in via the Eaton Preference Center which may be found here. [<insert link>](#)

- 5 Navigate to the **Devices > Offline Device Management** menu.

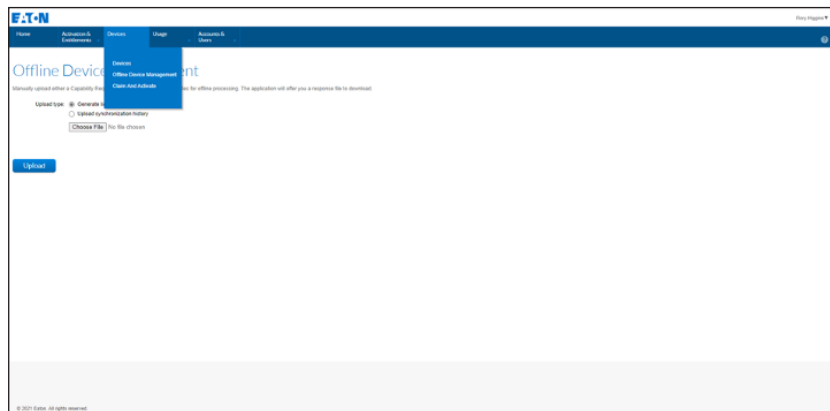

- 6 Verify that the **Generate license** radio button is selected, then choose the **Capability request** file that you generated in IPM to upload by clicking on the **Choose file** button.
- 7 Click **Upload**.
- 8 When the process is complete, a blue message area will appear near the top of your browser window with a link to **download a Capability response** file.
- 9 Click the link to download the **Capability response** file.
- 10 Return to the IPM browser window and click on the **Import file** button to select and upload the capability response file.
- 11 Click on the **Activate License** button.
- 12 **Congratulations!**  
**The activation is now complete.**

**Eaton**  
1000 Eaton Boulevard  
Cleveland, OH 44122  
United States  
Eaton.com

© 2021 Eaton  
All Rights Reserved  
Printed in USA  
Publication No. BR152076EN / GG  
June 2021

Eaton is a registered trademark.  
All other trademarks are property  
of their respective owners.