

 



**Power  
Defense™**

**Circuit Breaker  
Accessory**

**For PDG3  
Frame**

**PDG3 - Screw Terminal/End Cap 600 amps, 4 Poles**  
**Cat. No. PDG3X4TS600**  
**Style No. 66A4562G13**  
**Quantity - 1**

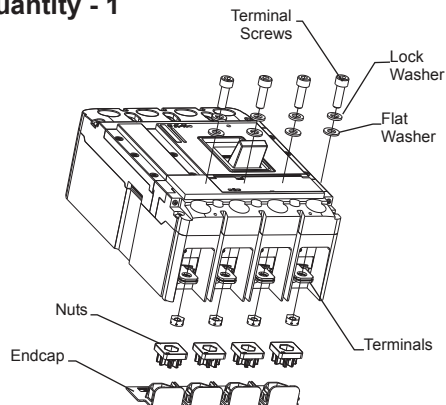

786689261788

Disconnect Voltage and Tripbreaker.  
To Install, slide Endcap and Nuts onto breaker base.  
Mount breaker to panel.  
Place Wire Terminations on top of breaker Terminals.  
Insert Terminal Screws through washers in order  
shown, and torque screws to 354 Lbs-in (40N-m).

IL012265EN H01

 



**Power  
Defense™**

**Circuit Breaker  
Accessory**

**For PDG3  
Frame**

**PDG3 - Screw Terminal/End Cap 600 amps, 4 Poles**  
**Cat. No. PDG3X4TS600**  
**Style No. 66A4562G13**  
**Quantity - 1**

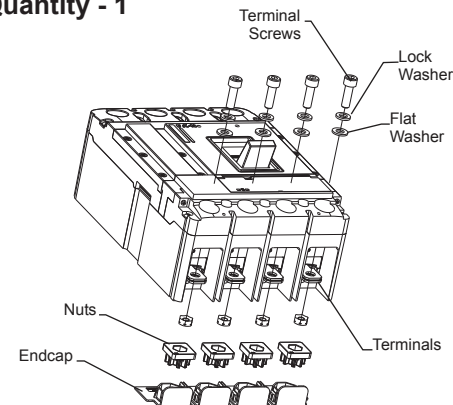

786689261788

Disconnect Voltage and Tripbreaker.  
To Install, slide Endcap and Nuts onto breaker base.  
Mount breaker to panel.  
Place Wire Terminations on top of breaker Terminals.  
Insert Terminal Screws through washers in order  
shown, and torque screws to 354 Lbs-in (40N-m).

IL012265EN H01

+

 



**Power  
Defense™**

**Circuit Breaker  
Accessory**

**For PDG3  
Frame**

**PDG3 - Screw Terminal/End Cap 600 amps, 4 Poles**  
**Cat. No. PDG3X4TS600**  
**Style No. 66A4562G13**  
**Quantity - 1**

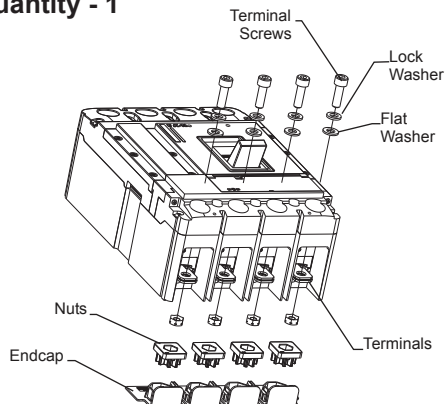

786689261788

Disconnect Voltage and Tripbreaker.  
To Install, slide Endcap and Nuts onto breaker base.  
Mount breaker to panel.  
Place Wire Terminations on top of breaker Terminals.  
Insert Terminal Screws through washers in order  
shown, and torque screws to 354 Lbs-in (40N-m).

IL012265EN H01

 



**Power  
Defense™**

**Circuit Breaker  
Accessory**

**For PDG3  
Frame**

**PDG3 - Screw Terminal/End Cap 600 amps, 4 Poles**  
**Cat. No. PDG3X4TS600**  
**Style No. 66A4562G13**  
**Quantity - 1**

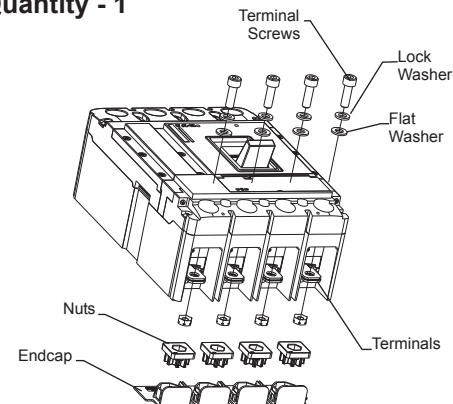

786689261788

Disconnect Voltage and Tripbreaker.  
To Install, slide Endcap and Nuts onto breaker base.  
Mount breaker to panel.  
Place Wire Terminations on top of breaker Terminals.  
Insert Terminal Screws through washers in order  
shown, and torque screws to 354 Lbs-in (40N-m).

IL012265EN H01