


# EG Frame Circuit Breaker Instruction Leaflet for Sliding Bar Interlock

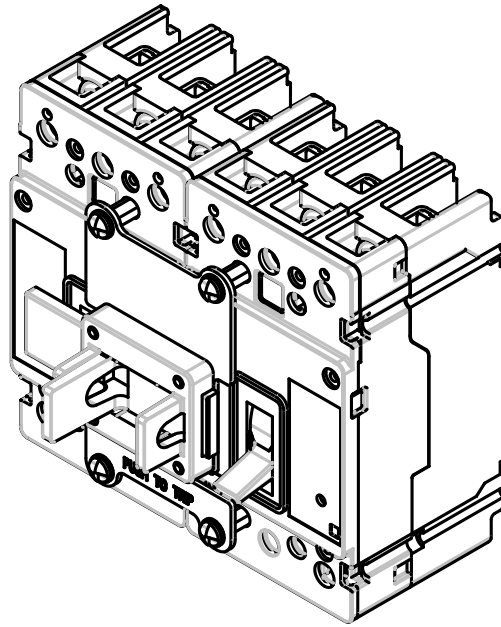

**Kit Includes:**

- 1 - Housing
- 1 - Slider
- 1 - Mounting Panel
- 4 - Flat Head Screws (#8) 0.164-32 x 0.500"
- 4 - Hex Standoffs
- 4 - One-way Screws (#10) 0.190-32 x 0.375"
- 4 - 0.190" Washers




*Powering Business Worldwide*

**⚠ WARNING**

**DO NOT ATTEMPT TO INSTALL OR PERFORM MAINTENANCE ON EQUIPMENT WHILE IT IS ENERGIZED. DEATH, SEVERE PERSONAL INJURY, OR SUBSTANTIAL PROPERTY DAMAGE CAN RESULT FROM CONTACT WITH ENERGIZED EQUIPMENT. ALWAYS VERIFY THAT NO VOLTAGE IS PRESENT BEFORE PROCEEDING WITH THE TASK, AND ALWAYS FOLLOW GENERALLY ACCEPTED SAFETY PROCEDURES.**


1. Drill and tap the circuit breaker mounting panel (see Figure 1). Mount the breakers to the panel using the screws supplied with the breaker and the four (4) hex standoffs supplied with the interlock kit.

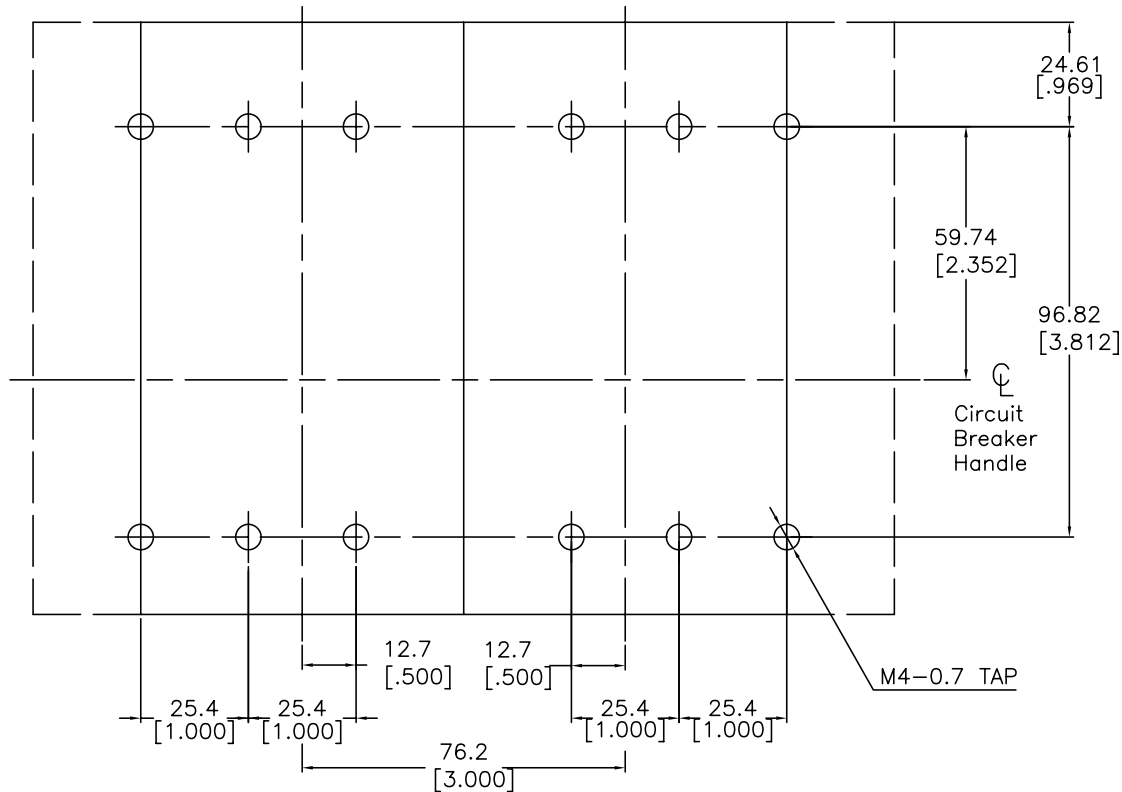


**Figure 1. Drilling Plan.**

2. Assemble the sliding bar interlock components by positioning the slider in the housing then inserting four (4) flat head screws from the back of panel through the holes to mount interlock assembly (see Figure 2).

**Note:** When the right side breaker is a 3-pole breaker, the slider must be cut off at the mark indicated (see Figure 3).

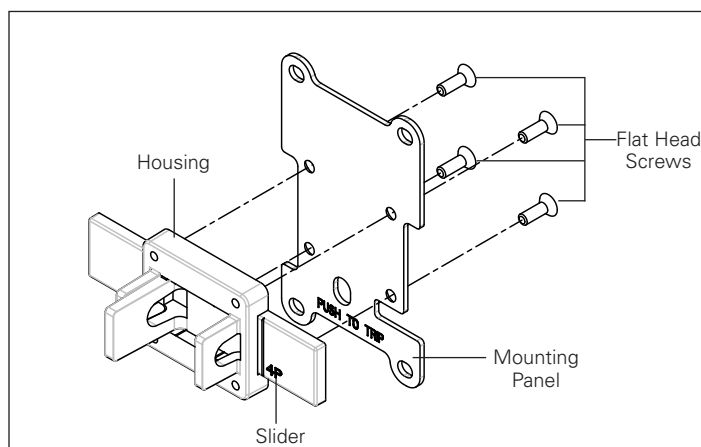

**Figure 2. Assembling the Sliding Bar Interlock Components.**

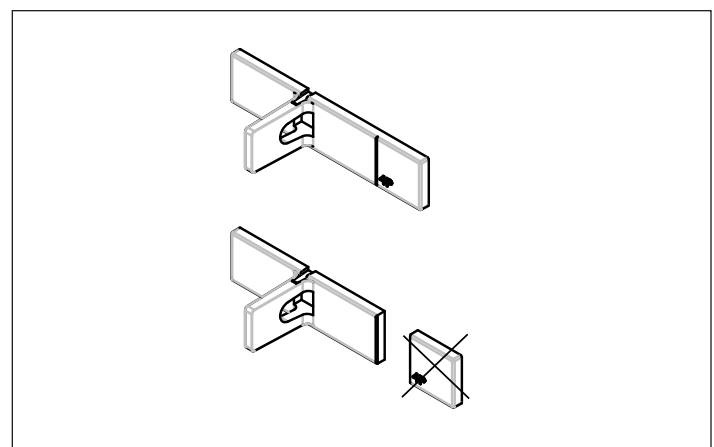

**Figure 3. Cut Off Mark for 3-Pole Installation.**

3. Mount the interlock assembly on the breakers using the four (4) one-way screws and washers supplied with the kit (see Figures 4 and 5).

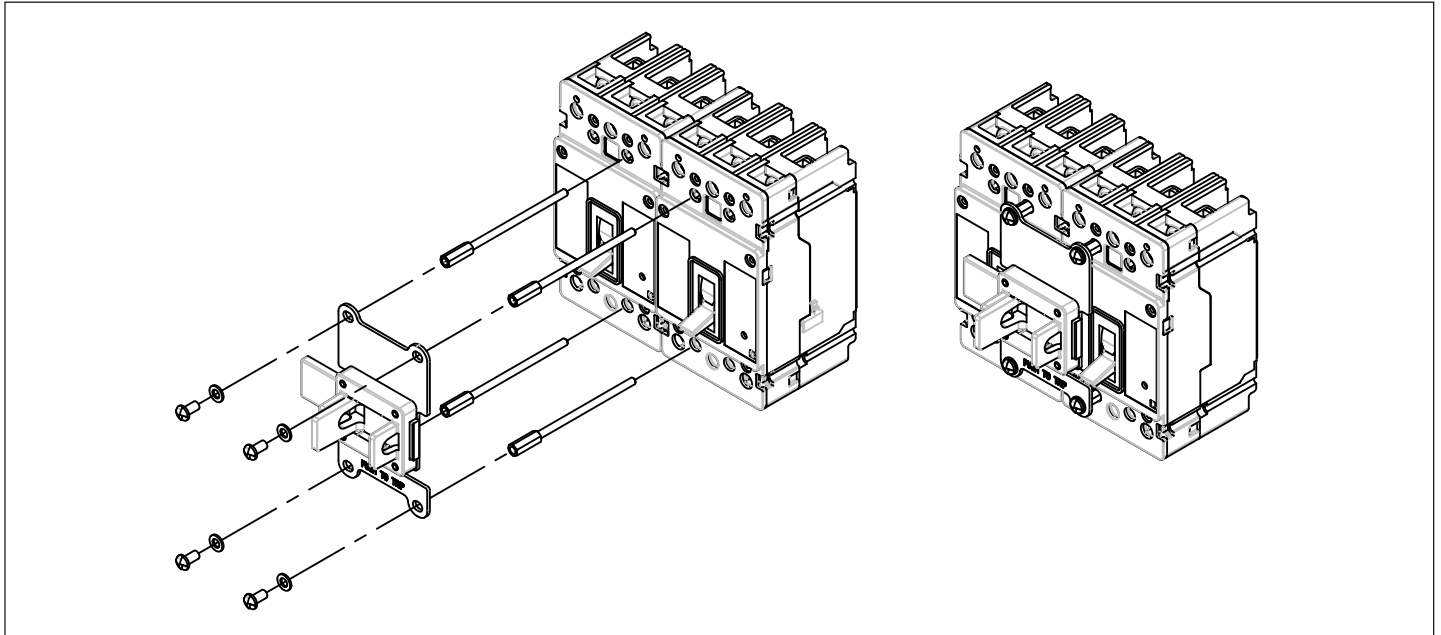


Figure 4. Mounting the Interlock Assembly to a 3-Pole Circuit Breaker.

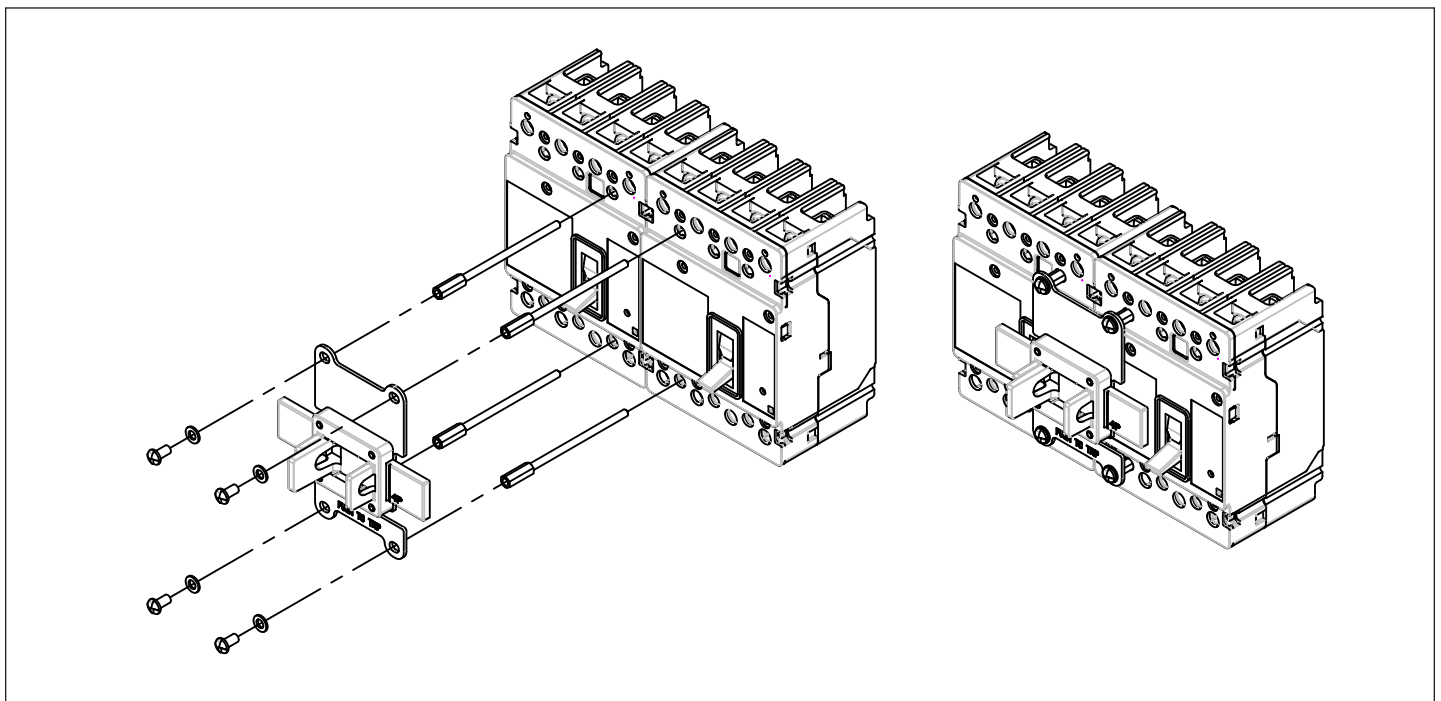


Figure 5. Mounting the Interlock Assembly to a 4-Pole Circuit Breaker.

The instructions for installation, testing, maintenance, or repair herein are provided for the use of the product in general commercial applications and may not be appropriate for use in nuclear applications. Additional instructions may be available upon specific request to replace, amend, or supplement these instructions to qualify them for use with the product in safety-related applications in a nuclear facility.

The information, recommendations, descriptions, and safety notations in this document are based on Eaton's experience and judgment with respect to Retrofitting of Power Breakers. This instructional literature is published solely for information purposes and should not be considered all-inclusive. If further information is required, you should consult an authorized Eaton sales representative.

The sale of the product shown in this literature is subject to the terms and conditions outlined in appropriate Eaton selling policies or other contractual agreement between the parties. This literature is not intended to and does not enlarge or add to any such contract. The sole source governing the rights and remedies of any purchaser of this equipment is the contract between the purchaser and Eaton.

**NO WARRANTIES, EXPRESSED OR IMPLIED, INCLUDING WARRANTIES OF FITNESS FOR A PARTICULAR PURPOSE OR MERCHANTABILITY, OR WARRANTIES ARISING FROM COURSE OF DEALING OR USAGE OF TRADE, ARE MADE REGARDING THE INFORMATION, RECOMMENDATIONS, AND DESCRIPTIONS CONTAINED HEREIN.** In no event will Eaton be responsible to the purchaser or user in contract, in tort (including negligence), strict liability or otherwise for any special, indirect, incidental or consequential damage or loss whatsoever, including but not limited to damage or loss of use of equipment, plant or power system, cost of capital, loss of power, additional expenses in the use of existing power facilities, or claims against the purchaser or user by its customers resulting from the use of the information, recommendations and description contained herein.

**Eaton**  
Electrical Sector  
1000 Eaton Boulevard  
Cleveland, OH 44122  
United States  
877-ETN-CARE (877-386-2273)  
Eaton.com

© 2014 Eaton  
All Rights Reserved  
Printed in USA  
Publication No. IL012017EN / TBG01126  
February 2014