User manual





DISCLAIMER OF WARRANTIES AND LIMITATION OF LIABILITY

The information, recommendations, descriptions, and safety notations in this document are based on Eaton's experience and judgment and may not cover all contingencies. If further information is required, an Eaton sales office should be consulted. Sale of the product shown in this literature is subject to the terms and conditions outlined in appropriate Eaton selling policies or other contractual agreement between Eaton and the purchaser.

THERE ARE NO UNDERSTANDINGS, AGREEMENTS, WARRANTIES, EXPRESSED OR IMPLIED, INCLUDING WARRANTIES OF FITNESS FOR A PARTICULAR PURPOSE OR MERCHANTABILITY, OTHER THAN THOSE SPECIFICALLY SET OUT IN ANY EXISTING CONTRACT BETWEEN THE PARTIES. ANY SUCH CONTRACT STATES THE ENTIRE OBLIGATION OF EATON. THE CONTENTS OF THIS DOCUMENT SHALL NOT BECOME PART OF OR MODIFY ANY CONTRACT BETWEEN THE PARTIES.

In no event will Eaton be responsible to the purchaser or user in contract, in tort (including negligence), strict liability, or otherwise for any special, indirect, incidental, or consequential damage or loss whatsoever, including but not limited to damage or loss of use of equipment, plant or power system, cost of capital, loss of power, additional expenses in the use of existing power facilities, or claims against the purchaser or user by its customers resulting from the use of the information, recommendations, and descriptions contained herein. The information contained in this manual is subject to change without notice.

Cover Photo: Eaton PowerXL DX1 series drive

Support services

Support services

The goal of Eaton is to ensure your greatest possible satisfaction with the operation of our products. We are dedicated to providing fast, friendly, and accurate assistance. That is why we offer you so many ways to get the support you need. Whether it is by phone, fax, or email, you can access Eaton's support information 24 hours a day, seven days a week.

Our wide range of services is listed below.

You should contact your local distributor for product pricing, availability, ordering, expediting, and repairs.

Website

Use the Eaton Website to find product information. You can also find information on local distributors or Eaton's sales offices.

Website address

www.eaton.com/drives

EatonCare customer support center

Call the EatonCare Support Center if you need assistance with placing an order, stock availability or proof of shipment, expediting an existing order, emergency shipments, product price information, returns other than warranty returns, and information on local distributors or sales offices.

Voice: 877-ETN-CARE (386-2273) (8:00 a.m.-6:00 p.m. EST) After-Hours Emergency: 800-543-7038 (6:00 p.m.-8:00 a.m. EST)

Drives technical resource center

Voice: 877-ETN-CARE (386-2273) option 2, option 6 (8:00 a.m.-5:00 p.m. Central Time U.S. [UTC -6])

email: TRCDrives@Eaton.com

For customers in Europe, contact

For service and support, please contact your local sales organisation.

Contact details: Eaton.com/contacts Service page: Eaton.com/aftersales PowerXL DX1 series option cards

Table of contents

SAFET	Υ	VIII
E	Before commencing the installation	viii
	Definitions and symbols	ix
H	Hazardous high voltage	ix
V	Varnings and cautions	ix
N	Motor and equipment safety	xii
POWEF	RXL DX1 SERIES OVERVIEW	1
H	How to use this manual	1
F	Receiving and inspection	1
F	Real time clock battery activation	1
F	Rating label	2
	Option card slots	3
	Option board summary	3
	Option card introduction	9
DXX-EX	XT-3DI3D01T - IO1—3 X DI, 3 X DO, 1 X THERMISTOR,	
	/EXT OPTION CARD	
	Description	
	Digital inputs	
	Digital outputs	
	hermistor input	
I	O1 board parameters	19
DXX-E	XT-1AI2A0 - IO2—1 X AI, 2 X AO OPTION CARD	20
	Description	
I.	O2 board parameters	22
	XT-3R0 - IO3-3 X RELAY DRY CONTACT	
-	1NO/NC) OPTION CARD	
	Description	
Į(O3 board parameters	25
	XT-THER1 - IO4-3 X PT100 RTD THERMISTOR	
	OPTION CARD	
	Description	
I.	O4 board parameters	29
	XT-6DI - IO5—6 X DI 120 VAC / 240 VAC INPUT OPTION CARD	
	Description	
- 10	O5 board parameters	32

PowerXL DX1 series option cards

List of figures

Figure 1. F	RTC battery connection	.1
Figure 2. I	Rating label	.2
Figure 3. I	PowerXL variable frequency drive	.3
Figure 4. I	Maximum loads on +24 V/EXT +24 V output	.7
Figure 5. I	Digital input signal conversion—positive logic	.7
Figure 6. I	Digital input signal conversion—negative logic	.7
Figure 7. C	Control cable grounding	.9
Figure 8. I	O1 board layout	11
Figure 9. I	O1 board wire layout	12
Figure 10.	PowerXL DX1 digital input signal programming (via membrane keypad)	13
Figure 11.	PowerXL DX1 digital input signal programming (with touchscreen keypad)	14
Figure 12.	PowerXL DX1 digital output signal programming (via membrane keypad)	15
Figure 13.	PowerXL DX1 digital output signal programming (via touchscreen keypad)	16
Figure 14.	PowerXL DX1 thermistor parameter setting (via membrane keypad))	17
Figure 15.	PowerXL DX1 thermistor parameter setting (via touchscreen keypad)	18
Figure 16.	IO2 board layout	21
Figure 17.	IO2 board wire layout	21
Figure 18.	PowerXL DX1 IO2 parameter setting (via membrane keypad)	22
Figure 19.	PowerXL DX1 IO2 parameter structure	22
Figure 20.	IO3 board layout	24
Figure 21.	IO3 board wire layout	25
Figure 22.	PowerXL DX1 IO3 board parameter setting (via membrane keypad)	25
Figure 23.	PowerXL DX1 IO3 board parameter setting (via touchscreen keypad)	26
Figure 24.	IO4 board layout	27
Figure 25.	IO4 board wire layout—options for wiring the sensor	28
Figure 26.	PowerXL DX1 IO4 Thermistor board parameter setting (via membrane keypad)	29
	PowerXL DX1 IO4 Thermistor board parameter setting (via touchscreen keypad)	29
Figure 28.	IO5 board layout	31
Figure 29.	IO5 board wire layout	32
Figure 30.	PowerXL DX1 IO5 board parameter setting (via membrane keypad)	32
Figure 31.	PowerXL DX1 IO5 board parameter setting (via touch screen keypad) \dots	33
Figure 32.	PowerXL DX1 IO5 input board parameter setting (via membrane keypad)	34
Figure 33.	PowerXL DX1 IO5 input board parameter setting (via touchscreen keypad)	34

List of tables

Table 1. Common abbreviations	1
Table 2. PowerXL DX1 series	4
Table 3. Wire sizes	8
Table 4. Control wiring requirements	9
Table 5. I/O card input/output	9
Table 6. Digital input/output ratings	10
Table 7. 24 V rating	10
Table 8. IO1 control terminals	12
Table 9. Thermistor input configuration	17
Table 10. IO1 board parameters	19
Table 11. IO2 analog ratings	20
Table 12. IO2 board terminals	21
Table 13. IO2 board parameter setting (via touchscreen keypad)	22
Table 14. IO3 board rating	24
Table 15. IO3 board terminals	25
Table 16. IO3 Parameters	26
Table 17. IO4 Thermistor ohm values	27
Table 18. IO4 board rating	27
Table 19. IO4 terminal layout	28
Table 20. IO4 parameters	30
Table 21. IO5 rating	31
Table 22. IO5 terminal layout	32
Table 23. IO5 parameters	33

Safety



Warning! Dangerous electrical voltage!

Before commencing the installation

- · Disconnect the power supply of the device
- · Ensure that devices cannot be accidentally restarted
- · Verify isolation from the supply
- · Earth and short circuit the device
- · Cover or enclose any adjacent live components
- Only suitably qualified personnel in accordance with EN 50110-1/-2 (VDE 0105 Part 100) may work on this device/system
- Before installation and before touching the device ensure that you are free of electrostatic charge
- The functional earth (FE, PES) must be connected to the protective earth (PE) or the potential equalization.
 The system installer is responsible for implementing this connection
- Connecting cables and signal lines should be installed so that inductive or capacitive interference does not impair the automation functions
- Install automation devices and related operating elements in such a way that they are well protected against unintentional operation
- Suitable safety hardware and software measures should be implemented for the I/O interface so that an open circuit on the signal side does not result in undefined states in the automation devices
- Ensure a reliable electrical isolation of the extra-low voltage of the 24V supply. Only use power supply units complying with IEC 60364-4-41 (VDE 0100 Part 410) or HD384.4.41 S2
- Deviations of the input voltage from the rated value must not exceed the tolerance limits given in the specifications, otherwise this may cause malfunction and dangerous operation
- Emergency stop devices complying with IEC/EN 60204-1 must be effective in all operating modes of the automation devices. Unlatching the emergency-stop devices must not cause a restart
- Devices that are designed for mounting in housings or control cabinets must only be operated and controlled after they have been installed and with the housing closed. Desktop or portable units must only be operated and controlled in enclosed housings
- Measures should be taken to ensure the proper restart of programs interrupted after a voltage DIP or failure.
 This should not cause dangerous operating states even for a short time. If necessary, emergency-stop devices should be implemented

- Wherever faults in the automation system may cause injury or material damage, external measures must be implemented to ensure a safe operating state in the event of a fault or malfunction (for example, by means of separate limit switches, mechanical interlocks, and so on)
- Depending on their degree of protection, adjustable frequency drives may contain live bright metal parts, moving or rotating components, or hot surfaces during and immediately after operation
- Removal of the required covers, improper installation, or incorrect operation of motor or adjustable frequency drive may cause the failure of the device and may lead to serious injury or damage
- The applicable national accident prevention and safety regulations apply to all work carried out on live adjustable frequency drives
- The electrical installation must be carried out in accordance with the relevant regulations (for example, with regard to cable cross sections, fuses, PE)
- Transport, installation, commissioning, and maintenance work must be carried out only by qualified personnel (IEC 60364, HD 384 and national occupational safety regulations)
- Installations containing adjustable frequency drives must be provided with additional monitoring and protective devices in accordance with the applicable safety regulations. Modifications to the adjustable frequency drives using the operating software are permitted
- All covers and doors must be kept closed during operation
- To reduce hazards for people or equipment, the user must include in the machine design measures that restrict the consequences of a malfunction or failure of the drive (increased motor speed or sudden standstill of motor). These measures include:
 - Other independent devices for monitoring safety-related variables (speed, travel, end positions, and so on)
 - Electrical or non-electrical system-wide measures (electrical or mechanical interlocks)
 - Never touch live parts or cable connections of the adjustable frequency drive after it has been disconnected from the power supply. Due to the charge in the capacitors, these parts may still be live after disconnection. Fit appropriate warning signs

Read this manual thoroughly and make sure you understand the procedures before you attempt to install, set up, operate or carry out any maintenance work on this PowerXL Adjustable Frequency Drive.

Definitions and symbols

A

WARNING

This symbol indicates high voltage. It calls your attention to items or operations that could be dangerous to you and other persons operating this equipment. Read the message and follow the instructions carefully.



This symbol is the "Safety Alert Symbol." It occurs with either of two signal words: CAUTION or WARNING, as described below.



WARNING

Indicates a potentially hazardous situation which, if not avoided, can result in serious injury or death.



CAUTION

Indicates a potentially hazardous situation which, if not avoided, can result in minor to moderate injury, or serious damage to the product. The situation described in the CAUTION may, if not avoided, lead to serious results. Important safety measures are described in CAUTION (as well as WARNING).

Hazardous High Voltage



WARNING

Motor control equipment and electronic controllers are connected to hazardous line voltages. When servicing drives and electronic controllers, there may be exposed components with housings or protrusions at or above line potential. Extreme care should be taken to protect against shock.

- Stand on an insulating pad and make it a habit to use only one hand when checking components
- Always work with another person in case an emergency occurs
- Disconnect power before checking controllers or performing maintenance
- · Be sure equipment is properly earthed
- Wear safety glasses whenever working on electronic controllers or rotating machinery

A

WARNING

The components in the drive's power section remain energized after the supply voltage has been switched off. After disconnecting the supply, wait at least five minutes before removing the cover to allow the intermediate circuit capacitors to discharge.

Pay attention to hazard warnings!





DANGER 5 MIN

A

WARNING

Electric shock hazard—risk of injuries! Carry out wiring work only if the unit is de-energized.



WARNING

Do not perform any modifications on the AC drive when it is connected to mains.

Warnings and Cautions



WARNING

Be sure to ground the unit following the instructions in this manual. Ungrounded units may cause electric shock and/or fire.

A

WARNING

This equipment should only be installed, adjusted, and serviced by qualified electrical maintenance personnel familiar with the construction and operation of this type of equipment and the hazards involved. Failure to observe this precaution could result in death or severe injury.



WARNING

Components within the drive are live when it is connected to power. Contact with this voltage is extremely dangerous and may cause death or severe injury.



WARNING

Line terminals (L1, L2, L3), motor terminals (U, V, W) and the DC link/brake resistor terminals (DC-, DC+/R+, R-) are live when the drive is connected to power, even if the motor is not running. Contact with this voltage is extremely dangerous and may cause death or severe injury.

A

WARNING

Even though the control I/O-terminals are isolated from line voltage, the relay outputs and other I/O-terminals may have dangerous voltage present even when the drive is disconnected from power. Contact with this voltage is extremely dangerous and may cause death or severe injury.



WARNING

This equipment has a large capacitive leakage current during operation, which can cause enclosure parts to be above ground potential. Proper grounding, as described in this manual, is required. Failure to observe this precaution could result in death or severe injury.



WARNING

Before applying power to this drive, make sure that the front and cable covers are closed and fastened to prevent exposure to potential electrical fault conditions. Failure to observe this precaution could result in death or severe injury.



WARNING

An upstream disconnect/protective device must be provided as required by the National Electric Code® (NEC®). Failure to follow this precaution may result in death or severe injury.



WARNING

This drive can cause a DC current in the protective earthing conductor. Where a residual current-operated protective (RCD) or monitoring (RCM) device is used for protection in case of direct or indirect contact, only an RCD or RCM of Type B is allowed on the supply side of this product.



WARNING

Carry out wiring work only after the drive has been correctly mounted and secured.



WARNING

Before opening the drive covers:

- Disconnect all power to the drive, including external control power that may be present
- Wait a minimum of five minutes after all the lights on the keypad are off. This allows time for the DC bus capacitors to discharge
- A hazard voltage may still remain in the DC bus capacitors even if the power has been turned off.
 Confirm that the capacitors have fully discharged by measuring their voltage using a multimeter set to measure the DC voltage

Failure to follow these precautions may cause death or severe injury.



WARNING

The opening of the branch-circuit protective device may be an indication that a fault current has been interrupted. To reduce the risk of fire or electric shock, current-carrying parts and other components of the controller should be examined and replaced if damaged. If burnout of the current element of an overload relay occurs, the complete overload relay must be replaced.

A

WARNING

Operation of this equipment requires detailed installation and operation instructions provided in the Installation/Operation manual intended for use with this product. This information is provided on the CD-ROM, floppy diskette(s) or other storage device included in the container this device was packaged in. it should be retained with this device at all times.



WARNING

Before servicing the drive:

- Disconnect all power to the drive, including external control power that may be present
- Place a "DO NOTTURN ON" label on the disconnect device
- · Lock the disconnect device in the open position

Failure to follow these instructions will result in death or serious injury.



WARNING

The drive outputs (U, V, W) must not be connected to the input voltage or the utility line power as severe damage to the device may occur and there may be a risk of fire.



WARNING

The heat sink and/or outer enclosure may reach a high temperature.

Pay attention to hazard warnings!



Hot Surface-Risk of Burn. DO NOT TOUCH!



CAUTION

Any electrical or mechanical modification to this drive without prior written consent of Eaton will void all warranties and may result in a safety hazard in addition and voiding of the UL® listing.

A

CAUTION

Install this drive on flame-resistant material such as a steel plate to reduce the risk of fire.



CAUTION

Install this drive on a perpendicular surface that is able to support the weight of the drive and is not subject to vibration, to lessen the risk of the drive falling and being damaged and/or causing personal injury.



CAUTION

Prevent foreign material such as wire clippings or metal shavings from entering the drive enclosure, as this may cause arcing damage and fire.



CAUTION

Install this drive in a well-ventilated room that is not subject to temperature extremes, high humidity, or condensation, and avoid locations that are directly exposed to sunlight, or have high concentrations of dust, corrosive gas, explosive gas, inflammable gas, grinding fluid mist, etc. Improper installation may result in a fire hazard.



CAUTION

When selecting the cable cross-section, take the voltage drop under load conditions into account. The consideration of other standards is the responsibility of the user.

The user is responsible for compliance with all international and national electrical standards in force concerning protective grounding of all equipment.



CAUTION

The specified minimum PE conductor cross-sections in this manual must be maintained.

Touch current in this equipment exceeds 3.5 mA (AC). The minimum size of the protective earthing conductor shall comply with the requirements of EN 61800-5-1 and/or the local safety regulations.



CAUTION

Touch currents in this frequency inverter are greater than 3.5 mA (AC). According to product standard IEC/EN 61800-5-1, an additional equipment grounding conductor of the same cross-sectional area as the original protective earthing conductor must be connected, or the cross-section of the equipment grounding conductor must be at least 10 mm2 Cu. Drive requires that only copper conductor should be used.



CAUTION

Debounced inputs may not be used in the safety circuit diagram. Residual current circuit breakers (RCD) are only to be installed between the AC power supply network and the drive.

A

CAUTION

Debounced inputs may not be used in the safety circuit diagram. If you are connecting multiple motors on one drive, you must design the contactors for the individual motors according to utilization category AC-3.

Selecting the motor contactor is done according to the rated operational current of the motor to be connected.



CAUTION

Debounced inputs may not be used in the safety circuit diagram. A changeover between the drive and the input supply must take place in a voltage-free state.



CAUTION

Debounced inputs may not be used in the safety circuit diagram. Fire hazard!

Only use cables, protective switches, and contactors that feature the indicated permissible nominal current value.



CAUTION

Before connecting the drive to AC mains make sure that the EMC protection class settings of the drive are appropriately made according to instructions in this manual.

- If the drive is to be used in a floating distribution network, remove screws at MOV and EMC
- Disconnect the internal EMC filter when installing the drive on an IT system (an ungrounded power system or a high-resistance-grounded [over 30 ohm] power system), otherwise the system will be connected to ground potential through the EMC filter capacitors. This may cause danger, or damage the drive
- Disconnect the internal EMC filter when installing the drive on a corner grounded TN system, otherwise the drive will be damaged

Note: When the internal EMC filter is disconnected, the drive might be not EMC compatible.

 Do not attempt to install or remove the MOV or EMC screws while power is applied to the drive's input terminals

Motor and equipment safety



CAUTION

Do not perform any meggar or voltage withstand tests on any part of the drive or its components. Improper testing may result in damage.



CAUTION

Prior to any tests or measurements of the motor or the motor cable, disconnect the motor cable at the drive output terminals (U, V, W) to avoid damaging the drive during motor or cable testing.



CAUTION

Do not touch any components on the circuit boards. Static voltage discharge may damage the components.



CAUTION

Before starting the motor, check that the motor is mounted properly and aligned with the driven equipment. Ensure that starting the motor will not cause personal injury or damage equipment connected to the motor.



CAUTION

Set the maximum motor speed (frequency) in the drive according to the requirements of the motor and the equipment connected to it. Incorrect maximum frequency settings can cause motor or equipment damage and personal injury.



CAUTION

Before reversing the motor rotation direction, ensure that this will not cause personal injury or equipment damage.



CAUTION

Make sure that no power correction capacitors are connected to the drive output or the motor terminals to prevent drive malfunction and potential damage.

A

CAUTION

Make sure that the drive output terminals (U, V, W) are not connected to the utility line power as severe damage to the drive may occur.



CAUTION

When the control terminals of two or more drive units are connected in parallel, the auxiliary voltage for these control connections must be taken from a single source which can either be one of the units or an external supply.



CAUTION

The drive will start up automatically after an input voltage interruption if the external run command is on.



CAUTION

Do not control the motor with the disconnecting device (disconnecting means); instead, use the control panel start and stop keys and, or commands via the I/O board of the drive. The maximum allowed number of charging cycles of the DC capacitors (i.e., power-ups by applying power) is five in ten minutes.



CAUTION

Improper drive operation:

- If the drive is not turned on for a long period, the performance of its electrolytic capacitors will be reduced
- If it is stopped for a prolonged period, turn the drive on at least every six months for at least 5 hours to restore the performance of the capacitors, and then check its operation. It is recommended that the drive is not connected directly to the line voltage. The voltage should be increased gradually using an adjustable AC source

Failure to follow these instructions can result in injury and/or equipment damage.

For more technical information, contact the factory or your local Eaton sales representative.

PowerXL DX1 series overview

This chapter describes the purpose and contents of this manual, the receiving inspection recommendations and the PowerXL DX1 series open drive catalog numbering system.

How to use this manual

The purpose of this manual is to provide you with information necessary to install, set and customize parameters, start up, troubleshoot and maintain the Eaton PowerXL DX1 series variable frequency drive (VFD). To provide for safe installation and operation of the equipment, read the safety guidelines at the beginning of this manual and follow the procedures outlined in the following chapters before connecting power to the PowerXL DX1 series VFD. Keep this operating manual handy and distribute to all users, technicians and maintenance personnel for reference.

Receiving and inspection

The PowerXL DX1 series VFD has met a stringent series of factory quality requirements before shipment. It is possible that packaging or equipment damage may have occurred during shipment. After receiving your PowerXL DX1 series VFD, please check for the following:

Check to make sure that the package includes the Instruction Leaflet, Quick Start Guide and accessory packet. The accessory packet includes:

- · Rubber grommets
- · Control cable grounding clamps
- · Additional grounding screw

Inspect the unit to ensure it was not damaged during shipment.

Make sure that the part number indicated on the nameplate corresponds with the catalog number on your order.

If shipping damage has occurred, please contact and file a claim with the carrier involved immediately.

If the delivery does not correspond to your order, please contact your Eaton Electrical representative.


Note: Do not destroy the packing. The template printed on the protective cardboard can be used for marking the mounting points of the PowerXL VFD on the wall or in a cabinet.

Real time clock battery activation

To activate the real time clock (RTC) functionality in the PowerXL DX1 series VFD, the RTC battery (already mounted in the drive) must be connected to the control board.

Simply remove the primary drive cover, locate the RTC battery directly below the keypad, and connect the white 2-wire connector to the receptacle on the control board.

Figure 1. RTC battery connection

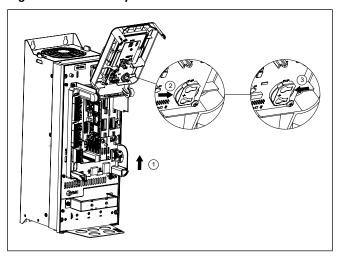

Step 1: Open the control module cover.

Step 2: Remove the insulation.

Table 1. Common abbreviations

Definition
Constant torque with high overload rating (150%)
Variable torque with low overload rating (110%)
High Overload (150%)
Low Overload (110%)
Variable Frequency Drive

1

Rating label

Figure 2. Rating label

230 V Rating label-DX1



480 V Rating label-DX1



575 V Rating label-DX1



230 V Carton label-DX1



480 V Carton label-DX1




575 V Carton label-DX1



Option card slots

The control board is located inside the control unit of the PowerXL DX1 series drive. There are four slots, labeled A, B, C and D, on the control board. When the PowerXL DX1 series drive is assembled at the factory, no option cards are installed in slots A, B, C and D.

Figure 3. Power XL variable frequency drive

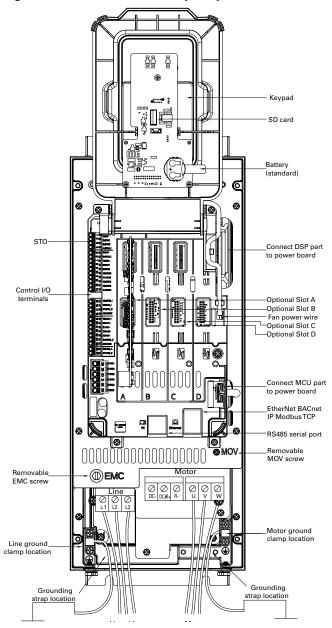

Option board summary

There are a total of five I/O option cards available on the PowerXL that can be placed in any of slot A, B, C and D.

- IO1 = 3 DI, 3 DO, 1 thermistor, 24 Vdc/EXT
- IO2 = 1 AI, 2 AO (isolated to control board)
- IO3 = 3 Relay Dry Contact (2 NO and 1 NO/NC)
- IO4 = Qty. 3 PT100 RTD input
- IO5 = 6 DI 120/240 Vac Input

Option card slot compatibility

The table below shows the option cards and their slot compatibility.

Option cards	Description	Slot number
DXX-EXT-3DI3D01T	IO1—3 x DI, 3 x DO, 1 x Thermistor, 24 Vdc/EXT option card	Slot A/B/C/D
DXX-EXT-1AI2A0	IO2—1 x AI, 2 x AO option card	Slot A/B/C/D
DXX-EXT-3R0	IO3—3 x Relay dry contact (2NO + 1NO/NC) option card	Slot A/B/C/D
DXX-EXT-THER1	IO4—3 x PT100 RTD thermistor input option card	Slot A/B/C/D
DXX-EXT-6DI	IO5—6 x DI 120Vac / 240 Vac input option card	Slot A/B/C/D
DXX-EXT-ABZ	PowerXL DX1 ABZ Encoder Card	Slot A
DXX-EXT-FS	PowerXL DX1 Functional Safety Card	Slot B
DXX-NET-EIP	PowerXL DX1 Dual-Port EIP Card	Slot D
DXX-NET-PROFINET	PowerXL DX1 Dual-Port ProfiNet Card	Slot D
DXX-EXT-OF	PowerXL DX1 Fiber Optic Card	Slot C

An encoder option card shall only be installed in **Slot A** of PowerXL DX1 drive.

PowerXL DX1 series overview

Technical data

Table 2. PowerXL DX1 series

Attribute	Description	Specification			
Input ratings	Input voltage Uin	3-phase, 208 V to 240 V, 380 V to 500 V, 525 V to 600 V, -15 to 10%			
	Input frequency	50 Hz to 60 Hz (variation up to 45 Hz to 66 Hz)			
	Connection to power	Once per minute or less			
	Starting delay	3 s (FR1 and FR2), 4 s (FR3), 5 s (FR4), 6 s (FR5 and FR6)			
	Short-circuit withstand rating	100 kAIC (Fuses)			
Output ratings	Output voltage	0 to Uin			
	Continuous output current	IL: ambient temperature maximum 40 °C, up to 60 °C with derating			
	Overload current	IH: ambient temperature maximum 50 °C, up to 60 °C with derating			
	Initial output current	CT: 150% overload for 1 minute, 180% for 3 sec, 200% for 2 sec			
	Output frequency	VT: 110% overload for 1 minute, 150% for 3 sec			
	Frequency resolution	200% (2 s / 20 s) based of the drives rated nameplate IH current rating.			
Control characteristics	Control methods	Frequency control (0) Speed control (1) PM Control 1 (2) PM Control 2 (3) Open loop speed control (5) Open loop torque control (6) Closed speed control (7) Closed torque control (8)			
	Switching frequency	230 V Range: FR1-4: 1 kHz to 16 kHz FR5: 1 kHz to 12 kHz FR6: 1 kHz to 10 kHz 480 V Range: FR1-3: 1 kHz to 16 kHz FR4/5: 1 kHz to 16 kHz FR4/5: 1 kHz to 10 kHz 230 V / 480 V Defaults: FR1-3: 4 kHz FR6: 1 kHz to 10 kHz 230 V / 480 V Defaults: FR1-5: 3.6 kHz FR6: 2 kHz 600 V Range: FR1-6: 1 kHz to 6 kHz 600 V Defaults: FR1-6: 1.5 kHz Automatic switching frequency derating in case of overload.			
	Frequency reference	Analog input: resolution 0.1% (10-bit), accuracy +1% Analog output: resolution 0.1% (10-bit), accuracy +1% Panel reference: resolution 0.01 Hz			
	Field weakening point	8 Hz to 400 Hz			
	Acceleration time	0.1 s to 3000 s			
	Deceleration time	0.1 s to 3000 s			
	Braking torque	DC brake: 30% x Motor Rated Torque (Tn) (without brake chopper) Dynamic braking (with optional brake chopper using an external brake resistor): 100% continuous maximum rating			
Ambient conditions	Ambient operating temperature	−10 °C (no frost) to +50 °C, up to +60 °C with derating (CT) −10 °C (no frost) to +40 °C, up to +60 °C with derating (VT)			
	Storage temperature	−40 °C to +70 °C			
	Relative humidity	0-95% RH, noncondensing, non-corrosive			

Table 2. PowerXL DX1 series, continued

	Specification	Description	Attribute
	100% load capacity (no derating) up to 3280 ft (1000 m); 1% derating for each 328 ft (100 m) above 3280 ft (1000 m); up to 6562 ft (2000 m).	Altitude	Ambient conditions, continued
	EN 61800-5-1/ EN 60068-2-6 10-150 Hz Displacement amplitude: 0.075 mm (peak) at 10 Hz to 57 Hz	Vibration:	
	Maximum acceleration amplitude: 1g at 57 Hz to 150 Hz ISTA 1 A / EN 60068-2-27 Operating: maximum 10 g, 11 ms	Shock:	
	Overvoltage Category III	Overvoltage	
	Pollution Degree 2	Pollution degree	
	IP21/Type 1 IP54/Type 12	Enclosure class	
rial location, and	Fulfills IEC/EN 61800-3(2017), 1st and 2nd environment. Fulfills IEC/EN 61800-3(2022), Residential location, Commercial and light-industrial local Industrial location.	Immunity	
	230V FR1: 186,837 hours 230V FR2: 196,257 hours 230V FR3: 160,898 hours 230V FR4: 178,913 hours 230V FR5: 155,106 hours 230V FR6: 170,557 hours 480V FR1: 228,992 hours 480V FR3: 185,916 hours 480V FR3: 185,916 hours 480V FR4: 179,937 hours 480V FR6: 173,303 hours 575V FR1: 214,914 hours 575V FR2: 209,985 hours 575V FR3: 171,579 hours 575V FR4: 170,461 hours 575V FR6: 154,297 hours 575V FR6: 171,701 hours	MTBF	
	FR1: 46.4 dB FR2: 60 dB FR3: 64.4 dB FR4: 66.4 dB FR5: 66 dB FR6: 70 dB	Noise (Sound Pressure Level)	
	UL 61800-5-1, CSA C22.2 No. 274-17, IEC/EN 61800-5-1	UL/cUL and LVD	tandards
	IEC/EN 61800-3 Second environment and Industrial location 230/480 V Series: Category C2 575 V Series: Category C3	EMC	
	SIL 2 / SIL CL 2 acc. to IEC/EN 61800-5-2, IEC/EN 61508, IEC/EN 62061 Cat.3 / PL d acc. to EN ISO 13849-1	STO STO	
	IEC/EN 60204-1	MD	
	EN IEC 63000	RoHS	
	IE2 acc. to IEC/EN 61800-9-2, (90;100) losses are marked on rating labels Other details can be found at: Eaton.com/EcoDesign-VFD	Eco-Design	
	IEC/EN 61800-3 Second environment and Industrial location IEC/EN 61000-4-2,4 kV and 6 kV CD or 8 kV AD, Criterion B	Electrostatic discharge	
	IEC/EN 61800-3 Second environment and Industrial location IEC/EN 61000-4-4, 2 kV/5 kHz and 100 kHz, Criterion B	Fast transient burst	
	UL, cUL, CE, UKCA, RoHS, UL Functional Safety	Approvals	
	Onboard: Modbus® TCP, Modbus RTU		Fieldbus connections
	IE2 acc. to IEC/EN 61800-9-2, (90;100) losses are marked on rating labels Other details can be found at: Eaton.com/EcoDesign-VFD IEC/EN 61800-3 Second environment and Industrial location IEC/EN 61000-4-2,4 kV and 6 kV CD or 8 kV AD, Criterion B IEC/EN 61800-3 Second environment and Industrial location IEC/EN 61000-4-4, 2 kV/5 kHz and 100 kHz, Criterion B UL, cUL, CE, UKCA, RoHS, UL Functional Safety	RoHS Eco-Design Electrostatic discharge Fast transient burst	Fieldbus connections

PowerXL DX1 series overview

Table 2. PowerXL DX1 series, continued

Attribute	Description	Specification
Safety/protections	Overvoltage protection	Yes
	Overvoltage trip limit	230 V drives: 450 V 480 V drives: 900 V 600 V drives: 1100 V
	Undervoltage protection	Yes
	Undervoltage trip limit	230 V drives: 190 V 480 V drives: 350 V 600 V drives: 500 V
	Earth fault protection	Yes, Default: 15% Motor FLA Min: 0% Motor FLA Max: 30% Motor FLA
	Input phase supervision	Yes
	Motor phase supervision	Yes
	Overcurrent protection	Yes
	Unit overtemperature protection	Yes
	Motor overload protection	Yes
	Motor stall protection	Yes
	Motor underload protection	Yes
Efficiency	Drive efficiency ratings	230V drives: 97% approximately 480/600V drives: 98% approximately

Isolation

The control connections are isolated from the utility potential, and shipped with the I/O ground connected directly to the frame of the PowerXL DX1 series drive. Digital inputs and relay outputs are isolated from the I/O ground via optical isolation. For digital input arrangements, see "Digital Input Signal Conversion." Analog input and output signals are galvanically isolated form the main control board but not independent of the other channels.

Analog inputs (mA/V)

The analog inputs of the I/O boards can be used as either current inputs or voltage inputs (see the detailed description of each board). The signal type is selected with a DIP switch on the board. If either voltage or current analog input is used, you will need to define the range with the analog option cards parameters. The factory default values for the analog signal selection are given in the description of the board. For detailed information, see the description of the board of interest.

Analog outputs (mA/V)

Most of the expander boards with analog output can be configured for a current or voltage output with a DIP switch. Some boards only provide an analog current output. For detailed information, see the description of the board of interest.

Power supply (+24 Vdc Out/+24 Vdc In)

The power supply can only exist on IO1 board, which includes a 24 Vdc in and a 24 Vdc out.


The 24 Vdc out is used to power up external equipment, such as encoders and auxiliary relays. Note that the total combined load on all available 24 Vdc out terminals must not exceed 250 mA. The maximum load on the 24 Vdc out per board is 150 mA.

The 24 Vdc in can be connected to an external +24 V power supply to power up the base board and expander boards. If an external power supply is connected to the 24 Vdc in, the base board and expander boards remain live even if the utility power is lost.

Requirements for an external 24 V power supply:

- Output voltage +24 Vdc ±10%, max. ripple voltage 100 mV rms
- Maximum current 1A
- 1A external fuse (no internal short-circuit protection is provided on the base board for the external 24 V input)

Figure 4. Maximum loads on +24V/EXT +24V output

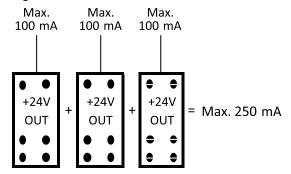

Digital input signal conversion

The active signal level depends on which potential the common input is connected to. The alternatives are +24 V or Ground (0 V).

The 24-volt control voltage and the ground for the digital inputs and the common input can be from either the internal +24 V supply or an external source.

Two typical input signal connection examples are shown below, which can be done with external +24 V or internal +24 V.

Figure 5. Digital input signal conversion—positive logic


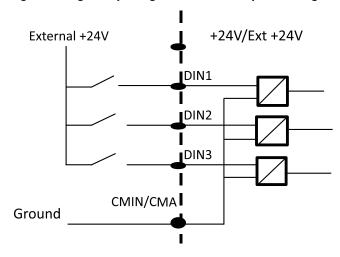


Figure 6. Digital input signal conversion-negative logic

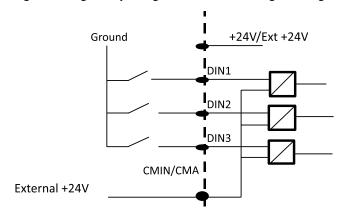

You can also use the positive and negative logic connections with the internal +24 V supply.

PowerXL DX1 series overview

Installing PowerXL option card

Remove utility line and control power from the PowerXL DX1 series drive. Install the option card in one of the slots available on the control board. To insert and remove the board, hold it in a horizontally straight position to avoid twisting the connector pins.

Step 1: Flip the B-cover up and stop at a specific angle (120° or 150°).

Step 2: Insert the option cards to the corresponding slots according to **Table 5**. Make sure the option cards have been inserted into the slots fully.

Step 3: Flip the B-cover down for snap fit with C-cover to fix the option cards firmly.

Verify the board fits tightly in the metal clamp and plastic groove. If the board seems to be difficult to install in the slot, you should confirm that you are using one of the allowed slots for the option board.

Note: Check that the DIP switch settings on the board correspond to your need.

Control wiring

Digital I/O and 24 Vdc can use Stranded Cu or Solid Cu wire as specified below. Analog signal PT100 must use shielded cables. Table 3 shows the wire sizes available.

Terminal torque

4.5 in-lb (0.5 Nm)

4.5 in-lb (0.5 Nm)

Table 3. Wire sizes

· · · · · · · · · · · · · · · · · · ·	Wire type	Wire size
	Solid Cu	12-28 AWG (0.2~2.5 mm ²)
3	Stranded Cu	12-30 AWG (0.2~2.5 mm ²)
B Cover C Cover		2

EMC directive

For the electrical equipment installed in the EMC, directive states that the equipment must not disturb the environment and must be immune to other electromagnetic disturbances in the environment. **Table 4** indicates the requirements for the control wiring to meet this directive.


Table 4. Control wiring requirements

Item	Directive			
Product	IEC 61800-2			
Safety	UL-61800-5-1, IEC/EN 61800-5-1			
EMC (at default	Immunity: EN/IEC 61800-3, 2nd environment			
settings)	Radiated emissions: EN/IEC 61800-3 (Transient Testing included), 1st environment			
	Conducted emissions: EN/IEC 61800-3			
	Category C1: is possible with external filter connected to drive. Please consult factory			
	Category C2: with internal filter maximum of 10m motor cable length			
	Category C3: with internal filter maximum of 50m motor cable length			

Control cable grounding

It is recommended that the shielded cables be grounded as shown in **Figure 7**. Strip the cable insulation required allowing attachment to the frame with the grounding clamp.

Figure 7. Control cable grounding

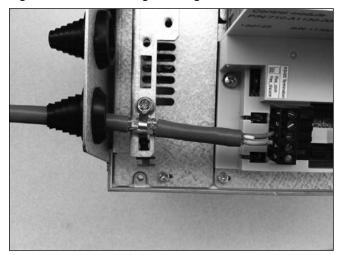

Option card introduction

Optional cards are connected to PowerXL control board in two slots. For I/O cards, various inputs and outputs can be used for control algorithms. Outputs also can be used for status of the motor.

Table 5. I/O card input/output

Board type	Allowed slots	ID	Digital input (DI)	Digital output (DO)	Analog input (AI) (mA/V)	Analog output (AO) (mA/V)	PT100 input
IO1 - DXX-EXT-3DI3D01T	A, B	0x3012	3	3	_	_	_
IO2 - DXX-EXT-1AI2A0	A, B	0x3013	_	_	1	2	_
IO3 - DXX-EXT-3R0	A, B	0x3014	_	3	_	_	_
IO4 - DXX-EXT-THER1	A, B	0x3015	_	_	_	_	3
IO5 - DXX-EXT-6DI	А, В	0x3016	6	_	_	_	_

DXX-EXT-3DI3D01T - IO1—3 x DI, 3 x DO, 1 x thermistor, 24 Vdc/EXT option card

Description

I/O board has 3 digital inputs, 3 digital outputs, 1 thermistor input used with 2 of the standard 3 inputs, and 24 Vdc Input and Output. It can be placed in either Slot A or B. Control terminals are keyed so they cannot be inserted incorrectly. Digital inputs and outputs are optically isolated from the main processor, Commons are connected together.

Table 6. Digital input/output ratings

Digital inputs

Specification	Value
Input points	3 points, 1 common line
Rated input voltage	24 Vdc (current sinking)
On state voltage	18V to 30 Vdc
Steady state current	5 mA
Off state voltage	0 to 10 Vdc
Input impedance	>5k ohm
Input logic	Positive logic and negative logic
Isolation voltage	500 Vdc

Digital Outputs

Specification	Value
Output points	3 output points, 1 common line
Output type	OC (Open-Collector)
Rated output voltage	24 Vdc
Output voltage range	Max. 36 Vdc
Output current range	Max. 50 mA

Table 7. 24.V rating

Power supply	Specification					
Rated voltage	24 Vdc					
Power consumption from 24 Vdc_IN	Voltage +24 Vdc ±10%, max. ripple voltage 100 mV rms Maximum current 1.A 1A external fuse (no internal short-circuit protection is provided on the base board for the external 24V input)					
Power requirement for 24 Vdc_OUT	Total combined load on all available 24 Vdc out terminals for all optional cards must not exceed 250 mA. The maximum load on the 24 Vdc out per board is 150 mA					

Figure 8. IO1 board layout


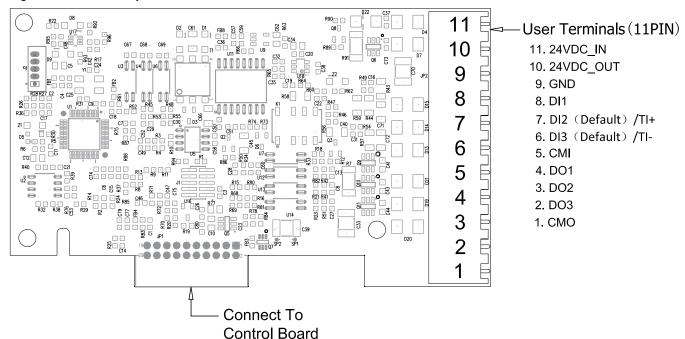


Figure 9. IO1 board wire layout

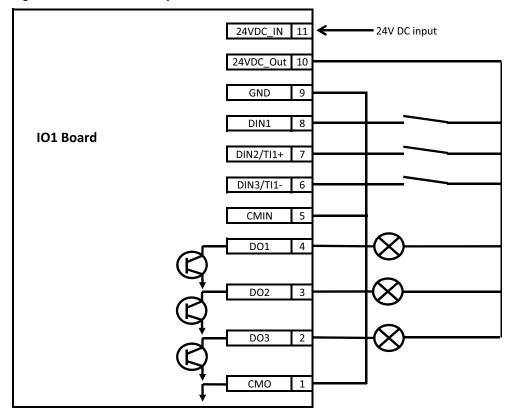

Note: If the thermistor inputs are selected, it removes 2 of the digital inputs to be used as the thermistor inputs, inputs DIN2 and DIN3 become thermistor inputs with 4.7K ohm switching point.

Table 8. IO1 control terminals

Terminal	Signal	Technical
1	CMO	Digital output common
2	Digital output 3	Open collector, 50 mA/36.V
3	Digital output 2	Open collector, 50 mA/36.V
4	Digital output 1	Open collector, 50 mA/36.V
5	CMIN	For digital input
6	Digital input 3, TI-	24 V: "0" \leq 10 V, "1' \geq 18 V, Ri \geq 5 k (Ohm symbol)
7	Digital input 2, TI+	24 V: "0" \leq 10 V, "1' \geq 18 V, Ri \geq 5 k (Ohm symbol)
8	Digital input 1	24 V: "0" \leq 10 V, "1' \geq 18 V, Ri \geq 5 k (Ohm symbol)
9	Ground	Ground for 24 Vdc IN/24 Vdc OUT
10	24 Vdc OUT	Control voltage output; voltage for switches etc.; max. current 150 mA; short-circuit protected
11	24 Vdc IN	24 Vdc input


Notes

- CMIN is Digital Input Common Line. Sink and Source available. Digital Input is isolated from 24 Vdc_IN, 24 Vdc_OUT and GND.
- 2. CMO is Digital Output ground. Digital Output is isolated from 24 Vdc_IN, 24 Vdc_OUT and GND.
- 3. Thermistor input on DI2 and DI3 is switched by Relay. When Thermistor function is turned on, TI1+ is combined with DIN2 and TI1- is combined with DIN3.
- 4. Total combined load on available 24 Vdc out terminals for all optional cards must not exceed 250 mA. The maximum load on the 24 Vdc out per board is 150 mA.

Digital inputs

The 3 digital input functions can be configured for various functions in the PowerXL drive. To configure these inputs, the standard Digital inputs menu will allow for selecting its function. DigIN: X indicates one of the onboard inputs. The option DigIN: X: IO1: Y will select one of the inputs on the IO1 card; the first X being the slot it is located in, A or B, and the second Y being the input used. **Figure 10** is an example on how to navigate to the menu.

Figure 10. PowerXL DX1 digital input signal programming (via membrane keypad)

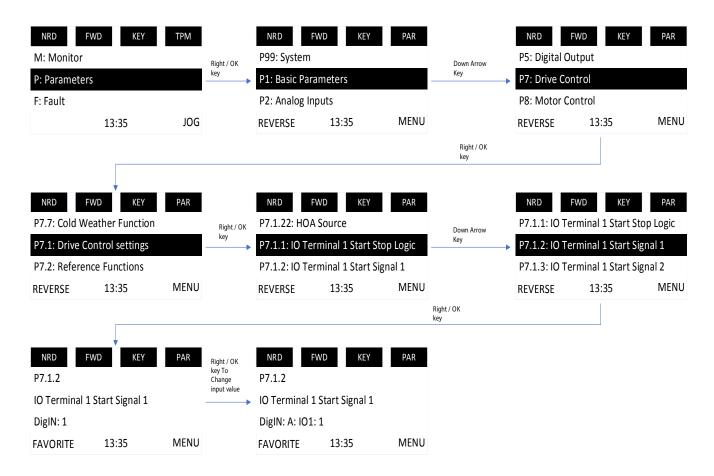

Parameters ■ Parameters ■ Parameters ■ Parameters P7.1 Basic Drive Control Settings Q : Q * Favorite Parameters P1 Basic Parameters 1 IO Terminal 1 Start Stop Logic 1 Basic Drive Control Settings Forward - Reverse Optional Boards P2 Analog Input 2 IO Terminal 1 Start Signal 1 2 Reference Functions DigIN: 1 P1 Basic Parameters P3 Digital Input 3 IO Terminal 1 Start Signal 2 DigIN: 2 P2 Analog Input P4 Analog Output 4 IO Terminal 2 Start Stop Logic Forward - Reverse P3 Digital Input P5 Digital Output 5 IO Terminal 2 Start Signal 1 40. (0) ıĝ. (ĝ) P4 Analog Output P7 Drive Control DigiN: 1 DigIN: 1 8: DigIN: A:IO1:1 Add To Favorite 9: DigIN: A: IO1 : 2 Reset Parameter To Default 10: DigIN: A: IO1: 3 18>

Figure 11. PowerXL DX1 digital input signal programming (with touchscreen keypad)

Digital outputs

The 3 digital output functions can be configured to various functions in the PowerXL drive. To configure these inputs, there are parameters in the option card menu for each of the outputs that will allow for selecting its function.

Figure 12. PowerXL DX1 digital output signal programming (via membrane keypad)



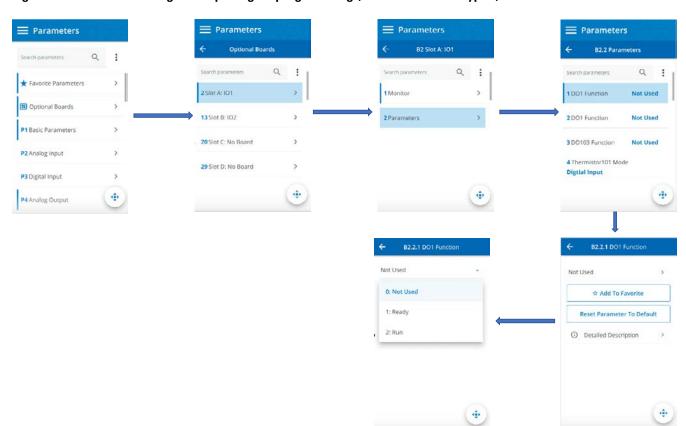


Figure 13. PowerXL DX1 digital output signal programming (via touchscreen keypad)

Thermistor input

The signal thermistor input needs to be configured before use. It will switch states at 4.7 k ohm.

Table 9. Thermistor input configuration

PTC resistance	PTC state
>4.7K	Open
1.8K to 10	Normal
<10	Short
No PTC	Not configured

Figure 14. PowerXL DX1 thermistor parameter setting (via membrane keypad))



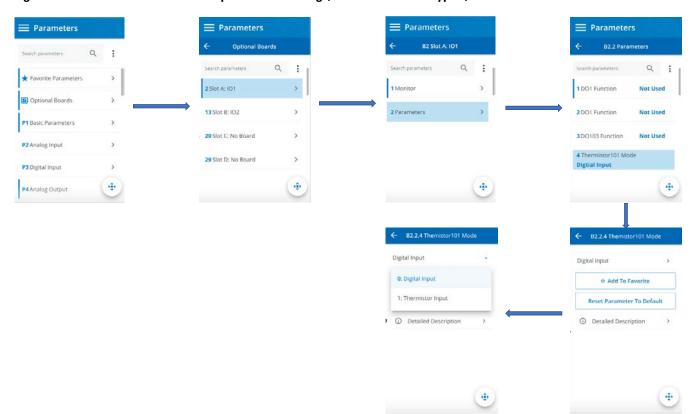


Figure 15. PowerXL DX1 thermistor parameter setting (via touchscreen keypad)

IO1 board parameters

Table 10. IO1 board parameters

Monitor menu-BX.1

Code	Parameter	Min.	Max.	Default	Unit	ID (Slot A/Slot B)	Description	R/RW
BX.1.1	Board status					883/910	Option board status	R
							B0 - DCOM Comm fault	
							B1 – Board HW Fault	
							B2 – IO1 24Volt Overload Fault	
							B3 — Fieldbus Fault	
BX.1.2	Firmware version					1064/1067	Option board firmware	R
BX.1.3	DI1, DI2, DI3					889/915	Digital input status	R
BX.1.4	D01, D02, D03					888/914	Digital output status	R
BX.1.5	Thermistor state					887/913	Thermistor configure	R
BX.1.6	Thermistor resistor					891/917	Thermistor resistance value	R

Parameter menu-BX.2

Code	Parameter	Min.	Max.	Default	Unit	ID (Slot A/Slot B)	Description	R/RW
BX.2.1	D01 Function select			0		241/244	Selects the function for the digital output	RW
BX.2.2	DO2 Function select			0		242/245	Selects the function for the digital output	RW
BX.2.3	DO3 Function select			0		243/246	Selects the function for the digital output	RW
BX.2.4	Thermistor configuration	0	1	0		890/916	Configures the thermistor as active 0: Digital Input 1: Thermistor Input	RW

Note: X is indicating that it could be in slot A or slot B, which would change the value shown. See Application Manual for settings available.

DXX-EXT-1Al2A0 - I02—1 x AI, 2 x A0 option card

Description

IO board has 1 analog input that can be configured as voltage ($\pm 10 \text{ V}$) or current (0 to 20 mA) and 2 analog outputs that can be configured as voltage (0 to 10 V) or current (0 to 20 mA). DIP switches on the option card are used to configure along with parameter settings.

Table 11. IO2 analog ratings

Analog input

Item	Voltage input	Current input
Number of inputs	1	1
Input type	Single-end	Single-end
Input range	±10 Vdc	0 (4)-20 mA
Input impedance	>200k ohm	≤250 ohm
Resolution	10 bits/0.1%	10 bits/0.1%
Accuracy	±1% of full display	±1% of full display
Maximum permanent allowed overload (no damage)	30 Vdc	30 mA DC
Insulation (Analog <-> Control board MCU)	500 Vac, 800 Vdc	500 Vac, 800 Vdc

Note: Inputs and Outputs are galvanically Isolated from the main control board. GND's /Al- are common for each channel.

Analog output

Item	Voltage input	Current input
Number of outputs	2	2
Output range	0-10 Vdc	0 (4)-20 mA DC
Load impedance	>1k ohm	<500 ohm
Application load type	Resistive load	Resistive load
Resolution	10 bits/0.1%	10 bits/0.1%
Accuracy	≤±2%	≤±2%
Load resistance too high at the current output	No protection and detec	tion of this kind of error
Insulation (Analog <-> Control board MCU)	500 Vac, 800 Vdc	500 Vac, 800 Vdc

Note: Inputs and Outputs are galvanically Isolated from the main control board. GND's /AO- are common for each channel.

Figure 16. IO2 board layout

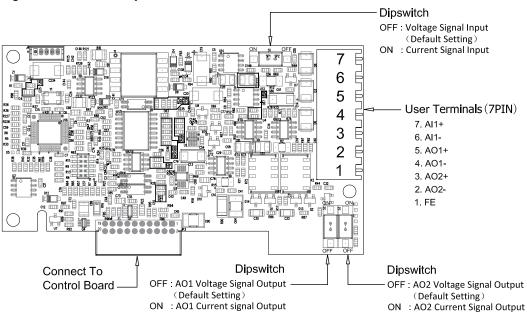


Figure 17. IO2 board wire layout

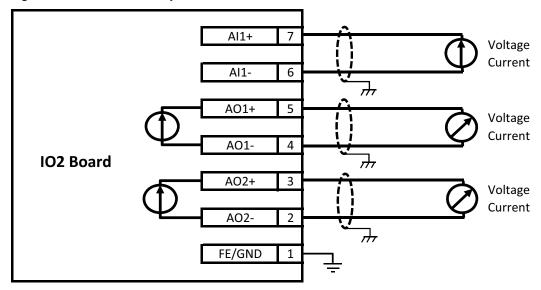


Table 12. IO2 board terminals

Terminal	Signal	Technical
1	FE	Connect cable shield
2	A02-	Current: 0 (4)–20 mA, RL max. 500 ohms
3	A02+	Voltage: 0–10 V, RL >1k ohm (default setting)
4	A01-	Current: 0 (4)–20 mA, RL max. 500 ohms
5	A01+	Voltage: 0–10 V, RL >1k ohm (default setting)
6	Al-	Current: 0 (4)–20 mA (Ri = 250 ohms)
7	Al+	Voltage: -10 to +10 V (Ri > 200k ohms (default setting)

IO2 Board parameters

Parameters are all listed in the Optional board menu for this card.

Figure 18. PowerXL DX1 IO2 parameter setting (via membrane keypad)


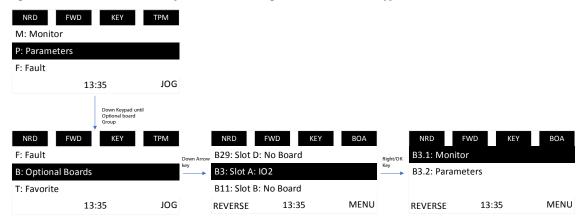


Table 13. IO2 board parameter setting (via touchscreen keypad)

Monitor menu-BX.1

Code	Parameter	Min.	Мах.	Default	Unit	ID (Slot A/Slot B)	Description	R/RW
BX.1.1	Board status					883/910	Option board status	R
							B0 - DCOM comm fault	
							B1 — Board HW fault	
							B2 – IO1 24Volt overload fault	
							B3 – Fieldbus fault	
BX.1.2	Firmware version					1064/1067	Option board firmware	R
BX.1.3	Al1 Value					894/920	Analog input status	R
BX.1.4	A01 Value					897/922	Analog output status	R
BX.1.4	A02 Value					899/924	Analog output status	R

Figure 19. PowerXL DX1 IO2 parameter structure

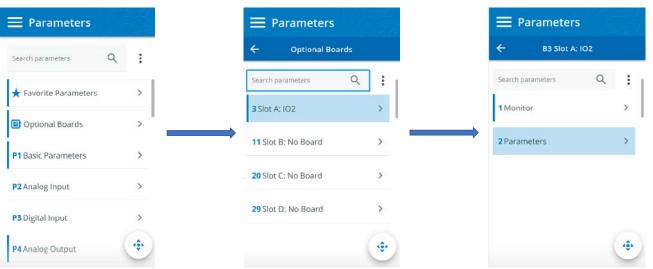

Parameter menu-BX.2

Code	Parameter	Min.	Max.	Default	Unit	ID (Slot A/Slot B)	Description	R/RW
BX.2.1	Al1 Mode	0	2	0		893/919	Analog input 1 Mode 0: 0 to 20 mA 1: 0 to 10V 2: -10V to +10V	RW
3X.2.2	Al1 Range	0	2	0		124/129	Analog input 1 signal range 0: 0 to 100% 1: 20 to 100% 2: Customized	RW
3X.2.3	Al1 Custom min	0	100	0	%	125/130	Analog input 1 custom minimum range	RW
3X.2.4	Al1 Custom max	0	100	100		126/131	Analog input 1 custom maximum range	RW
3X.2.5	Al1 Filter time	0	10	0.1	S	123/128	Analog input 1 filter time	RW
BX.2.6	Al1 Invert	0	1	0		127/132	Analog input 1 signal inversion 0: Not Inverted 1: Inverted	RW
BX.2.7	A01 Mode	0	1	0		896/922	Analog output mode 0: 0 to 20 mA 1: 0 to 10V	RW
3X.2.8	A01 Function			0		235/275	Analog output 1 function	RW
BX.2.9	A01 Min	0	1	0		238/276	Analog output minimum value 0: 0V/0 mA 1: 2V/4 mA default 0V/0 mA	RW
3X.2.10	A01 Filter time	0	10	1	S	236/277	Analog output filter time range	RW
3X.2.11	A01 Scale	0	100	100	%	239/278	Analog output 1 scale	RW
BX.2.12	A01 Invert	0	1	0		237/279	Analog output 1 signal inversion 0: Not Inverted 1: Inverted	RW
BX.2.13	A01 Offset	0	9	0	%	240/280	Analog output minimum offset	RW
BX.2.14	A02 Mode	0	1	0		898/924	Analog output mode 0: 0 to 20 mA 1: 0 to 10V	RW
3X.2.15	A02 Function			0		269/281	Analog output function	RW
BX.2.16	A02 Min	0	1	0		270/282	Analog output minimum value 0: 0V/0 mA 1: 2V/4 mA	RW
3X.2.17	A02 Filter time	0	10	1	S	271/283	Analog output filter time	RW
3X.2.18	AO2 Scale	0	100	100	%	272/284	Analog output scale	RW
BX.2.19	A02 Invert	0	1	0		273/285	Analog output signal inversion 0: Not Inverted 1: Inverted	RW
3X.2.20	A02 Offset	0	9	0	%	274/286	Analog output minimum offset	RW

Note: X is indicating that it could be in slot A or slot B, which would change the value shown. See Application Manual for settings available.

DXX-EXT-3R0 - 103—3 x Relay dry contact (2N0 + 1NO/NC) option card

Description

IO board has 2 form A dry contacts and 1 form C dry relay. The relay functions can be selected via parameters based off of various drive monitoring values.

Table 14. IO3 board rating

Specification	Value
Number of contacts	2 Form A (NO) and 1 Form C (NO, NC)
Continuous capacity	<2A rms
Operating voltage	250 Vac, 24 Vdc
Switching capacity	24 Vdc/8A; 250 Vac/8A
Minimum switching load	10 mA at 5 Vdc
Isolation type	Relay coil

Figure 20. IO3 board layout

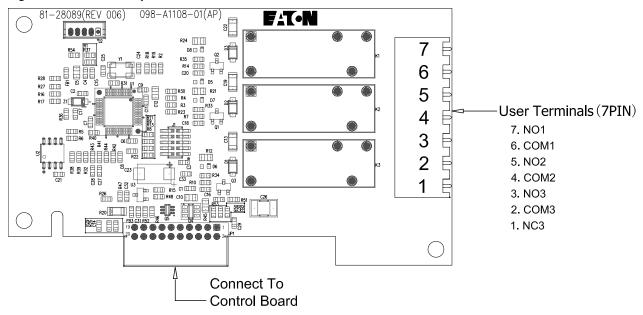


Figure 21. IO3 board wire layout

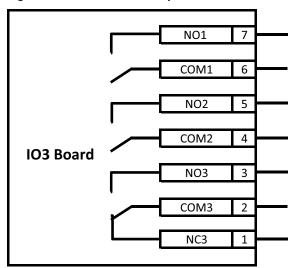


Table 15. IO3 board terminals

Terminal	Signal	Technical
1	NC3-RO3/common	Switching capacity: 24 Vdc/8A; 250 Vac/8A; 125 Vdc/0.4A Min. switching load: 5V/10 mA
2	COM3	
3	NO3-RO3/normal close	Switching capacity: 24 Vdc/8A; 250 Vac/8A; 125 Vdc/0.4A Min. switching load: 5V/10 mA
4	COM2	
5	NO2-RO2/normal open	Switching capacity: 24 Vdc/8A; 250 Vac/8A; 125 Vdc/0.4A Min. switching load: 5V/10 mA
6	COM1	
7	NO1-RO1/normal open	Switching capacity: 24 Vdc/8A; 250 Vac/8A; 125 Vdc/0.4A Min. switching load: 5V/10 mA
	·	· · · · · · · · · · · · · · · · · · ·

103 board parameters

Figure 22. PowerXL DX1 IO3 board parameter setting (via membrane keypad)



Parameters Parameters Parameters **Optional Boards** B4 Slot A: IO3 Search parameters Search parameters Search parameters Q : ★ Favorite Parameters 4 Slot A: 103 1 Monitor Optional Boards 11 Slot B: No Board 2 Parameters P1 Basic Parameters 20 Slot C: No Board P2 Analog Input 29 Slot D: No Board P3 Digital Input P4 Analog Output

Figure 23. PowerXL DX1 IO3 board parameter setting (via touchscreen keypad)

Table 16. IO3 parameters

Monitor menu-BX.1

Code	Parameter	Min.	Мах.	Default	Unit	ID (Slot A/Slot B)	Description	R/RW
BX.1.1	Board status					883/910	Option board status	R
						BO — DCOM Comm fault		
							B1 – Board HW fault	
							B2 – IO1 24Volt overload fault	
							B3 — Fieldbus fault	
BX.1.2	Firmware version					1064/1067	Option board firmware	R
BX.1.3	Relay outputs status					900/926	Relay output status indicator	R

Parameter menu-BX.2

Code	Parameter	Min.	Max.	Default	Unit	ID (Slot A/Slot B)	Description	R/RW
BX.2.1	RO1 Function select			0		540/552	RO1 Function	RW
BX.2.2	RO2 Function select			0		541/555	RO2 Function	RW
BX.2.3	RO3 Function select			0		551/556	RO3 Function	RW

Note: X is indicating that it could be in slot A or slot B, which would change the value shown. See Application Manual for settings available.

DXX-EXT-THER1 - IO4—3 x PT100 RTD thermistor input option card

Description

IO board has 3 PT100 RTD inputs for motor thermal monitoring. The inputs are designed to sense temperature from –30 °C to +200 °C, warning for PT100 sensor open or short. These sensors are used to fault the drive at a user set temperature level.

Table 17. IO4 thermistor ohm values

Thermistor temperature	Thermistor state
>210	Open: 2
+210 to -50	Normal: 0
<-50	Short: 1
NO PTC	Not configured: 3

Table 18. IO4 board rating

Item	Value
Number of inputs	3
Input type	PT100
Temperature range	−30 °C to +200 °C
Accuracy	≤1.5 °C

Figure 24. IO4 board layout

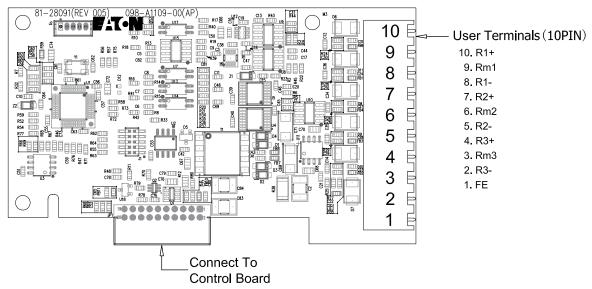


Figure 25. IO4 board wire layout—options for wiring the sensor

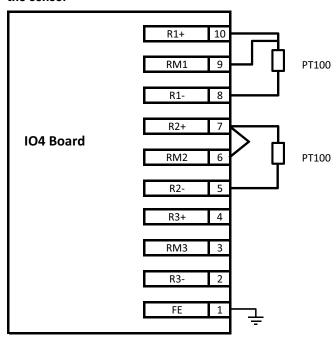


Table 19. IO4 terminal layout


Terminal	Signal	Technical
1	FE	Connect cable shield
2	R3-	PT100 Input, -30 °C to +200 °C, Accuracy <1.5 °C
3	RM3	
4	R3+	
 5	R2-	PT100 Input, -30 °C to +200 °C, Accuracy <1.5 °C
6	RM2	
7	R2+	
8	R1-	PT100 Input, -30 °C to +200 °C, Accuracy <1.5 °C
9	RM1	
10	R1+	

104 board parameters

Figure 26. PowerXL DX1 IO4Thermistor board parameter setting (via membrane keypad)



Figure 27. PowerXL DX1 IO4Thermistor board parameter setting (via touchscreen keypad)

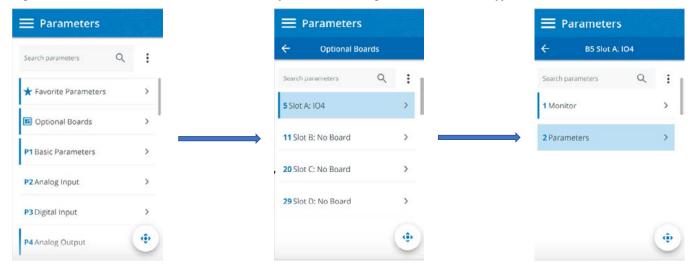

DXX-EXT-THER1 - IO4—3 x PT100 RTD thermistor input option card

Table 20. IO4 parameters

Monitor menu-BX.1

Code	Parameter	Min.	Max.	Default	Unit	ID (Slot A/Slot B)	Description	R/RW
BX.1.1	Board Status					883/910	Option board Status	R
							B0 — DCOM Comm Fault	
							B1 – Board HW Fault	
							B2 – IO1 24Volt Overload Fault	
							B3 — Fieldbus Fault	
BX.1.2	Firmware Version					1064/1067	Option Board Firmware	R
BX.1.3	PT100 State					905/931	PT100 board status	R
BX.1.4	PT100 Values					902/928	PT100 Temperature values	R
Paramo	eter menu-BX.2							
Code	Parameter	Min.	Max.	Default	Unit	ID (Slot A/Slot B)	Description	R/RW
BX.2.1	PT100 3, 2, 1	0	7	0		901/927	Active PT100 inputs 3, 2, 1 0: No PT100 1: 0, 0, 1 PT100 input 1 active 2: 0, 1, 0 PT100 input 2 active 3: 0, 1, 1 PT100 input 1 and input 2 active 4: 1, 0, 0 PT100 input 3 active 5: 1, 0, 1 PT100 input 3 and input 1 active 6: 1, 1, 0 PT100 input 3 and input 2 active 7: 1, 1, 1 PT100 all inputs active Default 0	RW

338/937

339/938

Temperature warning limit value

Temperature fault limit value

RW

RW

Note: X is indicating that it could be in slot A or slot B, which would change the value shown.

BX.2.2

BX.2.3

PT100 Warning Limit

PT100 Fault Limit

DXX-EXT-6DI - IO5—6 x DI 120 Vac / 240 Vac input option card

Description

IO board has 6 digital inputs that are rated for a max of 240 Vac. These inputs can be configured to various functions.

Table 21. IO5 rating

Specification	Value
Input points	6 points, 2 common lines
Rated input voltage	120VAC/240 Vac (current sinking)
Operating frequency	50/60 Hz
On state voltage	79 Vac to 240 Vac
Steady state current	<15 mA
Off state voltage	0 to 40 Vac
Input logic	Positive logic and negative logic
Isolation voltage	1500 Vac

Figure 28. IO5 board layout

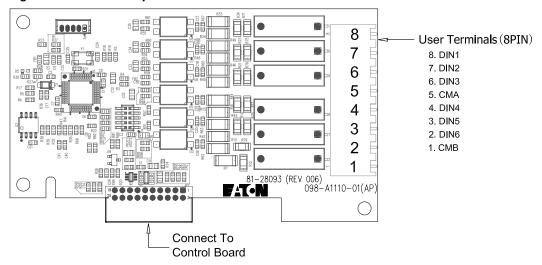


Figure 29. IO5 board wire layout


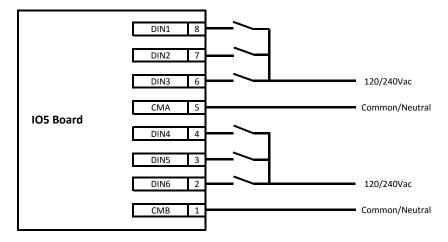


Table 22. IO5 terminal layout

Terminal	Signal	Technical
1	CMB	For digital input 4, 5, 6
2	DIN6	Digital input, 120 Vac/240 Vac, 50 Hz/60 Hz
3	DIN5	Control voltage: "0" <40 Vac, "1" >79 Vac
4	DIN4	
5	CMA	For digital input 3, 2, 1
6	DIN3	Digital input, 120 Vac/240 Vac, 50 Hz/60 Hz
7	DIN2	Control voltage: "0" <40 Vac, "1" >79 Vac
8	DIN1	

105 board parameters

Figure 30. PowerXL DX1 IO5 board parameter setting (via membrane keypad)

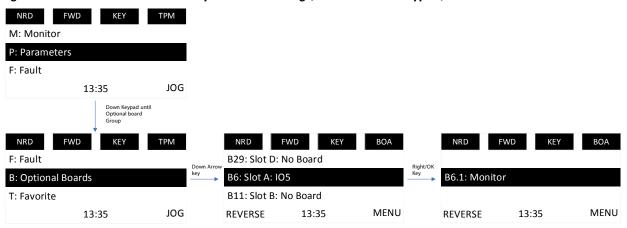

Parameters **Parameters** Parameters **Optional Boards** B6 Slot A: IO5 : * Favorite Parameters 6 Slot A: 105 1 Monitor Optional Boards 11 Slot B: No Board P1 Basic Parameters 20 Slot C: No Board P2 Analog Input 29 Slot D: No Board P3 Digital Input P4 Analog Output

Figure 31. PowerXL DX1 IO5 board parameter setting (via touchscreen keypad)

Table 23. IO5 parameters

Monitor menu-BX.1

Code	Parameter	ID (Slot A/Slot B)	Description	R/RW
BX.1.1	Board status	883/910	Option board status	R
			B0 – DCOM Comm fault	
			B1 – Board HW fault	
			B2 – IO1 24Volt overload fault	
			B3 — Fieldbus fault	
BX.1.2	Firmware version	1064/1067	Option board firmware	R
BX.1.3	AC Digital input 1–3	908/934	Input signal status	R
BX.1.4	AC Digital input 4–6	1696/1697	Input signal status	R

Note: X is indicating that it could be in slot A or slot B, which would change the value shown.

Input functions are set in the drive application under the digital input selections. Depending on which slot is used, the function will be set up with DigIN: X: IO5:, X being the slot the board is placed in and Y being the input that is being used on that board.


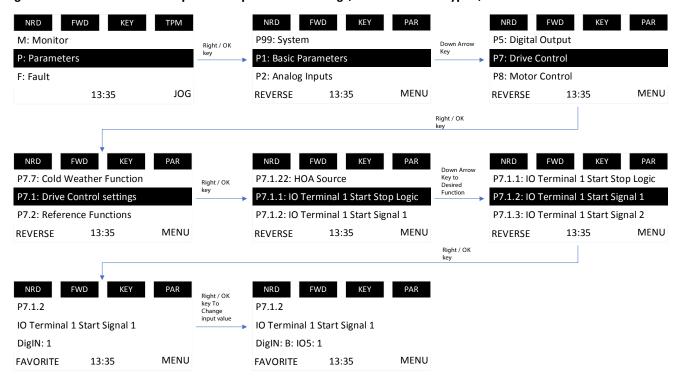


Figure 32. PowerXL DX1 IO5 input board parameter setting (via membrane keypad)

Figure 33. PowerXL DX1 IO5 input board parameter setting (via touchscreen keypad)

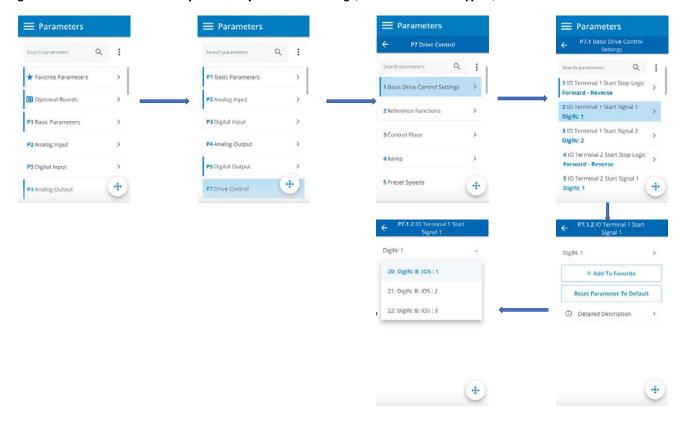

Notes

Eaton is dedicated to ensuring that reliable, efficient and safe power is available when it's needed most. With unparalleled knowledge of electrical power management across industries, experts at Eaton deliver customized, integrated solutions to solve our customers' most critical challenges.

Our focus is on delivering the right solution for the application. But, decision makers demand more than just innovative products. They turn to Eaton for an unwavering commitment to personal support that makes customer success a top priority. For more information, **visit www.eaton.com/electrical.**

Eaton 1000 Eaton Boulevard Cleveland, OH 44122 United States Eaton.com



© 2024 Eaton All Rights Reserved Printed in USA Publication No. MN040079EN / ZD29320 September 2024

Eaton is a registered trademark.

All trademarks are property of their respective owners.