

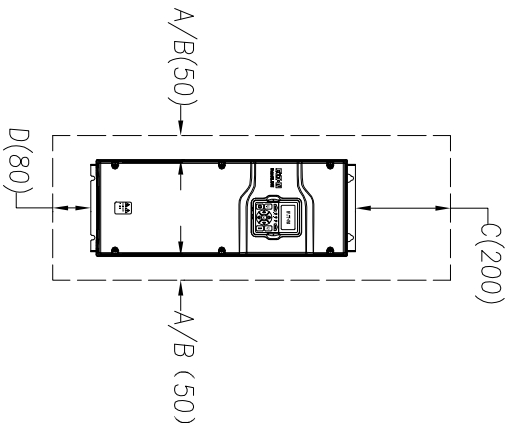
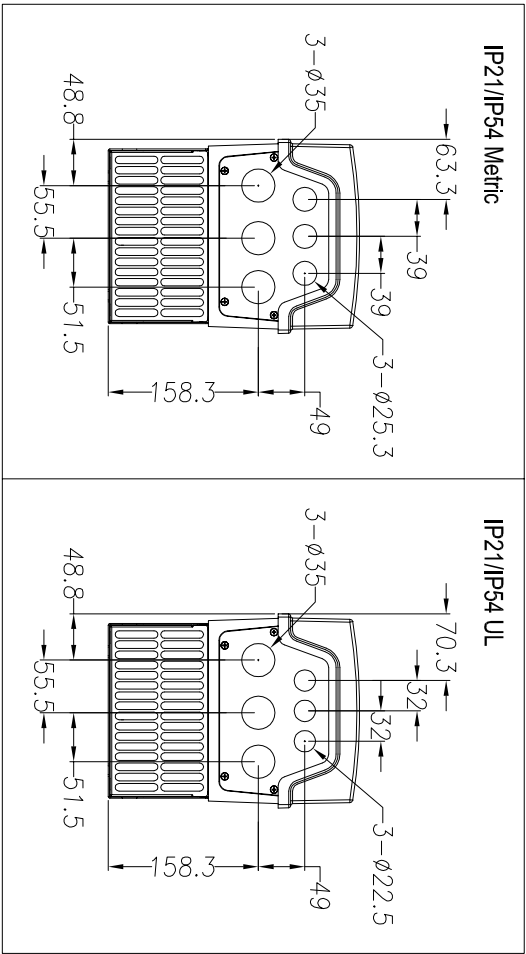
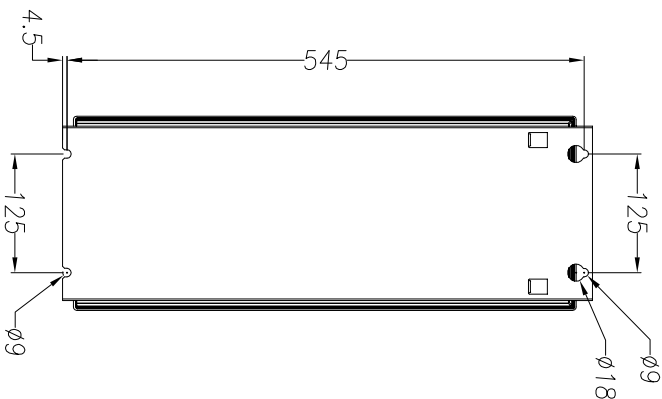
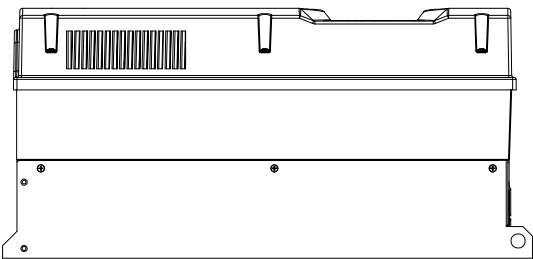
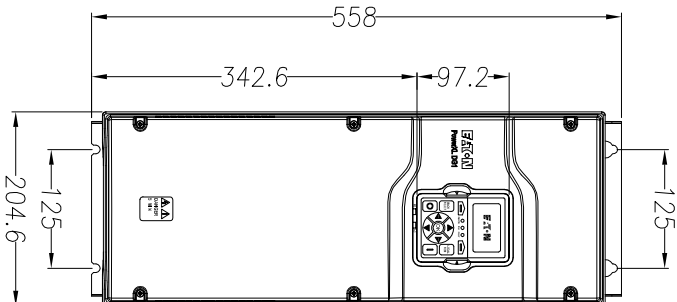
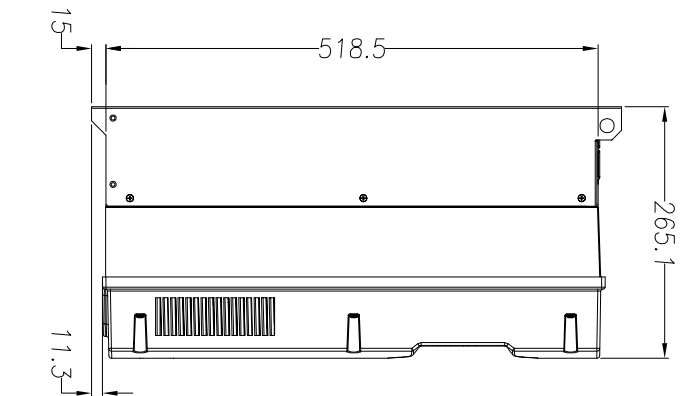
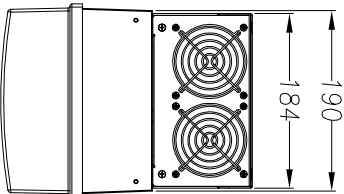
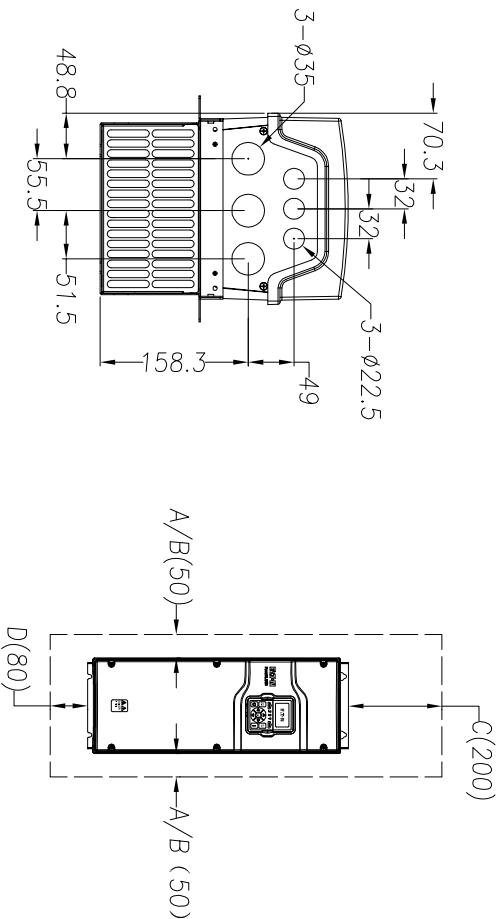


FR3 Dimension drawing

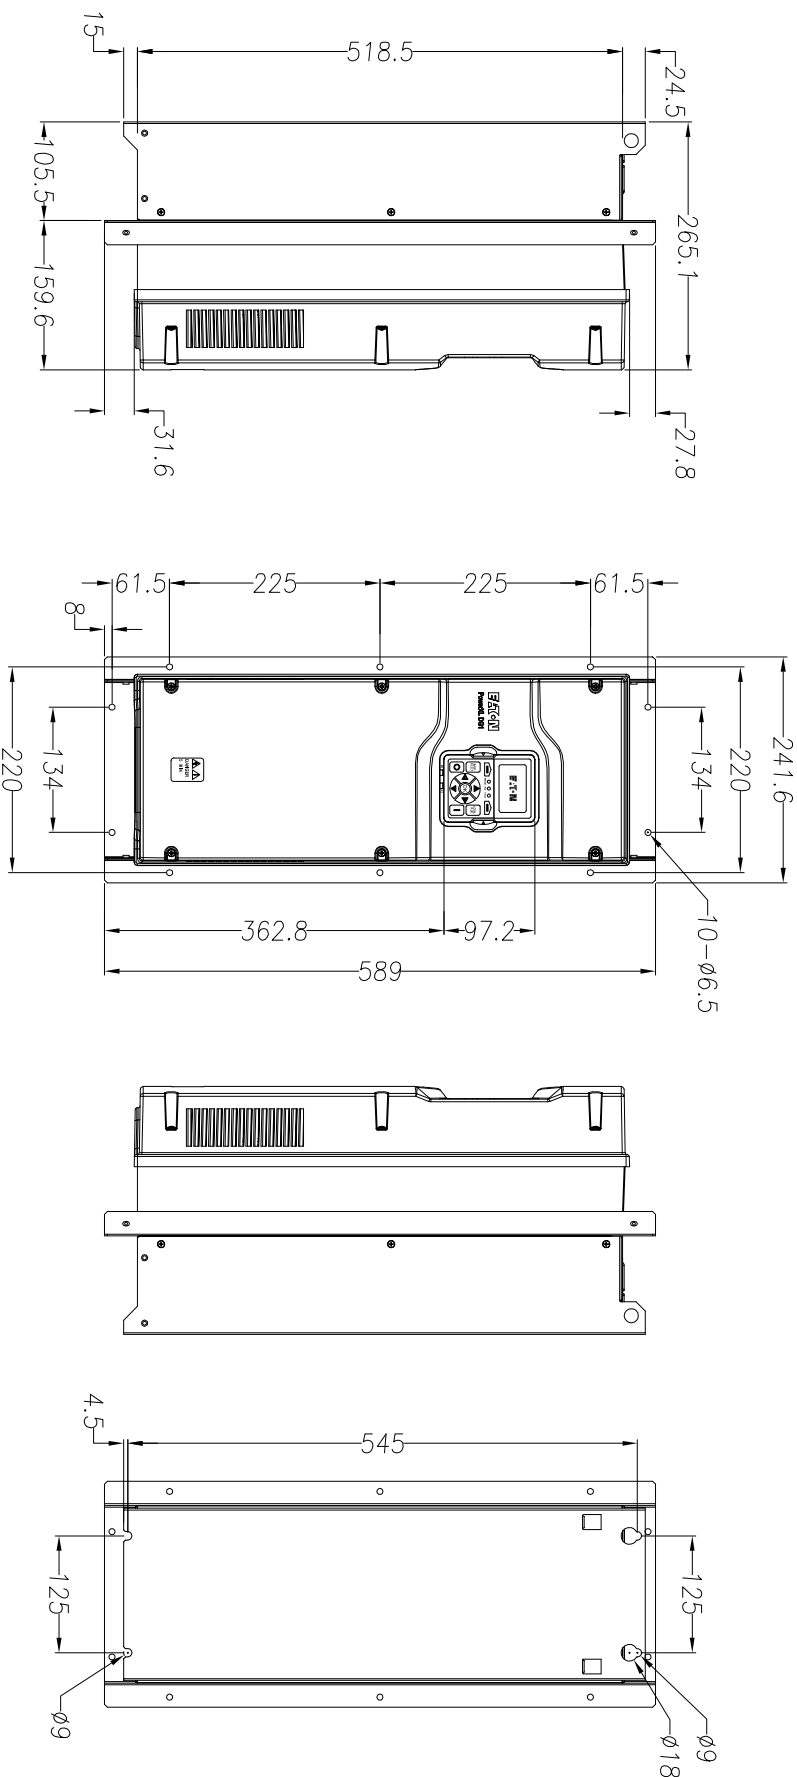

Minimum dimensions
A= Air gap around drive
B= Space between two drives or
drive and e.g. cabinet
C= Free space above drive
D= Free space below drive
For class IP54 dim A and B=0

FR3 Dimension drawing flange mount

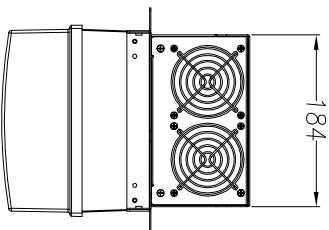

Minimum dimensions
A= Air gap around drive
B= Space between two drives or drive and e.g. cabinet
C= Free space above drive
D= Free space below drive

For class IP54 dim A and B =0