



SolstarDisk

IP44

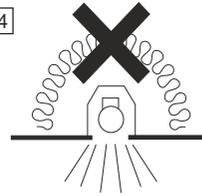


- Product luminaires comply with EN60598 and are suitable for use in normal interior conditions.
- This luminaire has an ambient temperature range of -20°C to +25°C for the non-emergency version
- For Emergency variants - This luminaire has an ambient temperature range of +5°C to +25°C.

1

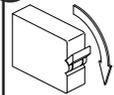

Isolate mains supply before installation

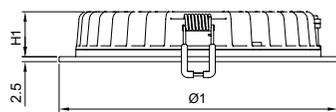


Ensure there are no obstructions in the way then cut an aperture in the ceiling (see table for dimension).

Cat No.	Height (mm) H1	Diameter (mm) Ø1	Aperture size (mm)
SLK10003KZ	22.5	140	125
SLK10004KZ	22.5	140	125
SLK16003KZ	24	180	165
SLK16004KZ	24	180	165
SLK19003KZ	24	230	210
SLK19004KZ	24	230	210
SLK30003KZ	24	230	210
SLK30004KZ	24	230	210


2




Make electrical connections. Locate LED driver through the opening. Locate driver in a well ventilated area. Connect 'Plug and Play' leads.

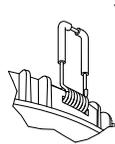

Rotate spring clips upwards and locate fitting into cut-out

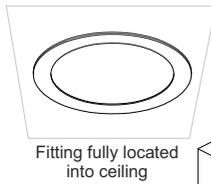

Fitting fully located into ceiling

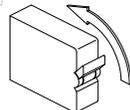

Finally restore the mains power supply

Safe Operation

1. Check the rating label for voltage and frequency before connecting this luminaire to the electrical supply.
2. Ensure that the mains supply is switched off when working on this luminaire, whether installing or carrying out any other servicing.
3. Do not mount luminaire on or close to readily flammable materials.
4. To prevent damage to driver, do not mix with conventional magnetic ballasts on the same electrical circuit.
5. Where use in more onerous situations is required, e.g. In part-completed buildings before "drying-out" is completed, or areas where ambient temperatures are outside the normal temperature range, then consult our Sales Office.


Servicing and Disposal

1. At commissioning and handing over of installation ensure that a copy of these instructions is presented to the authority responsible for the operation and maintenance of the luminaires.
2. Servicing, e.g. cleaning, must only be carried out after the electricity supply has been switched off. It must not be assumed that luminaires with lamps not lit are switched off-always check before servicing.
3. Cleaning should be carried out at regular intervals to ensure that dirt does not accumulate to an extent that will impair the thermal safety or optical performance of the luminaire. Regular cleaning will also ensure that the optical performance of the luminaires is maintained.
4. At the end of life the luminaire is classed as WEEE under directive 2012/19/EU and should be disposed of in accordance with local legislation.
5. The light source in this product in non-replaeable. When the light sources reaches its end of life, then the whole luminaire shall be replaced

Luminaire Servicing


Luminaire Cleaning

End of Life and Components Disposal

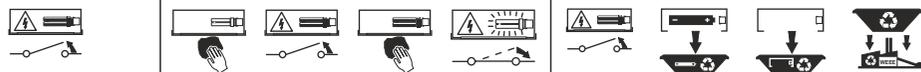


SolstarDisk

IP44

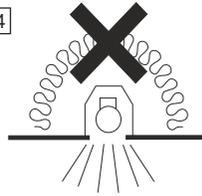


- Product luminaires comply with EN60598 and are suitable for use in normal interior conditions.
- This luminaire has an ambient temperature range of -20°C to +25°C for the non-emergency version
- For Emergency variants - This luminaire has an ambient temperature range of +5°C to +25°C.

1

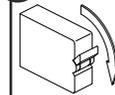

Isolate mains supply before installation

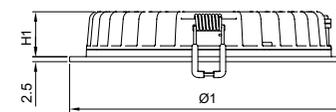


Ensure there are no obstructions in the way then cut an aperture in the ceiling (see table for dimension).

Cat No.	Height (mm) H1	Diameter (mm) Ø1	Aperture size (mm)
SLK10003KZ	22.5	140	125
SLK10004KZ	22.5	140	125
SLK16003KZ	24	180	165
SLK16004KZ	24	180	165
SLK19003KZ	24	230	210
SLK19004KZ	24	230	210
SLK30003KZ	24	230	210
SLK30004KZ	24	230	210


2




Make electrical connections. Locate LED driver through the opening. Locate driver in a well ventilated area. Connect 'Plug and Play' leads.

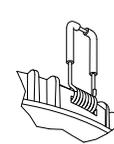

Rotate spring clips upwards and locate fitting into cut-out

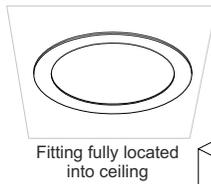

Fitting fully located into ceiling

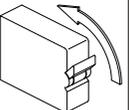

Finally restore the mains power supply

Safe Operation

1. Check the rating label for voltage and frequency before connecting this luminaire to the electrical supply.
2. Ensure that the mains supply is switched off when working on this luminaire, whether installing or carrying out any other servicing.
3. Do not mount luminaire on or close to readily flammable materials.
4. To prevent damage to driver, do not mix with conventional magnetic ballasts on the same electrical circuit.
5. Where use in more onerous situations is required, e.g. In part-completed buildings before "drying-out" is completed, or areas where ambient temperatures are outside the normal temperature range, then consult our Sales Office.

Servicing and Disposal

1. At commissioning and handing over of installation ensure that a copy of these instructions is presented to the authority responsible for the operation and maintenance of the luminaires.
2. Servicing, e.g. cleaning, must only be carried out after the electricity supply has been switched off. It must not be assumed that luminaires with lamps not lit are switched off-always check before servicing.
3. Cleaning should be carried out at regular intervals to ensure that dirt does not accumulate to an extent that will impair the thermal safety or optical performance of the luminaire. Regular cleaning will also ensure that the optical performance of the luminaires is maintained.
4. At the end of life the luminaire is classed as WEEE under directive 2012/19/EU and should be disposed of in accordance with local legislation.
5. The light source in this product in non-replaeable. When the light sources reaches its end of life, then the whole luminaire shall be replaced

Luminaire Servicing

Luminaire Cleaning

End of Life and Components Disposal

