



Using the F809F diagnostic module with the Honeywell EXPERION PKS C300



1 Introduction

This technical support note is intended to give the user an understanding of how to integrate the F809F diagnostic module into the Experion PKS C300 from Honeywell.

2 References

INM F809F FOUNDATION fieldbus™ diagnostics module manual.

FOUNDATION fieldbus™ is a trademark of the Fieldbus Foundation


3 Overview

This document is intended to provide a “walk-through” for the Honeywell Experion control platform, “the Control Builder” with the F809F module. The F809F fieldbus module monitors the health of fieldbus segments and provides an indication of possible network failure.



4 Hardware Requirements / Installation

4.1 Installation for communication

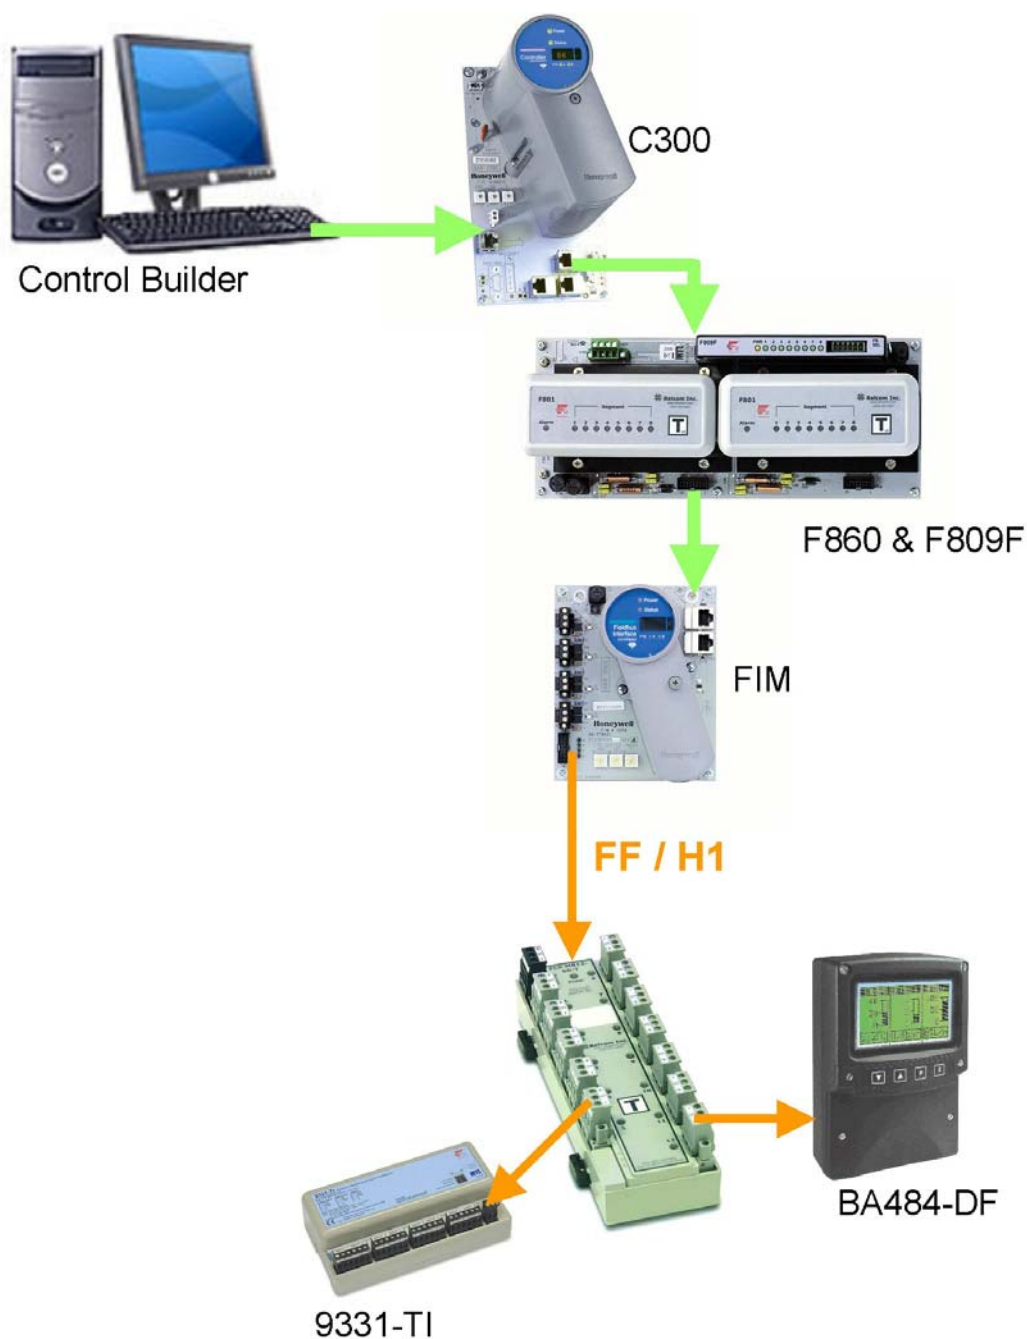



4.2 Configuration of fieldbus communication segment

The communication segment that will be used is determined by configuring the connector on the front face of the module. A 6 pin comb, supplied with the module is used to define the communication segment by inserting it one of the two ways into the connector.


For communication on segment 8, place the comb in the connector so that the number 8 is visible on the top left surface.

For communication on segment 1, place the comb in the connector so that the number 1 is visible on the top left surface.



5 Workstation and controller configuration

The control Builder is the engineering tool where you will configure the Hardware, the Fieldbus Module, the I/Os and where you will develop the control strategy.

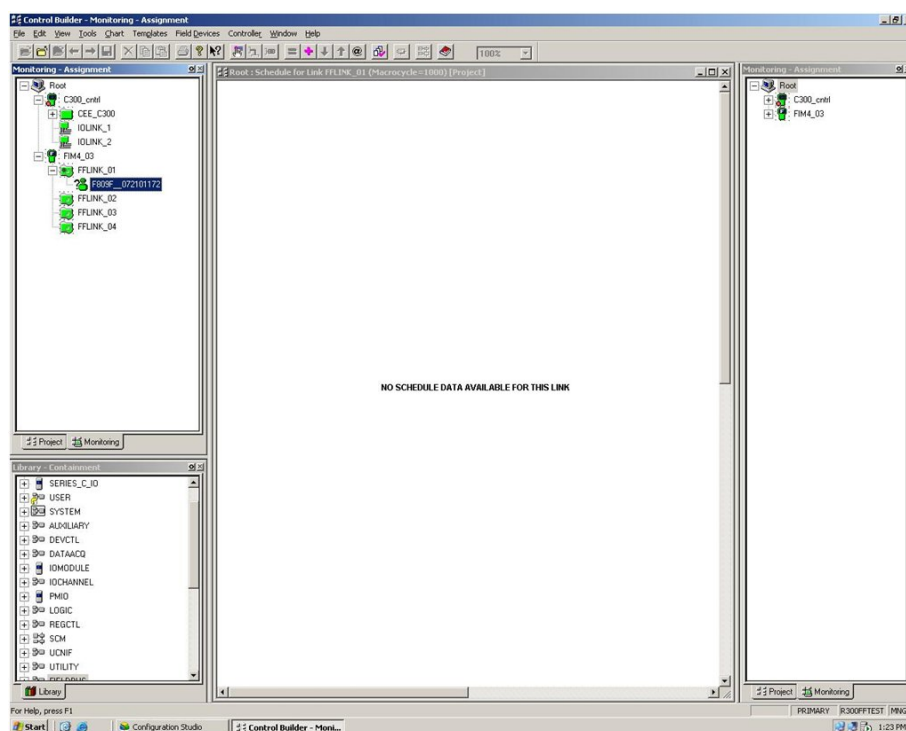


Control studio main view

You have three main windows:

- Project Tab: this is where you would develop your project if you don't have any live devices.



- Monitoring Tab: this is the live Tab. All modifications carried out in this windows will directly affect the device itself. If you use this Tab, you have to do an upload in order to have your project in your server.
- Library Tab: this is the emplacement of your templates, every piece of I/O and control strategy of your project will be displayed in this Tab.

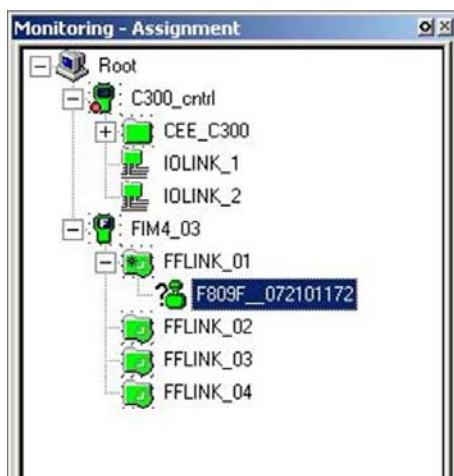

New uncommissioned device in the monitoring view

Root: This is your server

CEE_C300: This is the C300 controller

FIM4_03: This the fieldbus communication module, this module has 4 ports FFLINK_01, FFLINK_02, FFLINK_03 and FFLINK_04.

In our example, the diagnostic module is connected to the FFLINK_01 its TAG NAME is:
F809F_072101172

6 Fieldbus devices

6.1 Fieldbus Devices General Information

Each fieldbus device must have a unique physical device tag and a corresponding network address. The device tag is assigned to the device when it is commissioned and (for most device), the device retains the tag in its memory when it is disconnected. The network address is the current address that the fieldbus is using for the device. The Fieldbus Foundation uses addresses in the range 0-255.

- **Basic device** - sends and receives messages on the fieldbus but does not control when devices have access to the fieldbus. The F809F diagnostic module is a basic device.
- **Link Master** - controls when devices access the fieldbus and executes the link schedule which synchronizes communications with function block execution on the fieldbus. Link Master devices are capable of taking over as LAS if the Primary Link Master device fails.



6.2 Device Descriptions and Methods

6.2.1 Device Description

A Device Description is similar to a driver for a device. For fieldbus devices, the Device Description includes the calibration procedures, parameter procedures, and other information required by the control system to communicate with the fieldbus device. The host system such as the C300 system uses library functions called Device Description? Services to read the Device Descriptions. Device Description technology enables interoperability among fieldbus devices. Interoperability, a key benefit of fieldbus technology, is the ability of a host system to operate multiple devices, independent of manufacturer, on the same fieldbus segment without loss of minimum functionality.

The C300 system supports a number of fieldbus devices from different manufacturers. The device description files necessary to support these devices are included in the C300. If a fieldbus device is not included in the C300, you must install the device description for that device. The device description is specific to the device type and revision.

6.2.2 Methods

Device Descriptions can also include a set of processing routines called Methods. Methods provide a way to access and manipulate parameters within a device. For example a DD for a Valve Controller might include methods for automatically calibrating valve travel, manually calibrating travel, restarting a device, and calibrating the internal pressure sensor information for display. Methods are available from the Control Studio or from the Station.


There are 3 configuration methods available in the MTL F809F Systems Transducer block.

- o Setting Date and Time
- o Resetting retransmission counter
- o Deleting device data

6.3 Autosensing Fieldbus Devices

The H1 card automatically detects the fieldbus devices, recognizes the device types, and makes this information available to the C300.

The Device appears in the Monitoring window with a question mark.

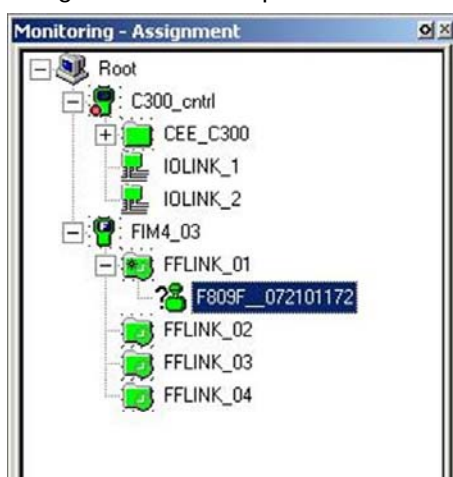

New uncommissioned device in the monitoring view


In our example, the diagnostic module is connected to the FFLINK_01 and it has the default TAG NAME (F809F_072101172).



6.4 Commissioning Fieldbus Devices

Commissioning fieldbus devices is carried out in the Control Studio.


To commission a device, you first have to assign to the device an address and a unique tag name. To do so, double click on the device (with the question mark) you want to commission.

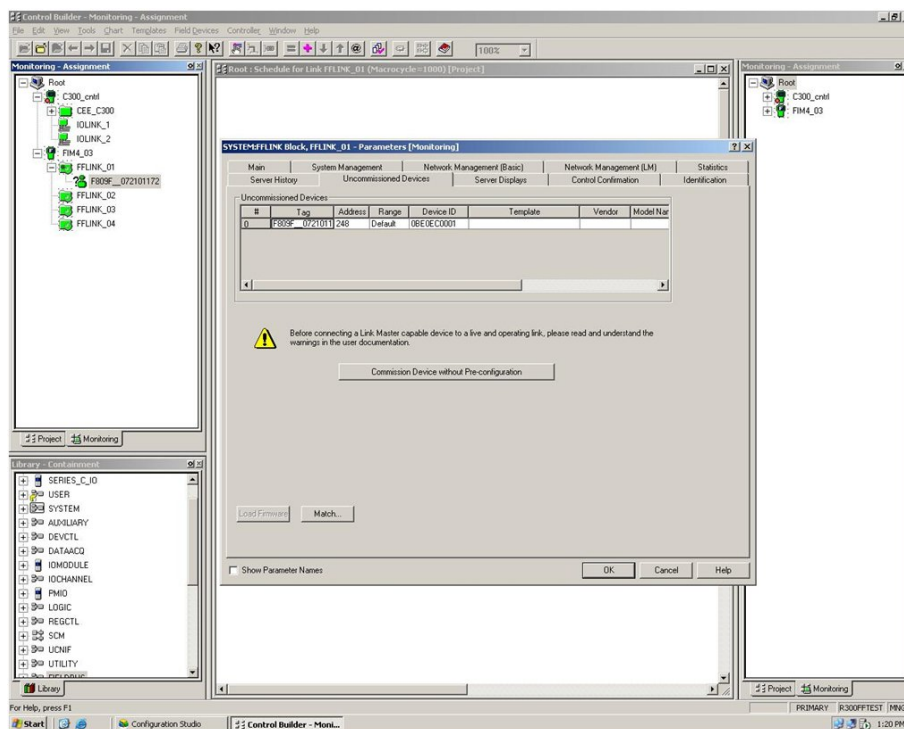

New F809F module being commissioned: Change the address to a permanent address

A new device (fresh from the box) will automatically take a spare address (248 – 251) on the fieldbus. In our example, the F809F has the address 248 and doesn't have any template or vendor ID. In order for those parameters to match with the MTL F809F parameters, you need to assign to the device a TAG Name and device address.

Change the address by typing the address in the address field and click OK, you can also change the TAG name.

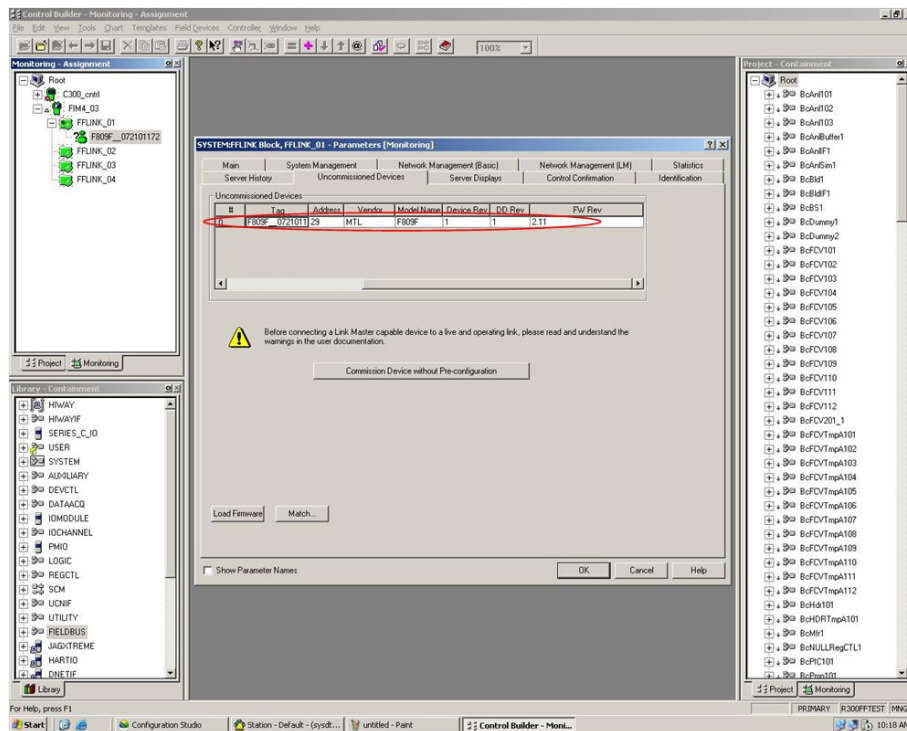


New F809F module being commissioned: F809F with its permanent address

Once you have modified the address (from 248 to 29 in our example), the device is automatically identified as an MTL Device.


You can now commission the device by clicking on “Commission device without Pre-Configuration”.

Because we haven't built any template yet for this device, the following windows will appear. You would have created a template only if you worked offline.

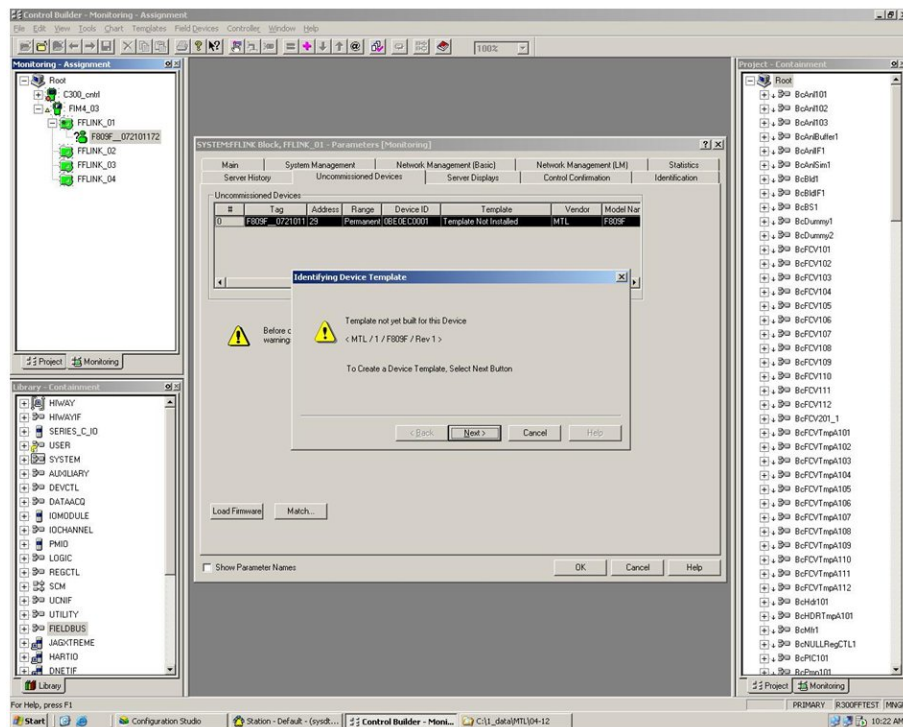

New F809F module being commissioned: Create a Template for this device

We haven't loaded any DD file for our device, Control Studio will now ask for the DD file directory.

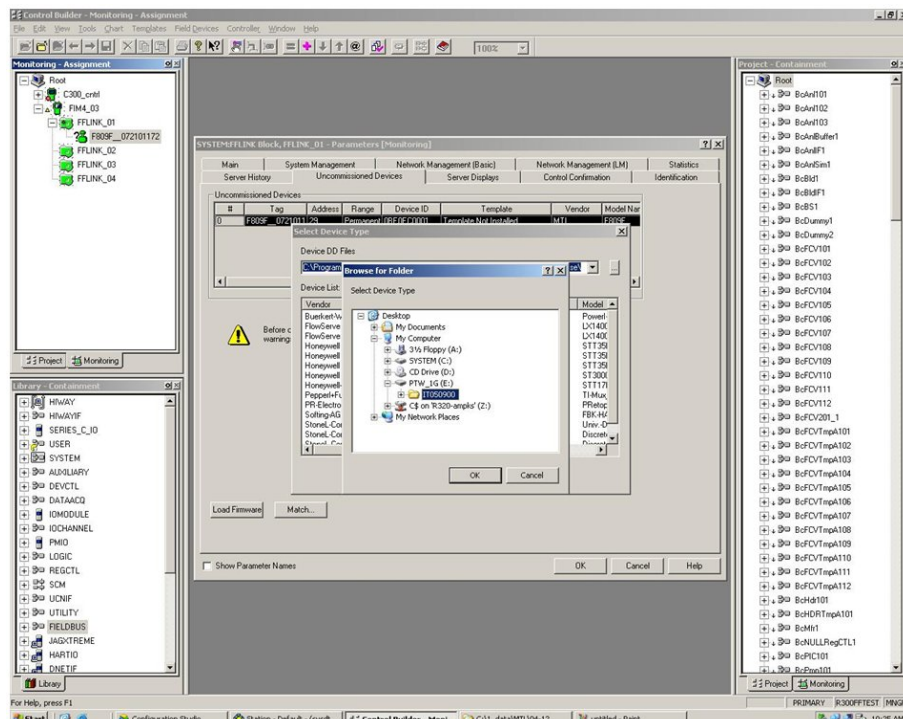

New F809F module being commissioned: Path to the DD file


Select the correct path to the DD file directory and click OK.
If this is the correct place, Control Studio will display the information about this DD, the vendor, the device, the revision and the model. Click OK if this is correct.




15th February 2008

Technical Support Note No. 601


Rev. 1

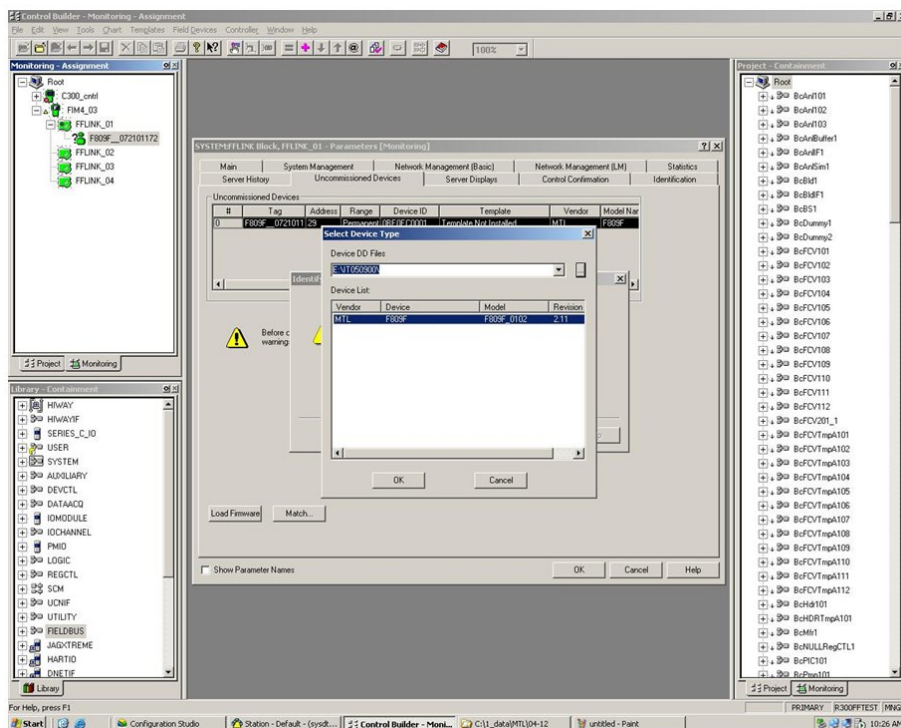

New F809F module being commissioned: DD files found in the directory

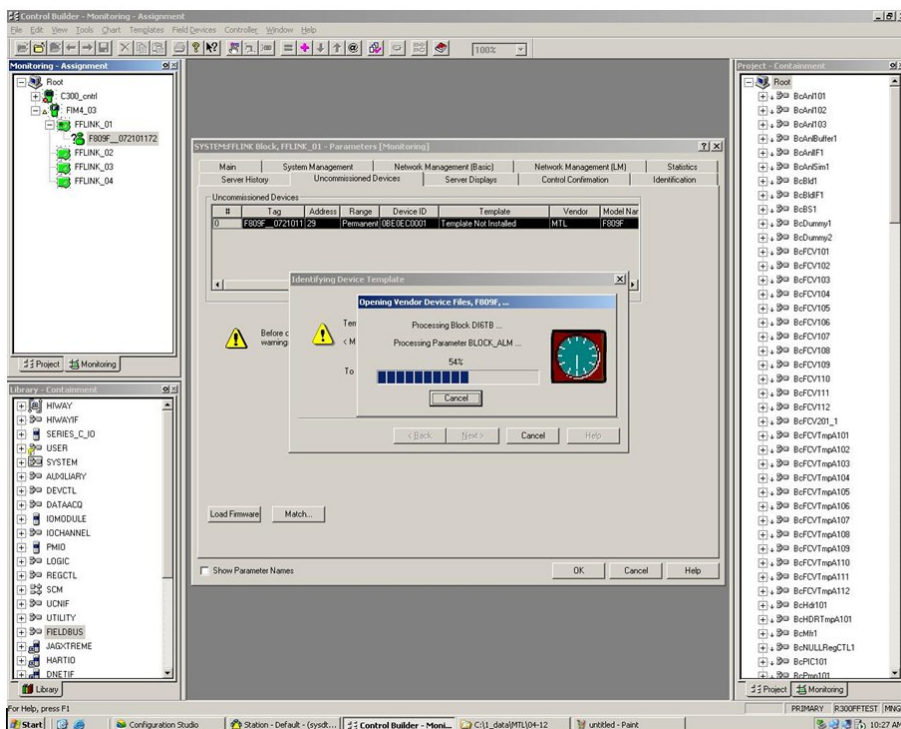

Control studio is loading the DD file

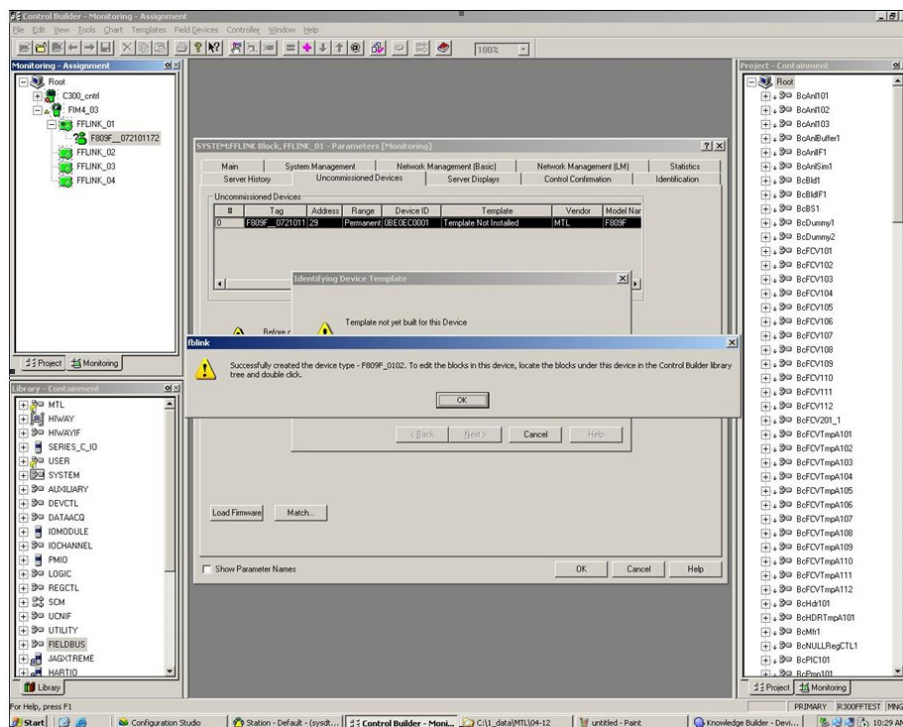

Template successfully created

After this stage, the device is added to the library and the question mark is gone in the monitoring view.

You have access to all information from the F809F module.

6.5 Fieldbus Device F809F

6.5.1 Resource Block

The resource block defines the physical resources of the device including type of measurement, memory, etc. The resource block also defines functionality, such as shed times, that is common across multiple blocks. The block has no linkable inputs or outputs.


The resource block supports two modes of operation as defined by the MODE_BLK parameter:

Automatic (Auto): The block is processing its normal background memory checks. In this mode, changes can be made to all configurable parameters.

Out of Service (OOS): The block is not processing its tasks. The BLOCK_ERR parameter shows Out Of Service. In this mode, changes can not be made to any configurable parameter.


In normal operation, the Block should be in AUTO.

Double click on the resource block.

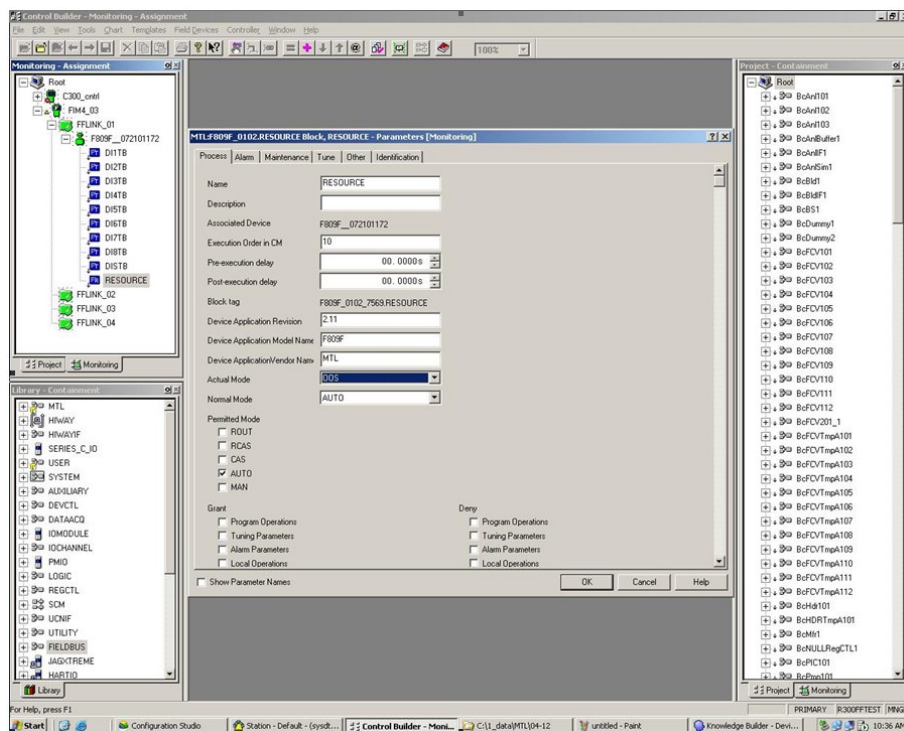


Resource block, Process Tab

Change the Actual Mode field from OOS to AUTO

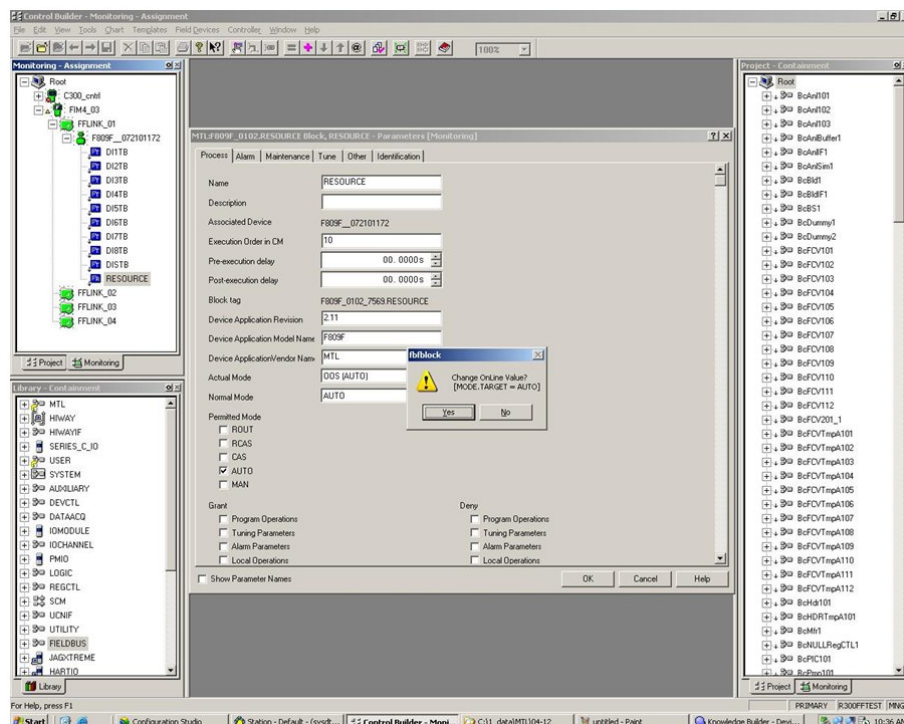

Resource block, Process Tab

In the Monitoring window you can differentiate an OOS block from an AUTO block by the colour of the icon. An OOS block will be displayed in blue, a block in AUTO will be green. The resource block is often used to get the software revision for both, the measurement board and the Fieldbus Communication Board.

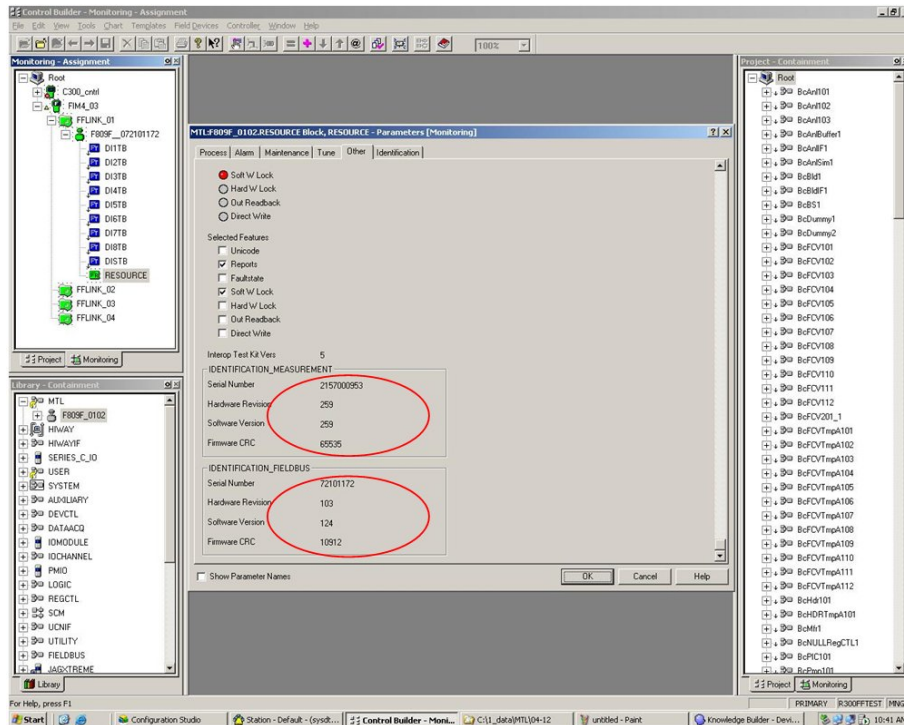

Resource block: Identification of the measurement board and the fieldbus board

6.5.2 Transducer blocks


There are two types of transducer block in our device:

- Sys TB: System Transducer Block
- Seg TB: Segment Transducer Block

The transducer block supports two modes of operation as defined by the MODE_BLK parameter

- **Automatic (Auto):** The block is processing its normal background memory checks. In this mode, changes can be made to all configurable parameters.
- **Out of Service (OOS):** The block is not processing its tasks. The BLOCK_ERR parameter shows Out Of Service. In this mode, changes can not be made to any configurable parameter.

In normal operation these blocks should be in AUTO. In order to change the actual mode, you can open the transducer block and change the actual mode with the actual mode field or you can select all the blocks you want to modify the mode, right click and then select activate, selected items.

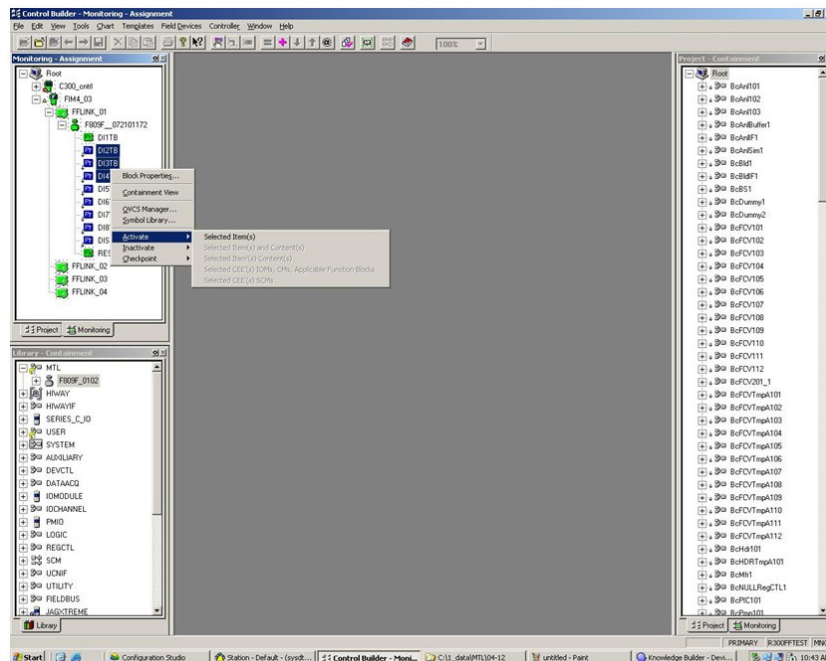


Change the block mode for 3 Transducer Blocks

6.5.2.1 Transducer Block Alarm Detection

If any alarm (except the new and removed device alerts) is set within the Transducer Block then the “NEED MAINTENANCE SOON BIT” is set in the BLOCK_ERR parameter.

Additionally, if any alarm is set in the Transducer Block, then the Segment alarm DI BLOCK PV_D will be set to 1. See chapter “configuring the DI block in the fieldbus cyclic messaging”, (6.5.3).

Double click on the Transducer Block in the Monitoring view. The Alarm TAB will show if you have a block Alarm, the maintenance tab will tell you what the alarm is.

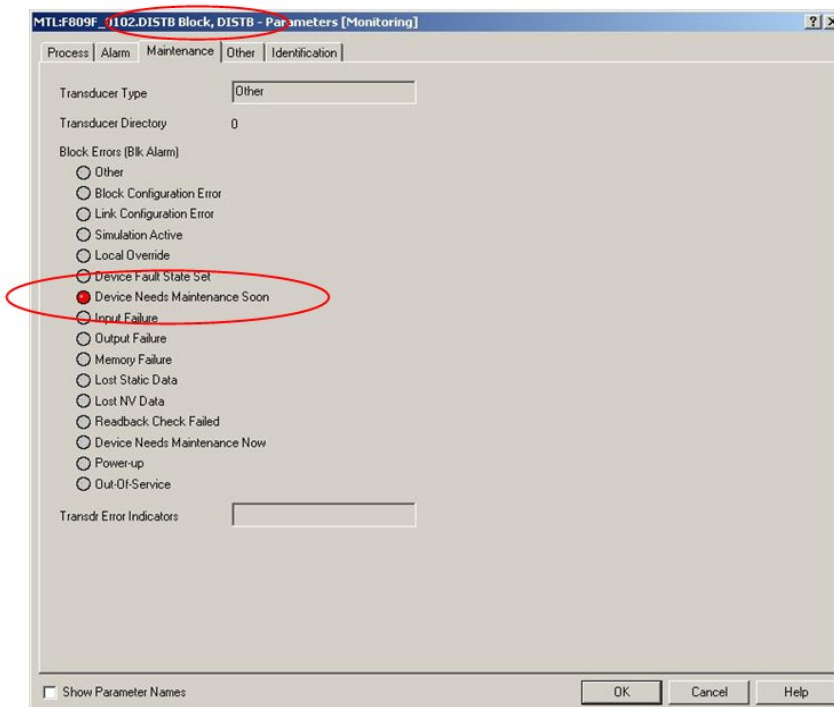

Device Need Maintenance Soon in the maintenance TAB for the system transducer block



6.5.2.2 System Transducer Block (SysTB)

There is one Sys TB in the F809F, which allows the user to view system and self-test alarms together with the system power feed voltages and temperature. The SysTB allows configuration of the time, the date and the segments monitored. Additionally, for each device on each of the 8 monitored fieldbus segments, the retransmission counter can be reset and device history data can be deleted from within this block.

The screenshot shows a software window titled "MTL:F809F_0102.DISTB Block, DISTB - Parameters [Monitoring]". It has a tabbed interface with "Process", "Alarm", "Maintenance", "Other", and "Identification" tabs. The "Alarm" tab is selected. The window displays the following parameters and settings:

Parameter	Value
Static Revision Number	13
Collection Directory	0
PValue	Discrete state 0
Power feed A voltage	23.1
Power feed B voltage	23
Module temperature	36

System alarms:

- ☐ Module temperature high alert
- ☐ Power feed B voltage low alert
- ☐ Power feed B voltage high alert
- ☐ Power feed A voltage low alert
- ☐ Power feed A voltage high alert

Self test fault alarms:

- ☐ Watchdog failure
- ☐ FLASH corrupt
- ☐ RAM error
- ☐ Relay stuck
- ☐ EEPROM data corrupt
- ☐ EEPROM not programmed
- ☐ Measurement processor in Fault State

POWER_FEED_A_VOLTAGE_LIMITS:

Parameter	Value
Power feed A voltage high alert	30
Power feed A voltage low alert l	19.2

POWER_FEED_B_VOLTAGE_LIMITS:

Parameter	Value
Power feed B voltage high alert	
Power feed B voltage low alert l	

At the bottom, there is a checkbox labeled "Show Parameter Names" and three buttons: "OK", "Cancel", and "Help".

System Transducer block: Measurement values for the power, temperature state of the self test fault



MTL-F809F_0102.DISTB Block, DISTB - Parameters [Monitoring]

Process | Alarm | Maintenance | Other | Identification

☐ EEPROM not programmed
☐ Measurement processor in Fault State

POWER_FEED_A_VOLTAGE_LIMITS

Power feed A voltage high alert: 30
Power feed A voltage low alert: 19.2

POWER_FEED_B_VOLTAGE_LIMITS

Power feed B voltage high alert: 30
Power feed B voltage low alert: 19.2

Module temperature high alert: 65

Processor reset
☐ Processor reset flag

Set date time: [calendar icon]

Set Monitored Segments

☒ Segment 1
☐ Segment 2
☐ Segment 3
☐ Segment 4
☐ Segment 5
☐ Segment 6
☐ Segment 7
☐ Segment 8

Reset Retransmit Counters: [text box]
Delete History Data: [text box]

☐ Show Parameter Names

OK Cancel Help



System Transducer block: Alarm limits and monitored segment

6.5.2.2.1 Methods

For Foundation Fieldbus hosts or configuration tools that support DD methods, there are 3 configuration methods available in the Systems Transducer Block. These methods are included with the Device Description (DD) software.

- Setting Date and Time
- Resetting retransmission counters
- Deleting device history data


To access the methods select the device in the Monitoring view, go to the field device menu and click on Method Manager.

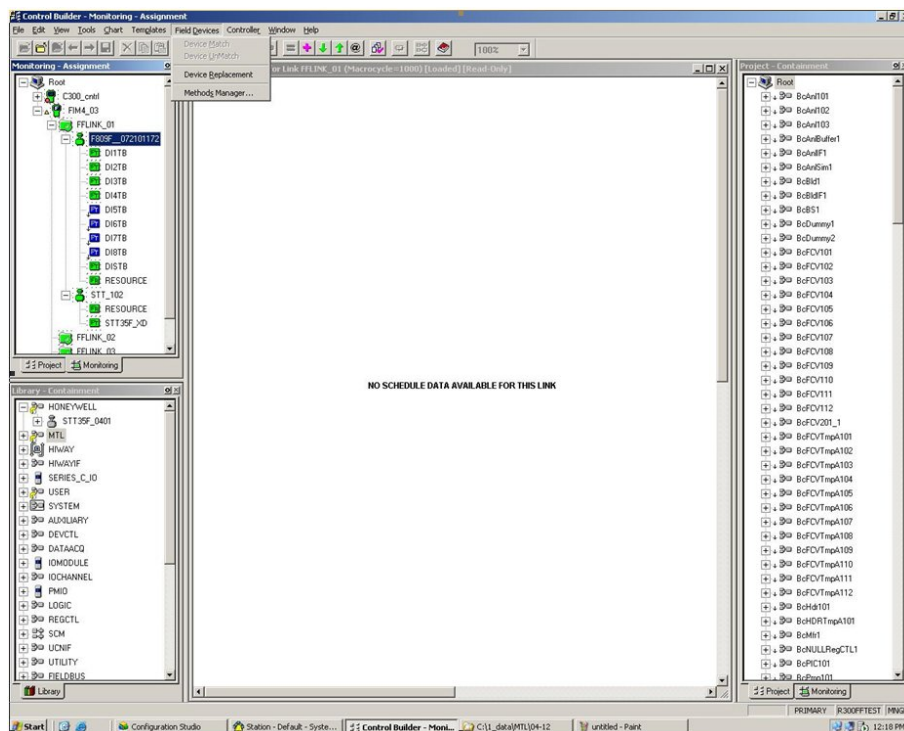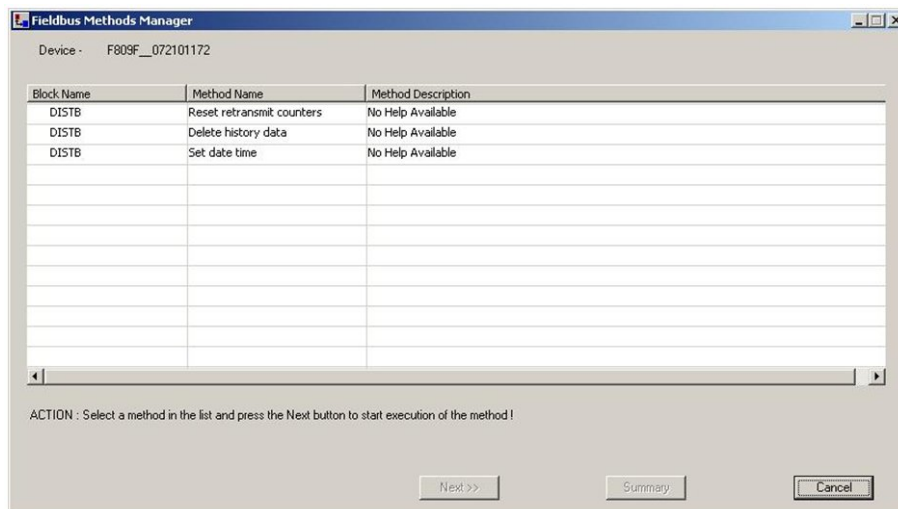*Access to the Method manager**Method manager: 3 methods available*

Choose the required method to run. In this example, **Reset retransmit counters** was selected

Reset retransmit counters

- All retransmission counters: Delete all counters
- Desired segment and all its devices: Delete counters for one complete segment with all devices
- Desired segment: Delete counters for the segment (keep the devices counters)
- Desired device on a specific segment: Delete counter for a specific device

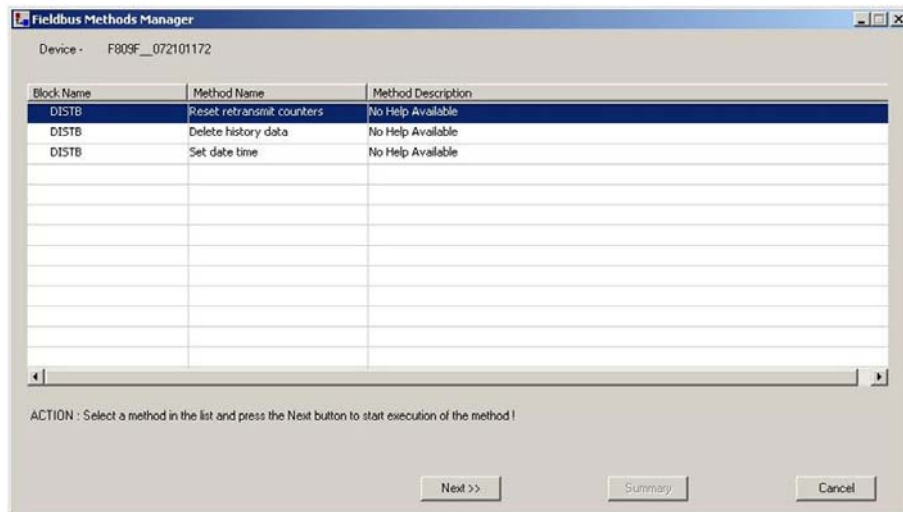

Method manager: Select the method and click next

6.5.2.3 Segment Transducer Block (SegTB)

Each of the eight monitored segments are supported by a Seg TB that provides all the measured parameters and associated alarms for the fieldbus segment and devices. You can assign segment and device tags within this block.

The segment and device alarm limits may also be changed in this block.

Warning: the tags are held in volatile memory. If both power feeds fail at the same time, or the F809F is removed from the carrier, then the segment and device tag data will be lost.



MTL:F809F_0102.D11TB Block, D11TB - Parameters [Monitoring]

Process Alarm Maintenance Other Other2 Other3 Other4 Other5 Identification

Static Revision Number	6
Collection Directory	0
PValue	Discrete state 0
Segment tag	FFLINK_01
Segment voltage	22.9
Average low frequency noise	5
Average if-band frequency noise	11
Average high frequency noise	7
Peak low frequency noise	45
Peak if-band frequency noise	73
Peak high frequency noise	48
Number of devices on live list	3
LAS tag	FFLINK_01
LAS address	16
LAS signal level	822
Lowest signal level tag	Tag not assigned
Lowest signal level address	21
Lowest signal level	670
Total retransmissions on segment	0
Retransmission rate on segment	0

☐ Show Parameter Names

OK Cancel Help

Segment tag and segment measurements, information on the LAS

MTL:F809F_0102.D11TB Block, D11TB - Parameters [Monitoring]

Process Alarm Maintenance Other Other2 Other3 Other4 Other5 Identification

Total retransmissions on segment	0
Retransmission rate on segment	0

DEVICE_DATA_1

Device address	16
Device tag	FFLINK_01
Signal level	818
Retransmissions	0
Retransmission rate	0
Reserved	0
Inverted signal	1
Device live	1


DEVICE_DATA_2

Device address	29
Device tag	F809_072101172
Signal level	960
Retransmissions	0
Retransmission rate	0
Reserved	0
Inverted signal	0
Device live	1

☐ Show Parameter Names

OK Cancel Help

Device data for 32 devices

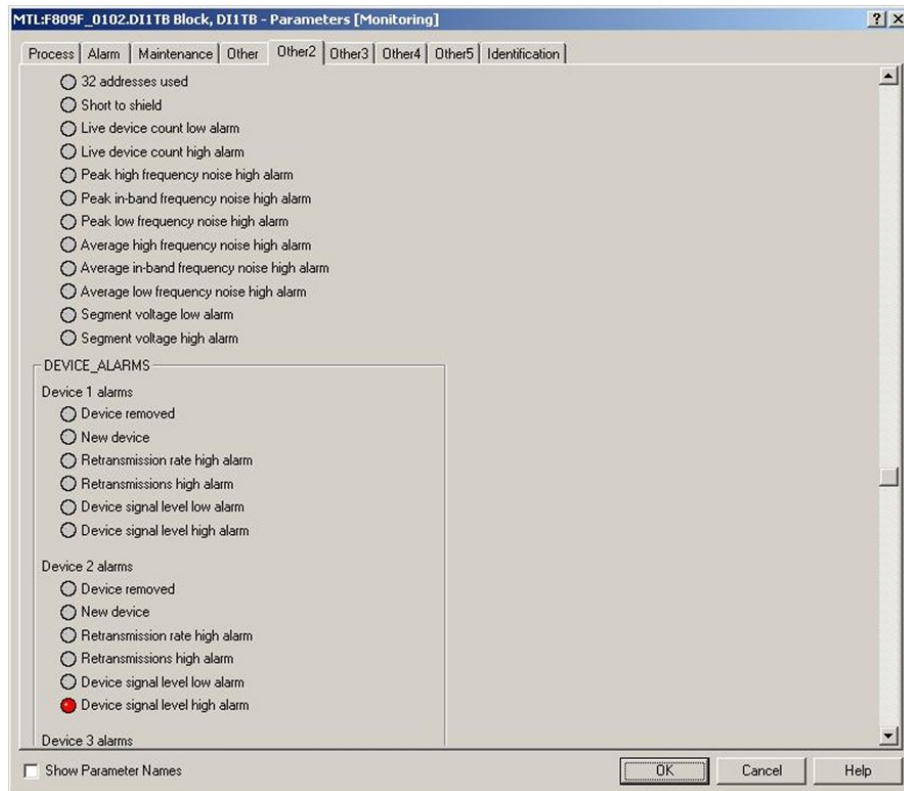

Other2 TAB: Segment alarms and Device alarms



MTL:F809F_0102.DI1TB Block, DI1TB - Parameters [Monitoring]

Process | Alarm | Maintenance | Other | Other2 | Other3 | Other4 | Other5 | Identification

DEVICE_1_SIGNAL_LEVEL_LIMITS

Device 1 signal level low alert ltr 1200

Device 1 signal level low alert ltr 1200

Device 1 retransmissions limit 65535

Device 1 retransmission rate hig 0.1

DEVICE_2_SIGNAL_LEVEL_LIMITS

Device 2 signal level low alert ltr 900

Device 2 signal level low alert ltr 900

Device 2 retransmissions limit 65535

Device 2 retransmission rate hig 0.1

DEVICE_3_SIGNAL_LEVEL_LIMITS

Device 3 signal level low alert ltr 1200

Device 3 signal level low alert ltr 1200

Device 3 retransmissions limit 65535

Device 3 retransmission rate hig 0.1

DEVICE_4_SIGNAL_LEVEL_LIMITS

Device 4 signal level low alert ltr 1200

Device 4 signal level low alert ltr 1200

Device 4 retransmissions limit 65535


Device 4 retransmission rate hig 0.1

☐ Show Parameter Names

OK Cancel Help

Other 3 to Other 5 TAB: Segment alarm limits and retransmissions limit



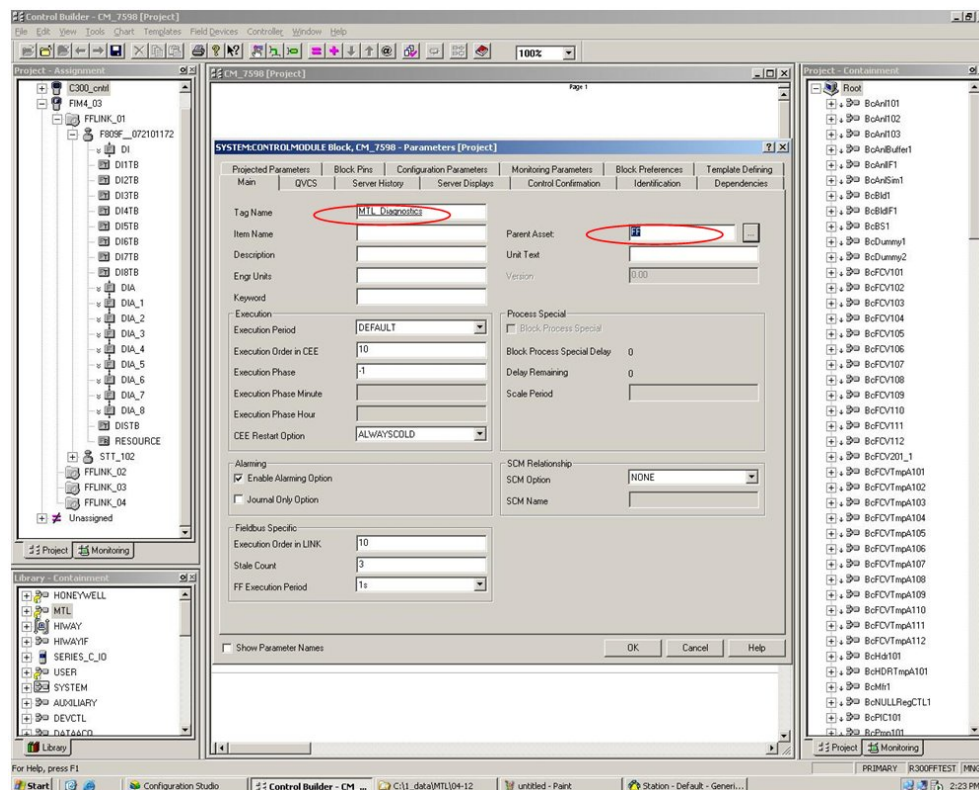


Definition of the control module

You can give a name to the control module and assign this module to an asset. This is important for the alarming so the operator would only receive an alarm for this specified asset.

Click OK, the module is now open in the main window.


Select the project Tab and drag and drop from the F809F device the DI function block you want to use in your application.

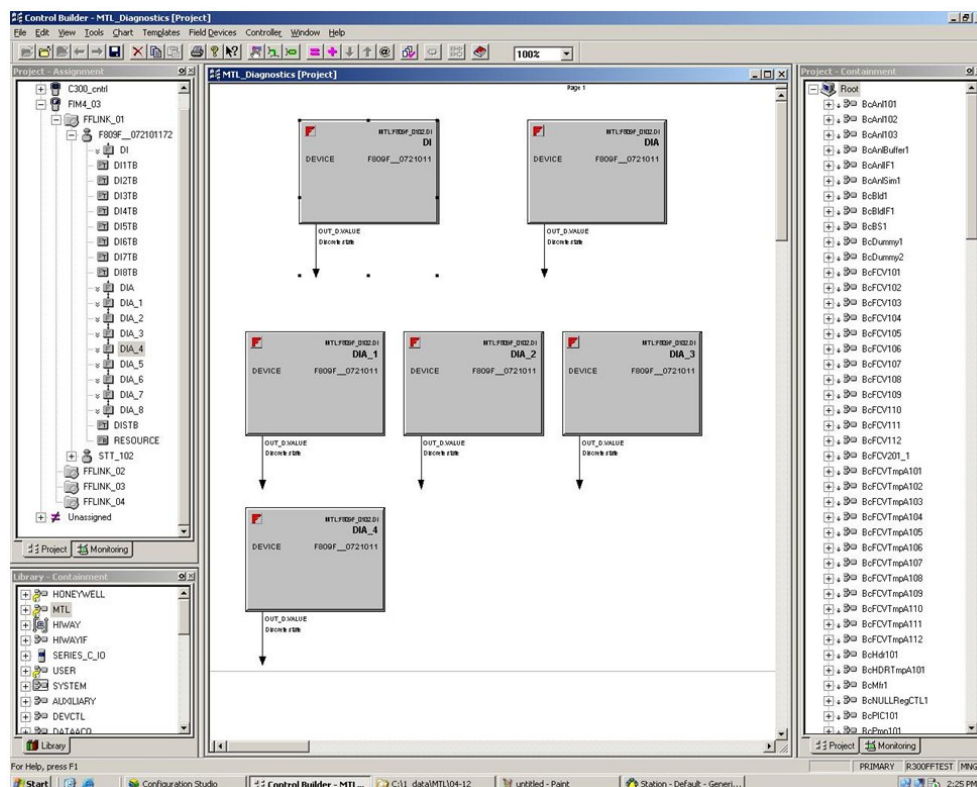

DI Function blocks in the control module

Drag and drop the DI function blocks in the application window. Six DI function blocks are shown in this example.

In order to configure the DI block double click on the block you want to configure.

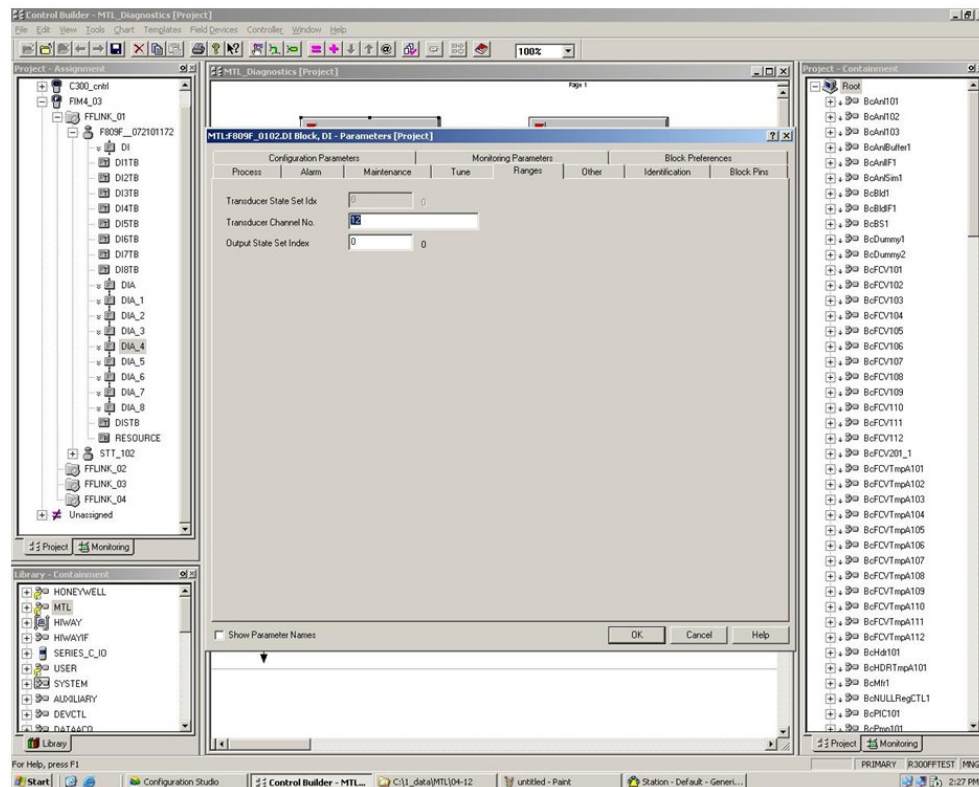

Function block configuration


Open the Process TAB of the DI block in order to configure the channel value: 12, this block will be used for the System, Segment / device or self test fault alarms

- *Alarm DI Block: PV_D will be set to 1 if any system alarm, segment / device alarm or self-test fault alarm bits are set. Selected by channel value 12.*
- *System Alarm DI Block: PV_D will be set to 1 if any System alarm and self-test fault alarm bits are set. Selected by channel value 13.*
- *Segment Alarm DI Block 1-8: PV_D will be set to 1 if any of the segment / device alarm bits are set for the specific segment. Selected by channel value 14 – 21 for segments 1 – 8.*

Once you have configured all your blocks, close the window and save your configuration.


You now need to assign the application to the controller. If you go to the project tab, you should see your control module as unassigned.

To assign the module, click on the pink “=” sign.

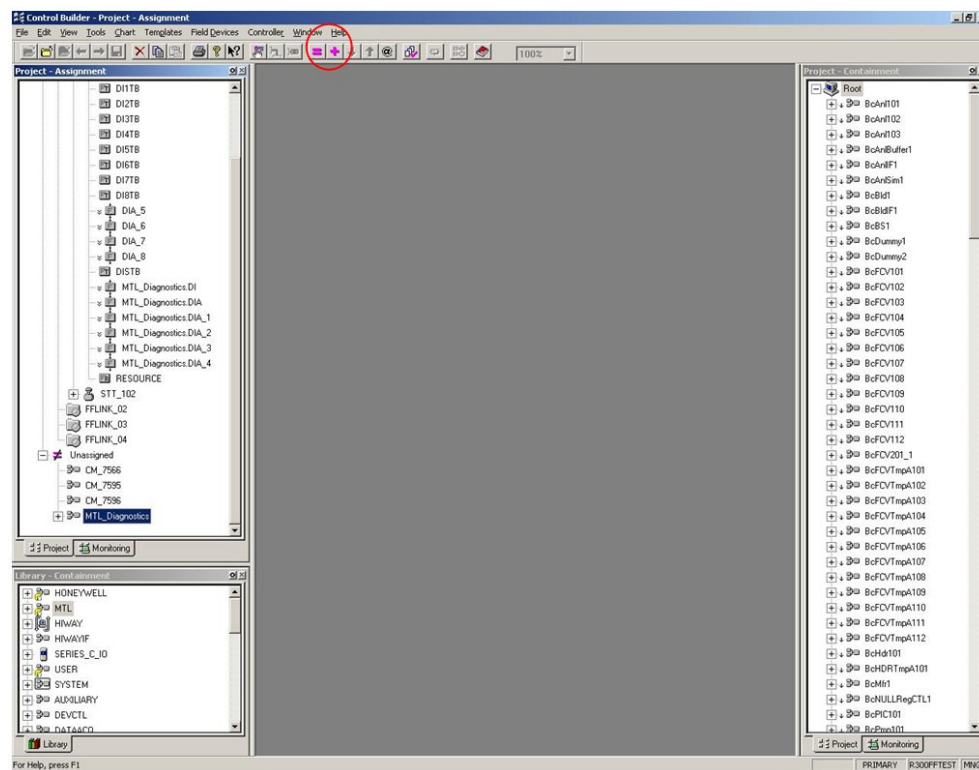

Control module assignment

You then will have access to the execution environment assignment window

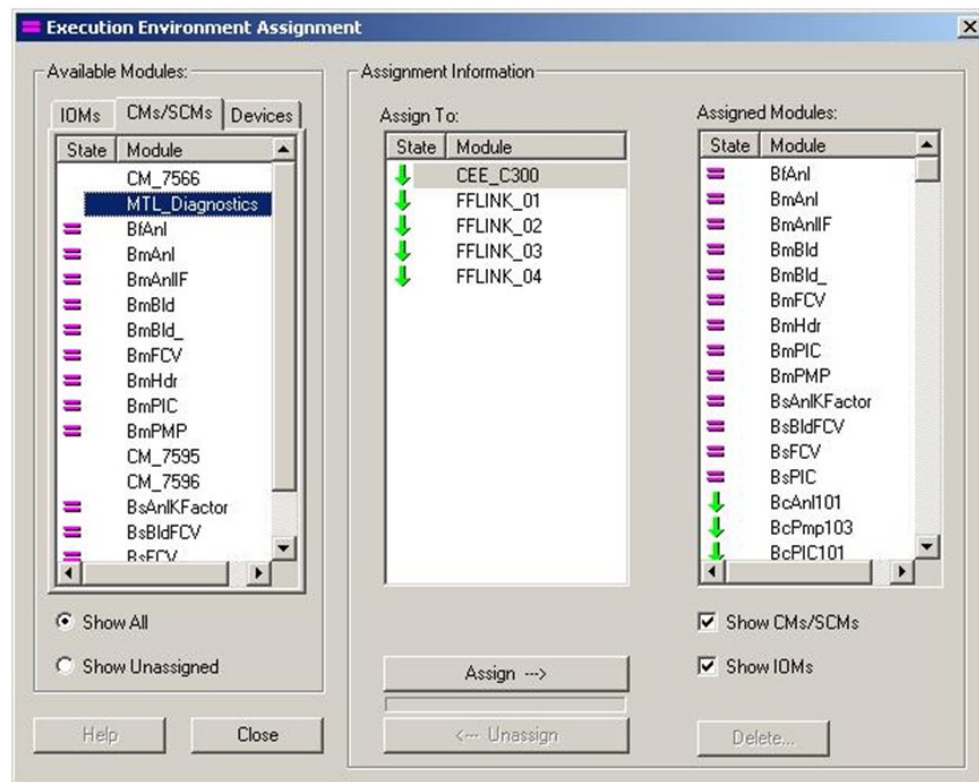


Execution environment assignment




Select your module in the available modules, select your target and click assign. The target can either be the controller CEE_C300 or the FFLINK_01. In our example we have selected the controller in order to access the alarms in the Operator Station.

Once assigned to the controller, you have to load the application to the controller. Go to the monitoring view, click on your control module, right click and Load.

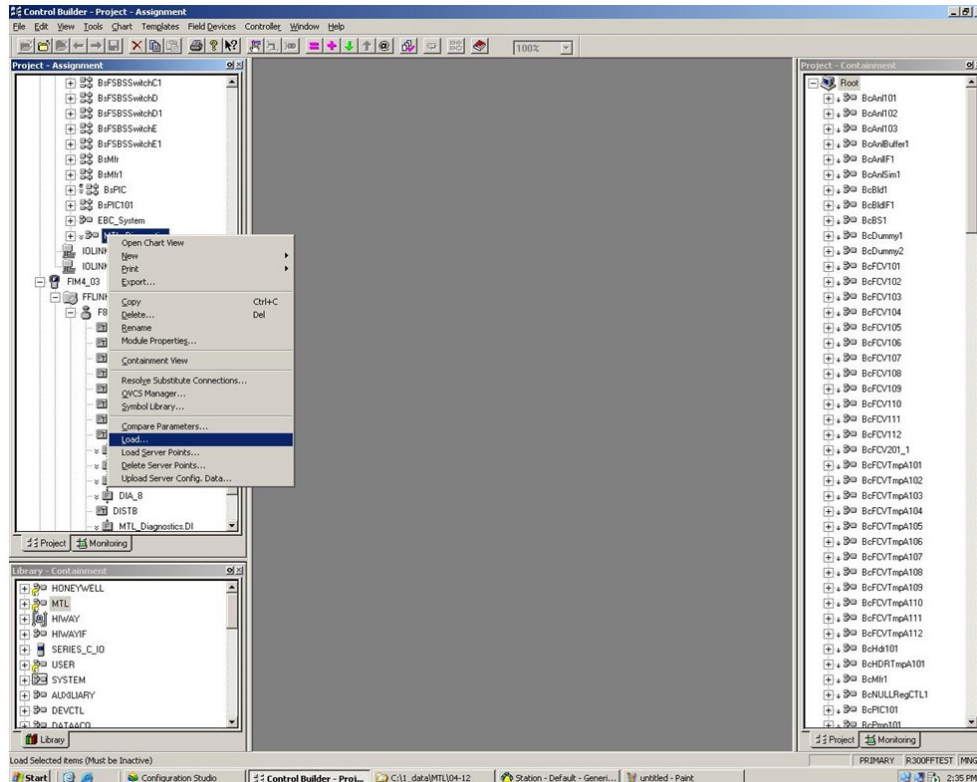


Load the application to the controller

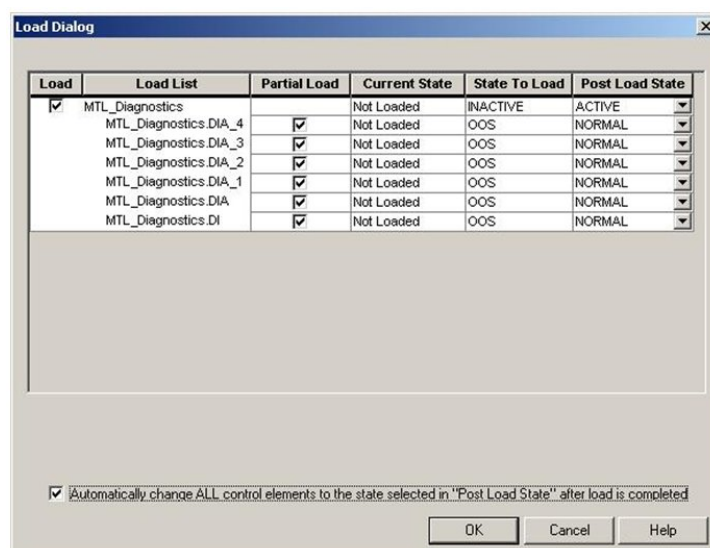

Select the module you want to load to the controller



Once loaded, you can have access to the status of the DI block on line. Go to the monitoring view and select your application. The icon should now be green.

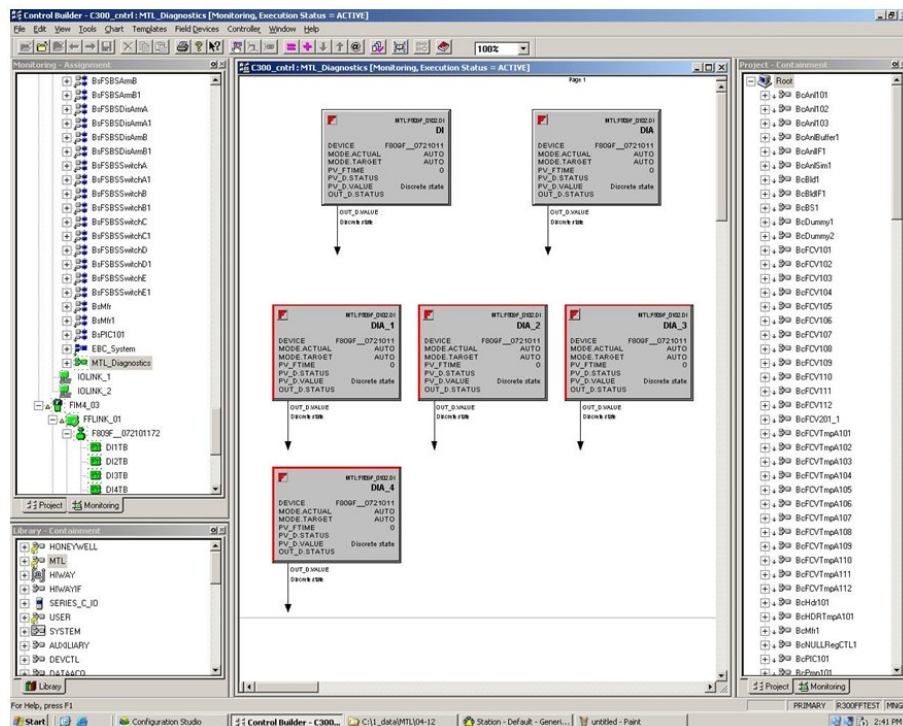


Online monitoring of the control module

You can modify the configuration for the alarming. The DI block is set to one if the Need Maintenance Soon bit is set. So you want an alarm only if the DI block is set to one. Double click on the block and select the alarm tab.

Condition	Limit	Unit	Priority	Alarm Disable	Time of Last Change
☐ HI HI				☐	
☐ HI				☐	
☐ DEV HI				☐	
☐ DEV LO				☐	
☐ LO				☐	
☐ LO LO				☐	
ALARM_HYS					
☐ DISCRETE	1		5	☐	1/1/1972 1:00:00 AM
☐ FAIL				☐	
☐ ACCEPT				☐	
☐ IGNORE				☐	
☐ BLOCK ALARM				☐	1/1/1972 1:00:00 AM


Alarm configuration for the function block

With this new configuration, the block will be in alarm only if the PV value is 1.

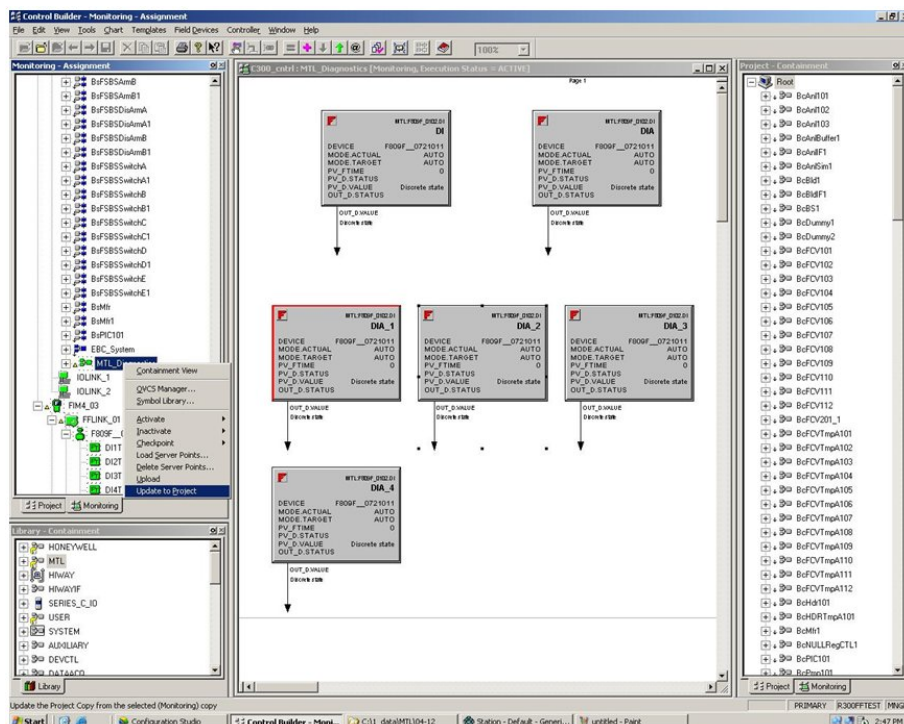

Online monitoring of the control module with the new alarm configuration

With function blocks in alarm, you can have access to the alarm directly in the Operator Station.

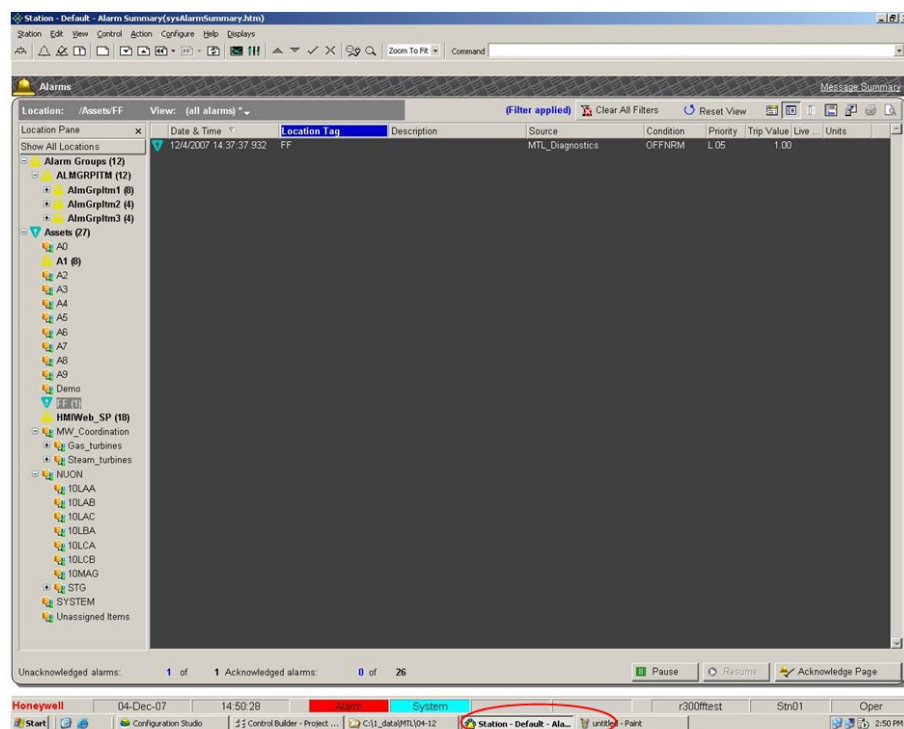

Operator station: MTL Diagnostics control module in alarm