# **Eaton EPCT Fire**

Touchscreen based electric fire pump controllers





# **Product Description**

The EPCT Fire features an advanced, 7" color touchscreen that incorporates both the fire pump controller (FPC) and automatic transfer switch (ATS) functionality into one, intuitive display.

Designed solely with the consumer in mind, the EPCT Fire enables technicians to commission the fire pump controller faster; troubleshooting is made easier and is more effective through the use on-screen history filtering and diagnostic monitoring.

All full-service fire pump controllers can be offered in either full-voltage or reduced voltages starting methods:

- FD/FT20 Limited service
- FD/FT30 Across-the-line
- FD/FT40 Part winding
- FD/FT50 Primary resistor
- FD/FT60 Autotransformer
- FD/FT70 WYE-Delta (Star-Delta) open transition
- FD/FT80 WYE-Delta (Star-Delta) closed transition
- FD/FT90 Soft start

## **Product Features**

# **Touchscreen Display**

### General

Speed of commissioning, configuration and troubleshooting are more critical to businesses today more than ever. Through the use of a 7" touchscreen, users can easily program all site specific setpoints through an intuitive menu structure, view all critical system information, and troubleshoot quickly and accurately via on-screen diagnostics.

# Automatic Transfer Switch Integration

Going away from the multiple screen approach, the EPCT Fire touchscreen integrates both the Fire Pump Controller and Automatic Transfer Switch into one display enabling the user to effectively manage programming and operation from one source.

# Commissioning Simplified

The Startup tab features all controller related commissioning tasks such as: Quick Setup, Setup Phase Reversal, Flow Test, Manual/Automatic Starts, and Test Alarms.

# **UL Type Rating**

The touchscreen display has been tested in accordance with UL and achieves a type 4X rating.

# **Programming Menu**

# Startup tab

This tab system enables the user to complete all controller related commissioning tasks. Each sub-menu within the Startup tab guides the user through step-by-step, intuitive screens to quickly and effectively complete the startup and commissioning process.

### Panel Setup tab

All variables relating to the panel, such as language, date and time, nominal voltage, etc., are located in the Panel Setup tab. For all programming points within the Panel Setup tab, refer to the instruction manual: MN124016EN.

# Help tab

The help tab provides end users service contact information from the company that commissioned the unit (if programmed), factory contact information, and a QR code to download the instruction manual onto a mobile device.

# Pressure Settings tab

Contains a variety of pressure settings that may be programmed to suit site requirements. Some key settings include: Start Pressure, Stop Pressure, Low Pressure Alarm, High Pressure Alarm, Low Suction Shutdown, Low Foam Shutdown, Pressure Units, and the ability to calibrate the transducer.

# Timer Values tab

This tab system contains the programming point for all fire pump controller related timers. These timers are: Minimum Run Time, Acceleration Time, Sequential Start Time, Fail to Start Time, Fail to Stop Time, and Weekly Motor Test Timer.

# ATS Settings tab (if equipped)

The ATS Settings tab will only be enabled on units equipped with an automatic transfer switch. Programming points within this tab only pertain to the operation of the transfer switch.

# Alarm Setpoints tab

There are seven (7) programmable alarm points within this tab system: Phase Reversal, Phase Failure Alarm Setpoint, Motor Overload Setpoint, Transducer Fail Pump Start, Abort Motor Test on Low Voltage, Voltage Alarm Settings, and Frequency Alarm Settings.

# Inputs/Outputs tab

The I/O board is capable of accepting ten (10) custom inputs that can be programmed for seventeen (17) predefined conditions. The output relays can be programmed for sixty-one (61) separate conditions. Additional relays can be added through the use of a single or multiple optional relay boards.

# History/Statistics/Diagnostics tab

This tab system allows the customer/technician to view historical data, controller statistics, controller diagnostics, and startup information. To assist, the controller can filter for specific events or between certain dates to speed up troubleshooting.

# I/O Board

# Power Supply

The redesigned I/O board is equipped with a full voltage power supply capable of accepting voltage inputs between 200-600VAC three phase, or 240VAC single phase.

# **Customer Input Connections**

Connection terminals are provided at the top of the I/O board for external customer connections that can be programmed through the touchscreen display.

# Output Relays

The I/O board features four (4), 250VAC, 8A, 2 Form-C relays designated for the following: Common Alarm, Power/Phase Failure, Phase Reversal, and Pump Run. Each relay socket has a surface mount LED to indicate the relay's coil status.

# Optional Boards

The controller can accept up to four (4) additional option boards: optional relay board, MODBUS communication board, secondary 4-20mA device board, and an alarm board. The controller has provisions to allow future optional boards to be added with plug-and-play functionality.

# **Other Components**

### Drain Valve Solenoid

All full-service EPCT Fire controllers are equipped with a drain valve solenoid used for manual or automatic motor tests.


# External USB Port

The USB port allows the user to download historical messages, statistics, diagnostic information, startup file, and current controller configuration to any USB device with FAT16 or FAT 32 formatting.

### Enclosures

The EPCT Fire controllers come standard with UL type 2 (drip-proof) enclosures. Optional enclosures are available and include: type, 3, 3R, 4, 4X, and 12.

# **Display Screens**

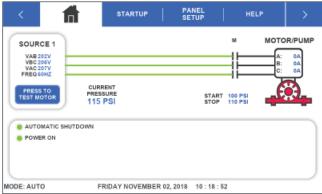

Home tab - without ATS



**Common Alarm Settings** 




Message History

# **Emergency Start Operator**

A mechanically operated emergency start handle (ESH) will mechanically activate the motor contactor(s) independently from any electrical control circuits.

# **Standards & Certifications**

All EPCT Fire full-service, electric fire pump controllers meet or exceed the requirements of Underwriters Laboratories and Underwriters Laboratories Canada [UL218 and UL1008], Factory Mutual, the Canadian Standards Association, New York City building code, CE mark, U.B.C./C.B.C. seismic requirements, and are built to the latest edition of NFPA 20 standards. The EPCT Fire electric fire pump controllers are suitbale for use as service entrance equipment - does not meet CEC requirements for Canada.

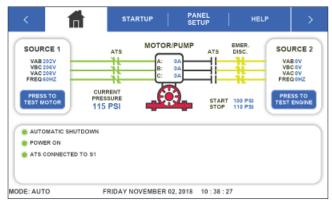

Home tab - with ATS



**Notification Area Settings** 



**Customer Service Contact** 

# **Quick Specification Overview**

 
Starting Conditions				_	Withstand Ratings			
Starting Method	Starting Voltage	Starting Current	Staring Torque	Motor Connections	Voltage	HP	Short Circuit Withstand Rating	
FD/FT20	Full	600%	100%	2 (SP) or 3	200-208V	5-30	25,000	
Limited Service					220-240V	5-30	25,000	
					380-415V	5-30	25,000	
					440-480V	5-30	25,000	
					575-600V	5-30	18,000	
					240V (SP)	5-15	10,000	
FD/FT30	Full	600%	100%	3	200-208V	5-150	100,000	
Across-the-Line					220-240V	5-200	100,000	
					380-415V	5-300	100,000	
					440-480V	5-400	100,000	
					575-600V	5-500	25,000	
FD/FT40	Reduced	65%	50%	6	200-208V	5-250	100,000	
Part Winding					220-240V	5-300	100,000	
					380-415V	5-500	100,000	
					440-480V	5-600	100,000	
					575-600V	5-700	25,000	
FD/FT50	Reduced	50%	42%	3	200-208V	5-150	100,000	
Primary Resistor					220-240V	5-200	100,000	
					380-415V	5-300	100,000	
					440-480V	5-400	100,000	
					575-600V	5-500	25,000	
FD/FT60	Reduced	45%	42%	3	200-208V	5-150	100,000	
Autotransformer					220-240V	5-200	100,000	
					380-415V	5-300	100,000	
					440-480V	5-400	100,000	
					575-600V	5-500	25,000	
FD/FT70	Reduced	33%	33%	6	200-208V	5-250	100,000	
WYE-Delta					220-240V	5-300	100,000	
(Star-Delta) Open Transition					380-415V	5-500	100,000	
					440-480V	5-600	100,000	
					575-600V	5-700	25,000	
FD/FT80	Reduced	33%	33%	6	200-208V	5-250	100,000	
WYE-Delta (Star-					220-240V	5-300	100,000	
Delta) Closed Transition					380-415V	5-500	100,000	
					440-480V	5-600	100,000	
					575-600V	5-700	25,000	
FD/FT90	Reduced	Adjustable	Adjustable	3	200-208V	5-150	100,000	
Soft Start		-	-		220-240V	5-200	100,000	
					380-415V	5-300	100,000	
					440-480V	5-400	100,000	
					575-600V	5-500	25,000	

Eaton 1000 Eaton Boulevard Cleveland, OH 44122 United States Eaton.com

Electrical Sector Canadian Operations 5050 Mainway Burlington, ON L7L 5Z1 Canada EatonCanada.ca CHFire.com



© 2018 Eaton All Rights Reserved Printed in Canada Publication No. BR124053EN / 001 January 2018















# EPCT FIRE - FD90 SMALL HP DIMENSIONAL DRAWING - TYPE 2, 3, 3R, 4, 4X, 12

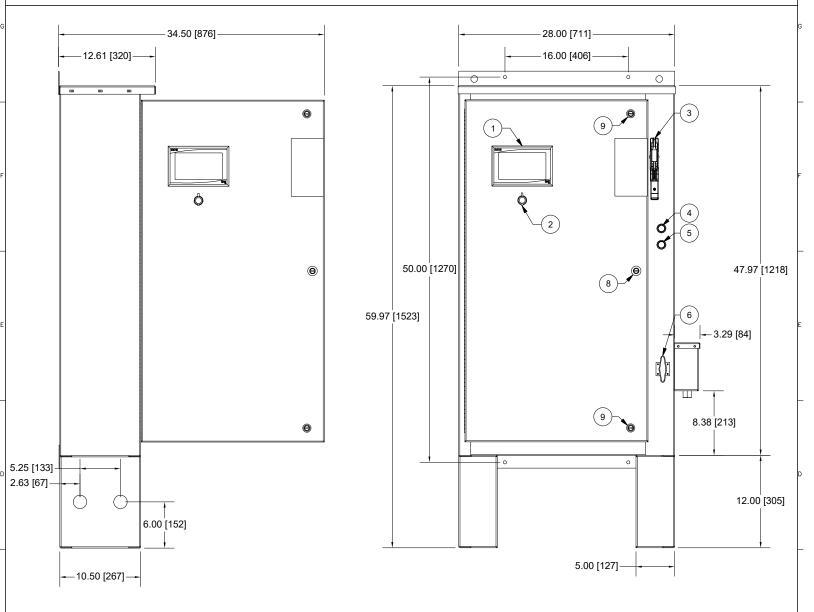

- 1 EPCT TOUCHSCREEN
- 2 EXTERNAL USB PORT
- 3 MAIN POWER SWITCH 4 - START PUSHBUTTON
- 5 STOP PUSHBUTTON
- 6 MSH (EMERGENCY START HANDLE)
- 7 RECOMMENDED CABLE ACCESS (BOTTOM ONLY)
- 8 LOCKABLE QUARTER-TURN
- 9 STANDARD QUARTER-TURN

# NOTES:

- 1 DIMENSIONS: in [mm] 2 ALL ENCLOSURES FINISHED IN RED
- 3 STANDARD ENCLOSURE: TYPE (NEMA) 2

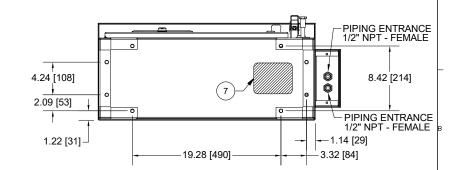


Line voltage	Withstand rating	]		Approximate weight
	Standard	Intermediate	High	Lbs. (Kg)
200 - 208V	100,000	150,000	200,000	270 (123)
220 - 240V				
380 - 415V				
440 - 480V				
550 - 600V	25,000	100,000		
	200 - 208V 220 - 240V 380 - 415V 440 - 480V	Standard   200 - 208V   100,000	Standard         Intermediate           200 - 208V         100,000         150,000           220 - 240V         380 - 415V         440 - 480V	Standard         Intermediate         High           200 - 208V         100,000         150,000         200,000           220 - 240V         380 - 415V         440 - 480V         480V

THE INFORMATION ON THIS DOCUMENT IS CREATED BY EATON. IT IS DISCLOSED IN CONFIDENCE AND IS ONLY TO BE USED FOR THE PURPOSE IN WHICH IT IS SUPPLIED.	REVIS	ION	DATE	DRAWING NO.
LES RENSEIGNEMENTS CI-DESSUS ONT ÉTÉ ÉLABORÉS PAR EATON. ILS VOUS SONT DIVULGUÉS EN TOUTE CONFIANCE ET LEUR UTILISATION SE LIMITE AUX SEULES FINS POUR LESQUELLES ILS VOUS SONT TRANSMIS.	003		10/05/23	CE16490H17



# EPCT FIRE - FD90 LARGE HP DIMENSIONAL DRAWING - TYPE 2, 3, 3R, 4, 4X, 12

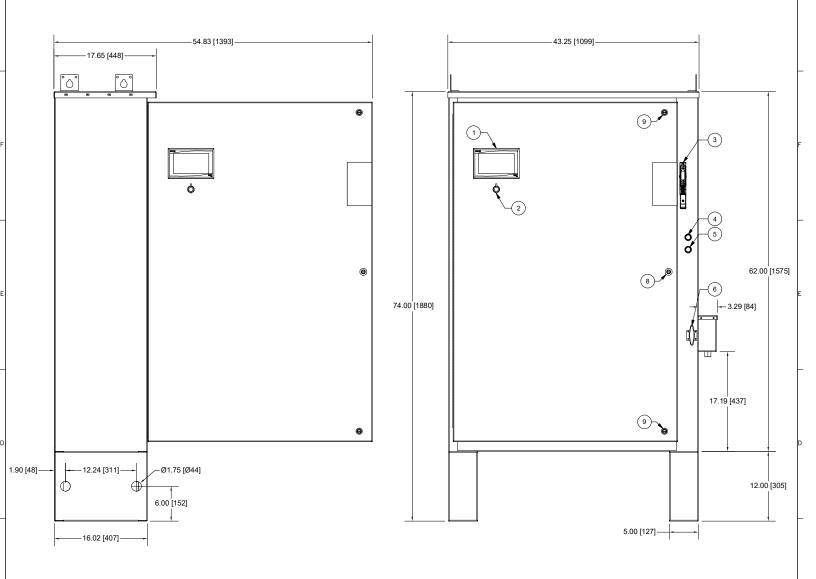

- 1 EPCT TOUCHSCREEN 2 EXTERNAL USB PORT 3 MAIN POWER SWITCH

- 3 MAIN POWER SWITCH
  4 START PUSHBUTTON
  5 STOP PUSHBUTTON
  6 MSH (EMERGENCY START HANDLE)
  7 RECOMMENDED CABLE ACCESS (BOTTOM ONLY)
  8 LOCKABLE QUARTER-TURN
  9 STANDARD QUARTER-TURN

1 - DIMENSIONS: in [mm] 2 - ALL ENCLOSURES FINISHED IN RED 3 - STANDARD ENCLOSURE: TYPE (NEMA) 2


		PIPING ENTRANCE 1/2" NPT - FEMALE	:
11.26 [286]		14.00 [356]	
<u> </u>	PIPING ENTRANCE — 1/2" NPT - FEMALE		
1.11 [28] -	- 34.30 [871]	1.37 [35] 3.35 [85]	В

Motor HP	Line voltage	Withstand rating	]		Approximate weight
		Standard	Intermediate	High	 Lbs. (Kg)
50 - 150	200 - 208V	100,000	150,000	200,000	655 (296)
60 - 200	220 - 240V				
100 - 300	380 - 415V				
125 - 400	440 - 480V				
125 - 400	550 - 600V	25,000	100,000		

ı	THE INFORMATION ON THIS DOCUMENT IS CREATED BY EATON. IT IS DISCLOSED IN CONFIDENCE AND IS ONLY TO BE USED FOR THE PURPOSE IN	REVISION	DATE	DRAWING NO.
ı	WHICH IT IS SUPPLIED.  LES RENSEIGNEMENTS CI-DESSUS ONT ÉTÉ ÉLABORÉS PAR EATON. ILS VOUS SONT DIVULGUÉS EN TOUTE CONFIANCE ET LEUR UTILISATION SE LIMITE	003	10/05/23	CE16490H18
ı	AUX SEULES FINS POUR LESQUELLES ILS VOUS SONT TRANSMIS.	003	10/03/23	CE 104901110



# EPCT FIRE - FD90 THREE PHASE WIRING SCHEMATIC

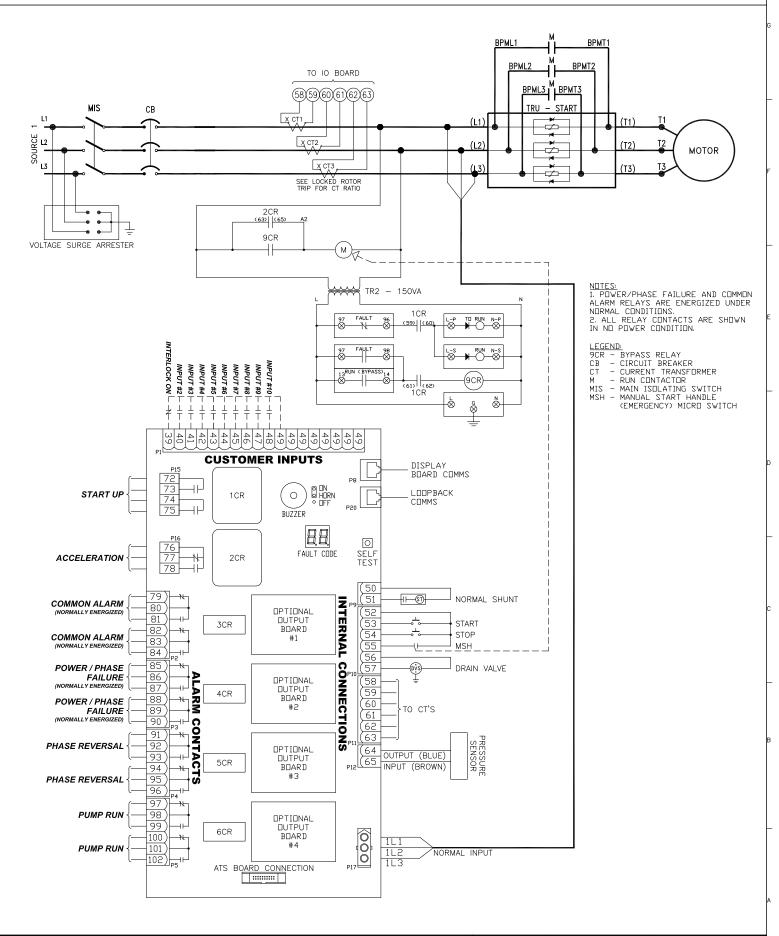

THE INFORMATION ON THIS DOCUMENT IS CREATED BY EATON. IT IS DISCLOSED IN CONFIDENCE AND IS ONLY TO BE USED FOR THE PURPOSE IN WHICH IT IS SUPPLIED.

LES RENSEIGNEMENTS CI-DESSUS ONT ÉTÉ ÉLABORÉS PAR EATON. ILS VOUS SONT DIVULGUÉS EN TOUTE CONFIANCE ET LEUR UTILISATION SE LIMITE AUX SEULES FINS POUR LESQUELLES ILS VOUS SONT TRANSMIS.

REVISION 001

DATE 09/25/18 DRAWING NO.
CE16492H17



# EPCT FIRE - FD/FT90 THREE PHASE FIELD CONNECTIONS

# **Line Terminals Connections**

# Line Voltage

# Max HP

200-208	220-240	380-415	440-480	575-600	Line Lugs (QTY.) & Cable Size per Ø	Service Ground Lugs (QTY.) & Cable Size per Ø
25	30	40	60	75	(1) #14 - 1/0 (CU/AL)	(1) #14 - 2/0 (CU/AL)
40	50	75	100	100	(1) #4 - 4/0 (CU)	(1) #4 - 350MCM (CU/AL)
75	75	150	200	200	(1) #3 - 350MCM (CU/AL)	(1) #4 - 350MCM (CU/AL)
100	125	200	250	300	(2) 3/0 - 350MCM (CU/AL)	(2) 1/0 - 750MCM (CU/AL)
150	200	300	400	500	(2) 250 - 350MCM (CU/AL)	(2) 1/0 - 750MCM (CU/AL)

# **Load Terminals Connections**


# Line Voltage

# Max HP

200-208	220-240	380-415	440-480	575-600	Single Run Cable Sizes	<b>Double Run Cable Sizes</b>
10	10	15	20	25	#14 - #8 (CU/AL)	#14 - #8 (CU/AL)
20	25	30	50	60	#14 - #1 (CU/AL)	#14 - #2 (CU/AL)
40	60	75	125	100	#8 - 3/0 (CU/AL)	#8 - 2/0 (CU/AL)
75	100	150	200	200	#2 - 750MCM (CU/AL)	1/0 - 250MCM (CU/AL)
150	200	300	400	500	1/0 - 500MCM (CU/AL)	1/0 - 500MCM (CU/AL)

For ambient temperatures exceeding 30C (86F), the temperature rating of motor conductors is recommended to be a minimum of 90C (194F) For proper cable size, refer to the National Electric Code (NEC - NFPA70)

# **CONTROLLER CONNECTIONS**

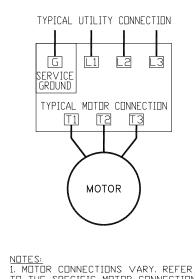


1. MOTOR CONNECTIONS VARY, REFER TO THE SPECIFIC MOTOR CONNECTION DIAGRAM. 2. OBSERVE PROPER PHASE ROTATION A-L1, B-L2, C-L3.


3. CABLE SIZE TO BE 125% OF FULL LOAD CURRENT. REFER TO NEC (NFPA

AUX SEULES FINS POUR LESQUELLES ILS VOUS SONT TRANSMIS.


# **ALARM CONTACTS**

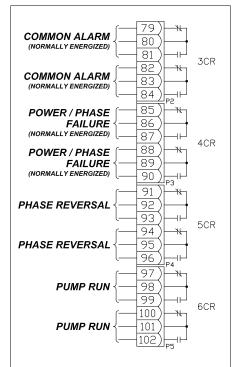

# **CUSTOMER INPUTS**

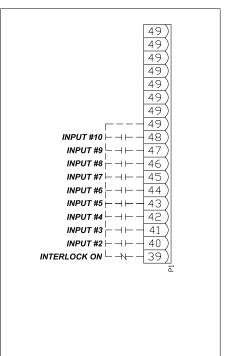

# TRANSFER SWTICH CONNECTIONS (IF EQUIPPED)

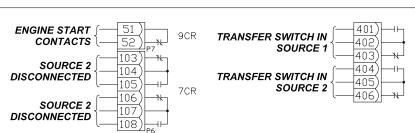

ONNECTED TO THE REMOTE START CONTACTS ARE TO BE CONNECTED TO THE REMOTE START CONTACTS ON THE GENERATOR/ENGINE.

2. CONTACTS SHOWN IN A DE-ENERGIZED, NEUTRAL POSITION


THE INFORMATION ON THIS DOCUMENT IS CREATED BY EATON. IT IS DISCLOSED IN CONFIDENCE AND IS ONLY TO BE USED FOR THE PURPOSE IN

LES RENSEIGNEMENTS CI-DESSUS ONT ÉTÉ ÉLABORÉS PAR EATON, ILS VOUS SONT DIVULGUÉS EN TOUTE CONFIANCE ET LEUR UTILISATION SE LIMITE

REVISION 001

DATE 09/25/18 DRAWING NO. CE16493H09

# **EPCT Fire option selection matrix**

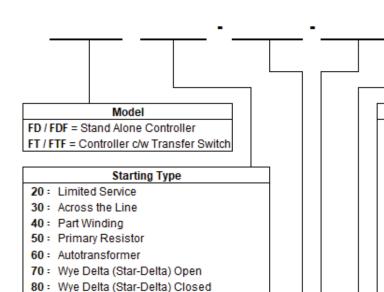

Horsepower								
5	20	50	125	300	500	700		
7.5	25	60	150	350	550			
10	30	75	200	400	600			
15	40	100	250	450	650			

<sup>\*</sup> Higher Horsepowers not available on all models. Consult Factory for pricing.

90 : Soft Start

	Voltage	
A =	208V - 60HZ	
B =	240V - 60HZ	
C =	380V - 50HZ	
D =	480V - 60HZ	
E =	600V - 60HZ	
F =	415V - 50HZ	
H =	380V - 60HZ	
J =	400V - 50HZ	
K =	400V - 60HZ	
G2 =	240V 60 HZ	
	Single Phase*	

Language					
L1	= English				
L2	= French				
L4	= Italian				
L5	= Spanish				
L6	= Portuguese				
L7	= Chinese				
L8	= Polish				
L9	= Dutch				

<sup>\*</sup> Only available on Limited Service Controllers



- B Alarm Bell
- C1 Extra Contacts "Pump Run" (Two Form-C)
- C2 Extra Contacts "AC Power Failure" (Two Form-C)
- C3 Extra Contacts "Phase Rev." (Two Form-C)
- C4 Remote Contacts (2 Form C) Low Reservoir
- C5 Remote Contacts (2 Form C) High Reservoir
- E1 NEMA 3R Raintight Enclosure
- E2 NEMA 4 Watertight Enclosure
- E3 NEMA 12 Industrial Dust Tight Enclosure
- E4 NEMA 3 Watertight Enclosure
- E5 NEMA 4X 304 Stainless Steel Enclosure
- E8 Tropicalization
- E9 NEMA 4X Painted Steel
- E10 NEMA 4X 316 Stainless Steel Enclosure
- EX Export Crating
- F2 Floor Stand 2 Inch Height\*\*
- H High Withstand Rating (refer to tables)
- I Intermediate Withstand Rating (refer to tables)
- OP1 Optional Relay Board
- OP2 Optional MODBUS Board
- OP3 Optional Secondary 4-20mA Device Card
- OP4 Optional Alarm Board
- P5 Proof Pressure Switch ALCO 15-290 PSI
- P7 Low Suction Pressure Switch
- P8 Low Suction Shutdown (Requires P7)
- P10 Pressure Transducer Sea Water Rated
- P13 Externally Mounted Pressure Transducer\*\*
- R1 Space Heater (120 / 220V)
- R2 Space Heater c/w Thermostat
- R3 Space Heater c/w Humidistat
- R4 Low Pump Room Temperature Switch \*\*\*
- R5 Space Heater (Internally powered 120V)
- R6 Space Heater c/w Thermostat (Internally powered 120V / 240V)
- R7 Space Heater c/w Humidistat (Internally powered 120V / 240V)
- TBE Terminal Block Enclosure\*\*



<sup>\*\*</sup> Not available for NEMA 3, 4, or 4X enclosures.

<sup>\*\*\*</sup> When ordered with a NEMA 3, 4, or 4X enclosure, the temperature switch is shipped loose with 20 feet of wire.

# EPCT Fire electric fire pump controllers

# **Typical specifications**

# 1. Approvals

A. The Fire Pump Controller shall meet the requirements of the latest edition of NFPA 20 and shall be listed by [Underwriters Laboratories (UL)] and approved by [Factory Mutual Research (FM)] [Canadian Standards Association (CSA)] [New York Department of Buildings (NYSB)] and carry the CE marking for fire pump service.

# 2. Starting type

A. The controller shall be of the combined manual and automatic type designed for [Limited Service - 1P or 3P] [Full Voltage Starting] [Part Winding Starting] [Primary Resistor Starting] [Autotransformer Starting] [Wye-Delta (Star-Delta) Open Transition Starting] [Wye-Delta (Star-Delta) Closed Transition Starting] [Solid State Soft Start Starting]

# 3. Ratings

- A. The Controller shall have a withstand rating of 100,000 RMS symmetrical amperes @ [208V] [240V] [380V] [400V] [415V] [480V] [25,000 @ 600VAC].
- B. Temperature: 4 to +50 deg. C (39 to +122 deg. F)

# 4. Construction

- A. The controller shall include a motor rated combination isolating switch and circuit breaker, mechanically interlocked and operated with a single externally mounted handle.
- B. The isolating switch shall be rated to disconnect the motor load.
- C. The isolating switch/circuit breaker combination shall be mechanically interlocked such that the enclosure door cannot be opened when the handle is in the on position except by a tool operated defeater mechanism.
- D. The controller manufacturer shall manufacture the contactor, isolating switch, circuit breaker, pushbuttons, and enclosures. Brand-labeled components will not be accepted.

# 5. Enclosure

A. The controller shall be housed in a Type 2 (IEC IP11) drip-proof, powder baked finish, freestanding enclosure.

# B. Optional enclosures:

- 1. Type 3R (IEC IP14) rain-tight enclosure
- 2. Type 3 (IEC IP55) water-resistant enclosure
- 3. Type 4 (IEC IP66) watertight enclosure
- 4. Type 4X (IEC IP66) watertight 304 stainless steel enclosure
- Type 4X (IEC IP66) watertight 316 stainless steel enclosure
- 6. Type 4X (IEC IP66) watertight corrosion resistant enclosure
- 7. Type 12 (IEC IP52) dust-tight enclosure

# 6. Microprocessor control

- A. The controller shall come complete with a 7", 800x480, color touchscreen. The touchscreen shall be type 4X rated.
  - Home tab capable of displaying system pressure, three phase voltage and amperage readings for both sources, system frequency, date, and time, configurable notifications in the notification area, displaying current start and stop set points, and visual representation of the transfer switch position, source 2 disconnect handle, and contactor.
  - 2. Virtual buttons to manually test the pump motor and/or the backup power supply engine.
  - 3. Controller statistics screen, including:
    - A. Total Powered Time
    - B. Total Motor Run Time
    - C. Last Motor Run Time
    - D. Calls to Start
    - E. Motor Starts
    - F. Maximum Starting Current A
    - G. Maximum Starting Current B
    - H. Maximum Starting Current C
    - I. Maximum Run Current A
    - J. Maximum Run Current B
    - K. Maximum Run Current C
    - L. Last LR Current A
    - M. Last LR Current B
    - N. Last LR Current C
    - O. Minimum System Pressure
    - P. Maximum System Pressure
    - Q. Minimum S1 Voltage AB



# Fire pump controllers Features

- R. Minimum S1 Voltage BC
- S. Minimum S1 Voltage CA
- T. Maximum S1 Voltage AB
- U. Maximum S1 Voltage BC
- V. Maximum S1 Voltage CA
- W. Minimum S2 Voltage AB
- X. Minimum S2 Voltage BC
- Y. Minimum S2 Voltage CA
- Z. Maximum S2 Voltage AB
- AA. Maximum S2 Voltage BC
- AB. Maximum S2 Voltage CA
- AC. Minimum S1 Frequency
- AD. Maximum S1 Frequency
- AE. Minimum S2 Frequency
- AF. Maximum S2 Frequency
- AG. Last System Startup
- AH. Last Motor Start
- Al. Last Low Pressure Start
- AJ. Last Locked Rotor Trip
- AK. Last S1 Phase Failure
- AL. Last S2 Phase Failure
- AM. Last S1 Phase Reversal
- AN. Last S2 Phase Reversal
- AO. Last S1 Undervoltage
- AP. Last S1 Overvoltage
- AQ. Last S2 Undervoltage
- AR. Last S2 Overvoltage
- AS. Last S1 Under Frequency
- AT. Last S1 Over Frequency
- AU. Last S2 Under Frequency
- AV. Last S2 Over Frequency
- AW. Last Generator Start
- AX. Last Generator Stop
- AY. Last transfer to S1
- AZ. Last transfer to S2
- BA. Last S2 Disconnect
- 4. Controller diagnostics screen, including:
  - A. Controller Serial Number
  - B. Logic Board Firmware Version
  - C. I/O Board Firmware Version
  - D. I/O Board Supply Voltage
  - E. I/O Board Communication
  - F. CT1 Secondary Amperage
  - G. CT2 Secondary Amperage
  - H. CT3 Secondary Amperage
  - I. Transducer Input Voltage
  - J. Transducer Output Current
  - K. Transducer Setpoint Current 2
  - L. Transducer Setpoint Current 1

- M. All Input Status (Open or Closed) (Can be selected to override for one minute and manually change the state of the input)
- N. All Output Relay Status (Energized or De-energized) (Can be selected to override for one minute and manually energize or de-energize the relay)
- O. Test the display board's communication.
- Archive message screen that will display up to 65,000 alarms/messages stored in the controllers' memory
- B. The microprocessor logic board shall be available with a USB port for transference of message history, controller status, diagnostics, startup and statistic files and the ability to update firmware.
- C. A Fail-to-Start alarm shall occur if the motor controller sees less than 20% of the motor full load amps after an adjustable time delay of 1-99 seconds.
- D. Locked rotor protection shall be provided. After a trip condition and restoration of power, the display shall indicate the voltage, current, and date and time at the moment that the controller tripped.
- E. A sequential start timer and weekly test timer shall be provided as standard.
- F. A restart time delay of one (1) second shall be provided to allow the residual voltage of the motor to decay prior to re-starting the motor. In the event that the pump motor continues to run after a request to stop, then the controller must display a fail to stop message to indicate this condition.
- G. Overvoltage (0-100%) and undervoltage (0-100%) sensing and alarming shall be provided as standard.
- H. The controller shall be supplied with interlock and shutdown circuits as standard. A green LED in the notification area shall indicate an interlock on condition.
- I. Where shutdown of the pump(s) due to low suction pressure is required, it shall be accomplished without the addition of a separate panel or enclosure. The display shall indicate low suction shutdown. Resetting of the condition shall be automatic or manual as selected by the user.

# 7. Programming Menu

- A. The programming menu shall have the ability to enable an entry password.
- B. The controller shall have nine (9) languages as a standard: English, French, Spanish, Portuguese, Turkish, Italian, Dutch, Chinese, and Polish.
- C. The programming menu shall be grouped into ten (10) tabs as follows:
  - 1. Home
  - 2. Startup
  - 3. Panel Setup
  - 4. Help
  - 5. Pressure Settings
  - 6. Timer Values

while the motor is operating, shall operate if Fail to Start, Hardware Malfunction or any Common Alarm

A. The controller shall be of the EPCT Fire type as

manufactured by Eaton Corporation.

condition exists.

12. Manufacturer

- 7. ATS Settings
- 8. Alarm Setpoints
- 9. Inputs/Outputs
- 10. History/Statistics/Diagnostics

### 8. Pressure sensor

A. A solid-state 4-20mA pressure sensor shall be provided. The pressure Start and Stop points shall be adjustable in increments of one (1) PSI.

# 9. Custom inputs/outputs

- A. The controller shall come standard with ten (10) programmable inputs, four (4) programmed outputs with the ability to add up to another sixteen (16) outputs via optional relay boards.
- B. The user shall be able to program the inputs/outputs through the main programming menu.
- C. The inputs shall be selectable based on the following criteria:
  - User selected message or seventeen (17) predetermined messages
  - 2. Link to a future relay and/or LED indicator
  - 3. Alarm latched until reset
  - 4. Normally open or closed input
  - 5. On and/or off-delay timer
- D. The future relays shall be selectable based on the following criteria:
  - Output based on a minimum of sixty-one (61) predetermined alarms, controller status or a custom input
  - 2. Latched until reset
  - 3. Energized under normal conditions
  - 4. On and/or off delay timer on the output

# 10. Alarm relays

- A. All relays shall be soldered on the PCB. An LED on the relay panel shall indicate the energized state of the relay. All relay contacts shall be rated @ 8A, 277VAC/30VDC. Two (2) sets of Form-C contacts shall be provided for each of the following:
  - 1. Common Alarm
  - 2. Power/Phase Failure
  - 3. Phase Reversal
  - 4. Pump Run
- B. The Common Alarm and Power/Phase Failure relays shall be energized under normal conditions.

# 11. Audible alarm buzzer

An audible alarm buzzer, capable of being heard

Eaton



Web: www.chfire.com