

# Menvier MF200/400 Series Conventional Zone Panel

## Operating Instructions

### Access Code 2113

#### Silence Alarms

Access Code, 2 to mute

#### Reset System

Access Code, 4 to Reset

#### Disable Zone ,Sounders, Remote signal output.

Access Code,

Press 1- toggle to disable mode.

Press 3- toggle to required zone etc.

Press 2- to enable.

Press 1- toggle to supervisor mode

Press 4- to reset.

#### Re-enable Zone ,Sounders, Remote signal output.

Same as above

#### One man test mode

Access Code,

Press 1- toggle to test mode.

Press 3- toggle to zone required.

Press 2- to enable.

Press 1- toggle to supervisor mode

Press 4- to reset.

#### To remove from one man test mode

Same as above