

Room Controller Touch

Quick User Guide

Snelle Gebruikershandleiding / Hurtigveiledning /
Schnellanleitung / Stručný návod k obsluze



- EN: For the extended user guide and other detailed information about xComfort visit www.eaton.eu/xcomfort or www.xcomfort.com or use the QR-code
- DE: Für das erweiterte Benutzerhandbuch und detaillierte Informationen zum xComfort System besuchen Sie www.eaton.eu/xcomfort oder www.xcomfort.de oder verwenden Sie den QR-code
- AT: Für das erweiterte Benutzerhandbuch und detaillierte Informationen zum xComfort System besuchen Sie www.eaton.eu/xcomfort oder www.xcomfort.at oder verwenden Sie den QR-code
- NO: For en mer omfattende brukerveiledning og mer informasjon om xComfort, besøk www.xcomfort.no eller www.eaton.eu/xcomfort, eller bruk QR-koden
- NL: Voor de uitgebreide gebruikershandleiding en meer gedetailleerde informatie over xComfort ga naar www.eaton.nl/xcomfort of www.xcomfort.nl of maak gebruik van de QR-code
- CZ: Pro podrobnější návod k obsluze a další podrobné informace o xComfort navštivte www.eaton.eu/xcomfort nebo www.xcomfort.cz nebo použijte QR kód



www.eaton.com/recycling

Quick_Insta_card_RC_Touch.indd
072019b / IL019234ZU / 136211204

EAT•N

Powering Business Worldwide

© 2019 by Eaton Industries (Austria) GmbH
Eugenia 1, 3943 Schrems, Austria
www.eaton.eu/documentation
All Rights Reserved, Printed in Austria

Main menu

Hoofdmenu
Hovedmeny
Hauptmenü
Hlavní menu

Active operation mode

- Frost protection
- Night / Standby
- Economy
- Day / Comfort

Select view

- Temperature
- Humidity
- Clock
- Outdoor temperature

Enter operation mode - menu

Request status

- Heating
- Cooling
- Ventilation

Status info

- Week program active
- Floor regulation active
- Low battery

Temporarily adjust temperature

Optional

- 2 virtual pushbutton

Operation mode - menu

Operation mode -menu
Driftsmodus - menyen
Betriebsart - Menü
Provozní režim - nabídka

Select operation mode

- Frost protection
- Night / Standby
- Economy
- Day / Comfort

Select

- Heating mode
- Cooling mode
- Off

Select week program

- Program ON
- Program OFF

Enter edit mode

Edit mode - menu

Edit mode - menu
Redigeringsmodus - menyen
Edit-Modus - Menü
Editační režim - nabídka

Edit operation mode

- Frost protection
- Night / Standby
- Economy
- Day / Comfort

Change set-point


Edit week program

Leave edit mode

Temporarily adjust the current set-point temperature / Tijdelijk aanpassen van de huidige gewenste temperatuur / Vis gjeldende/aktiv settpunkts-temperatur / Aktuelle Solltemperatur vorübergehend einstellen / Dočasné nastavení aktuální požadované teploty




Switch active set-point temperature (Operation mode) / Schakelen naar andere gewenste temperatuur / Bytt aktiv settpunkts-temperatur / Aktive Solltemperatur ändern / Přepínání aktivní požadované teploty

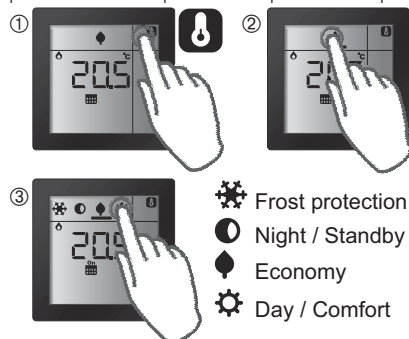


- Frost protection
- Night / Standby
- Economy
- Day / Comfort


Change Pre-Defined Set-Point Temperature / Wijzigen van de geprogrammeerde gewenste temperaturenwaarden / Endre forhåndsdefinerte Settpunkts-temperaturer / Vordefinierte Solltemperatur ändern / Úprava předdefinované požadované teploty

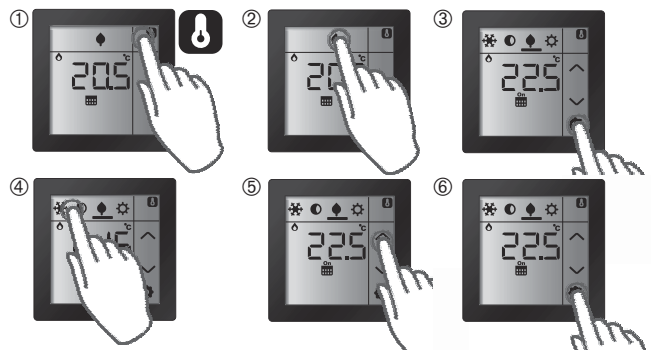

Activate/Deactivate Week Program / Activeer/Deactiveer Weekprogramma / Aktivere/Deaktivere ukeprogrammet / Wochenprogramm aktivieren/deaktivieren / Aktivace/Deaktivace týdenního programu

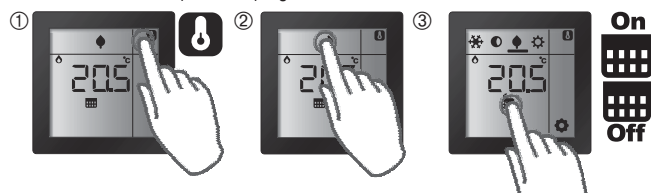


Edit Week Program Timer / Programmeren Weekprogramma / Redigere Ukeprogram / Zeitschalter für Wochenprogramm bearbeiten / Úprava časovače týdenního programu

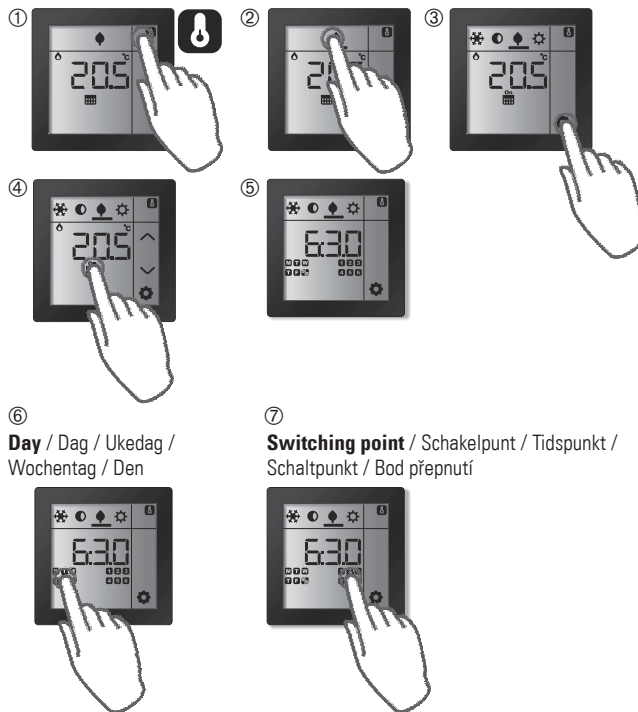


Day / Dag / Ukedag / Wochentag / Den


Switching point / Schakelpunt / Tidspunkt / Schaltpunkt / Bod přepnutí

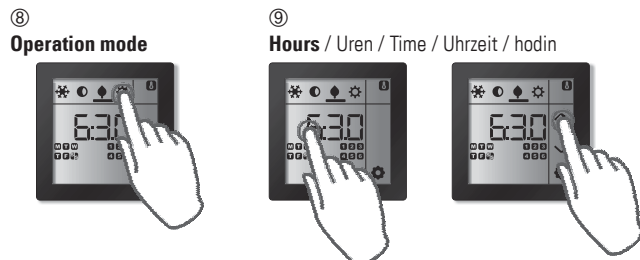

Minutes / Minuten / Minutter / Minuten / Minut

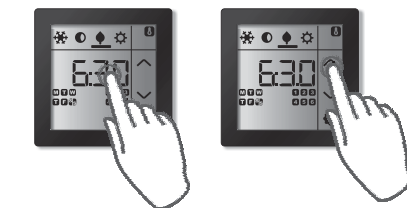

Edit/Set Current Time and Date / Instellen Actuele Tijd en Datum / Stille inn tid og dato / Aktuelle Uhrzeit und Datum einstellen/bearbeiten / Úprava/Nastavení aktuálního času a data

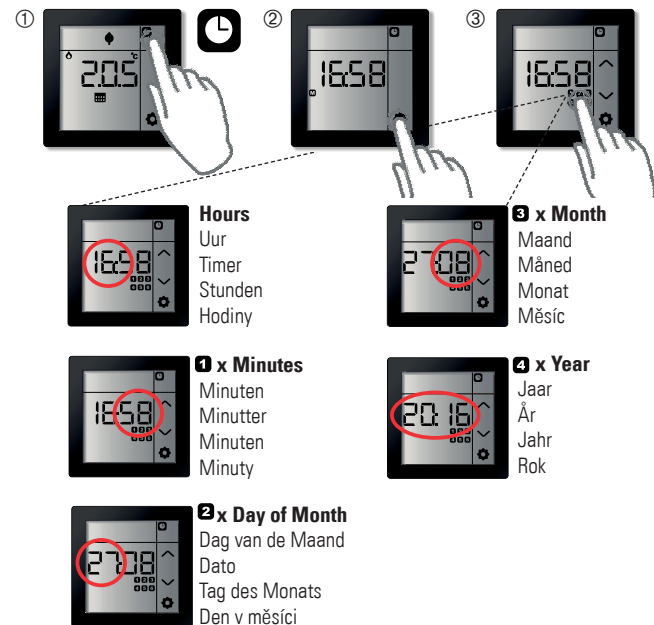

Hours
Uur
Timer
Stunden
Hodiny

3 x Month
Maand
Måned
Monat
Měsíc


1 x Minutes
Minuten
Minutter
Minuten
Minuty

4 x Year
Jaar
År
Jahr
Rok

2 x Day of Month
Dag van de Maand
Dato
Tag des Monats
Den v měsíci

Change / Wijzig / Endre / Ändern / změňte nastavení

Leave Edit Mode / Afsluiten / Avslutt / Einstellungsmodus verlassen / Ukončete režim úprav

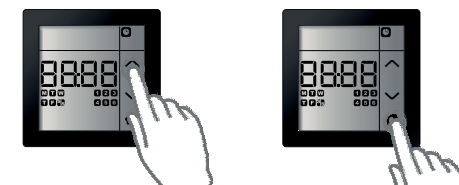

Replacing the batteries / Vervangen van de batterijen / Skifte batterier / Batteriewechsel / Výměna baterií

