
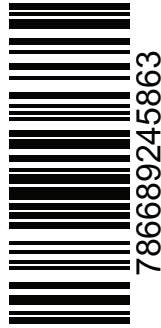




PDG2 Tunnel Terminal (Aluminum) 150 amps, AWG
14-4/0, 4 poles
Cat. No. PDG2X4TA150
Style No. 624B100G80
Quantity - 4

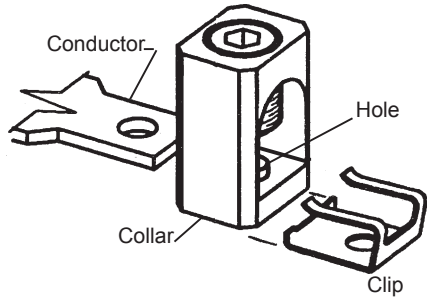

Instructions For Assembly:

- Insert Collar Around Conductor & Center Conductor Hole Over Collar Hole.
- Install Clip with Legs on Top of Conductor & Snap Its End Around Bottom of Collar.
- **CAUTION:** Assemble As Shown. Collar Must Surround Conductor & Clip Legs Must Be On Top Of Conductor.

PDG2 Tunnel Terminal (Aluminum) 150 amps, AWG
14-4/0, 4 poles
Cat. No. PDG2X4TA150
Style No. 624B100G80
Quantity - 4

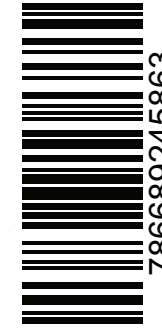
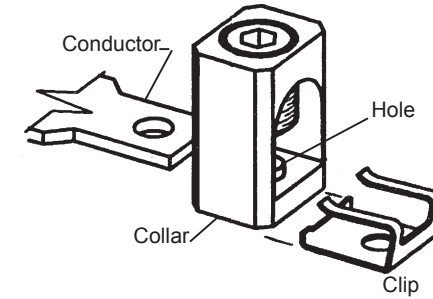


Instructions For Assembly:

- Insert Collar Around Conductor & Center Conductor Hole Over Collar Hole.
- Install Clip with Legs on Top of Conductor & Snap Its End Around Bottom of Collar.
- **CAUTION:** Assemble As Shown. Collar Must Surround Conductor & Clip Legs Must Be On Top Of Conductor.

+


PDG2 Tunnel Terminal (Aluminum) 150 amps, AWG
14-4/0, 4 poles
Cat. No. PDG2X4TA150
Style No. 624B100G80
Quantity - 4

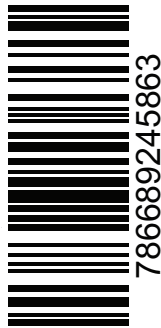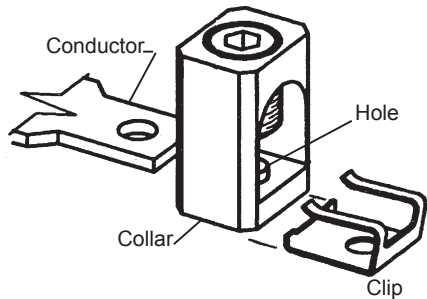

Instructions For Assembly:

- Insert Collar Around Conductor & Center Conductor Hole Over Collar Hole.
- Install Clip with Legs on Top of Conductor & Snap Its End Around Bottom of Collar.
- **CAUTION:** Assemble As Shown. Collar Must Surround Conductor & Clip Legs Must Be On Top Of Conductor.

PDG2 Tunnel Terminal (Aluminum) 150 amps, AWG
14-4/0, 4 poles
Cat. No. PDG2X4TA150
Style No. 624B100G80
Quantity - 4

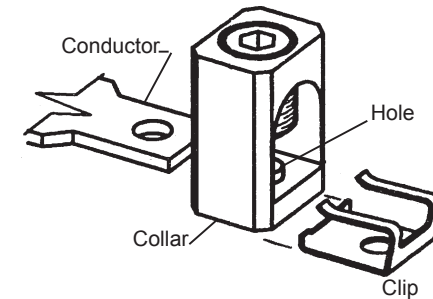

Instructions For Assembly:

- Insert Collar Around Conductor & Center Conductor Hole Over Collar Hole.
- Install Clip with Legs on Top of Conductor & Snap Its End Around Bottom of Collar.
- **CAUTION:** Assemble As Shown. Collar Must Surround Conductor & Clip Legs Must Be On Top Of Conductor.