





**Power
Defense™**

**Circuit Breaker
Accessory**

**For PDG3
Frame**

PDG3 - Screw Terminal/End Cap 600 amps, 3 Poles
Cat. No. PDG3X3TS600
Style No. 66A4562G12
Quantity - 1

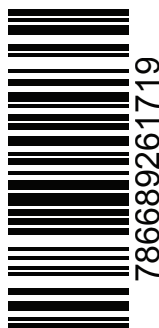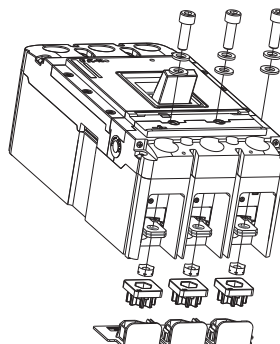

Disconnect Voltage and Tripbreaker.
To Install, slide Endcap and Nuts onto breaker base.
Mount breaker to panel.
Place Wire Terminations on top of breaker Terminals.
Insert Terminal Screws through washers in order
shown, and torque screws to 354 Lbs-in (40N-m).

IL012264EN H01




**Power
Defense™**

**Circuit Breaker
Accessory**

**For PDG3
Frame**

PDG3 - Screw Terminal/End Cap 600 amps, 3 Poles
Cat. No. PDG3X3TS600
Style No. 66A4562G12
Quantity - 1

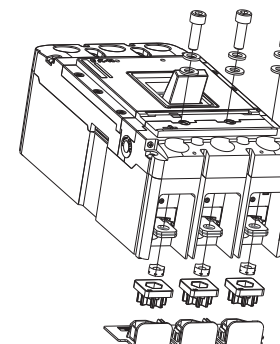

Disconnect Voltage and Tripbreaker.
To Install, slide Endcap and Nuts onto breaker base.
Mount breaker to panel.
Place Wire Terminations on top of breaker Terminals.
Insert Terminal Screws through washers in order
shown, and torque screws to 354 Lbs-in (40N-m).

IL012264EN H01

+





**Power
Defense™**

**Circuit Breaker
Accessory**

**For PDG3
Frame**

PDG3 - Screw Terminal/End Cap 600 amps, 3 Poles
Cat. No. PDG3X3TS600
Style No. 66A4562G12
Quantity - 1

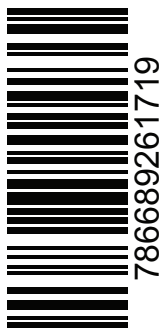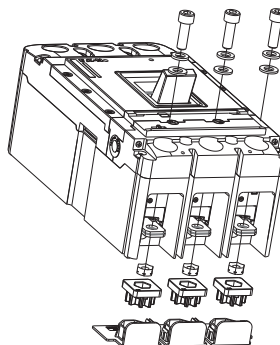

Disconnect Voltage and Tripbreaker.
To Install, slide Endcap and Nuts onto breaker base.
Mount breaker to panel.
Place Wire Terminations on top of breaker Terminals.
Insert Terminal Screws through washers in order
shown, and torque screws to 354 Lbs-in (40N-m).

IL012264EN H01




**Power
Defense™**

**Circuit Breaker
Accessory**

**For PDG3
Frame**

PDG3 - Screw Terminal/End Cap 600 amps, 3 Poles
Cat. No. PDG3X3TS600
Style No. 66A4562G12
Quantity - 1

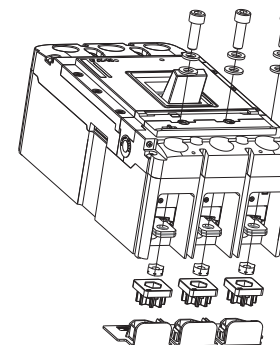

Disconnect Voltage and Tripbreaker.
To Install, slide Endcap and Nuts onto breaker base.
Mount breaker to panel.
Place Wire Terminations on top of breaker Terminals.
Insert Terminal Screws through washers in order
shown, and torque screws to 354 Lbs-in (40N-m).

IL012264EN H01