

Modular bin drawers

Please read the following safety instructions carefully and follow the installation steps in sequence.

- UM11-RP Universal Roll-out Shelf
- UT11-RP Transition Roll-out Shelf
- UM75-RP Drop File Roll-out Shelf
- UM14-RP 12" Bin Drawer
- UM20-RP 15" Bin Drawer
- UO47-FP Center Rails for Front-to-back Filing

PLEASE NOTE:

1. Some file drawer accessories may not be used in combination with one another.
2. Some of the following instructional information may not pertain to all of the above listed products.

SIDE EXTENDERS

15" Bin Drawers (item number UM20-RP) require side extenders to increase the filing height of the drawer sides. To assemble the extensions, position them as shown in figure 1 and secure each side with three #10 phillips head self tapping screws. (The screws must be assembled from inside the drawer.)

BIN DRAWER FRONT

12" and 15" Bin Drawers (item numbers UM14-RP and UM20-RP) require a solid front panel. To assemble the panel first hook the panel's bottom flange under the drawer handle and then pivot the panel to a vertical position. Secure the panel by installing either two or three (depending on the drawer size) #8 phillips head self Universal roll-out tapping screws into each side. See figure 2.

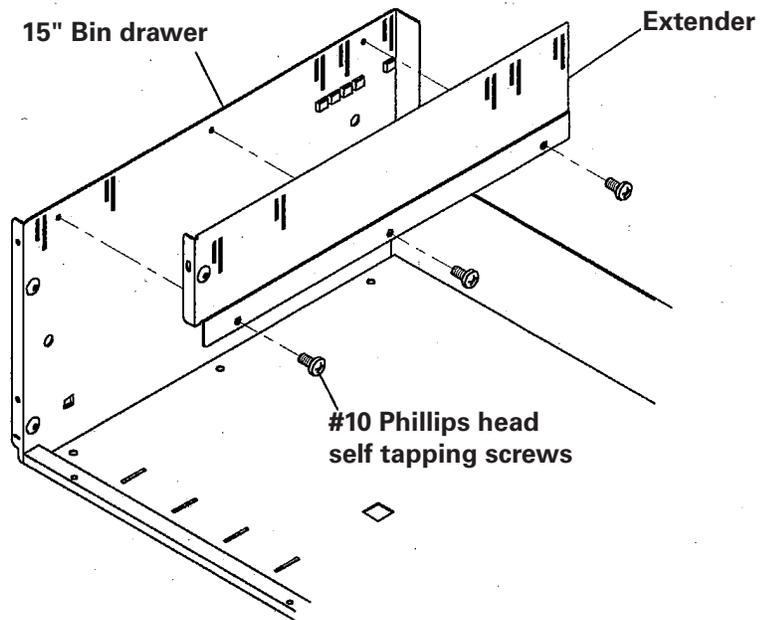


Figure 1

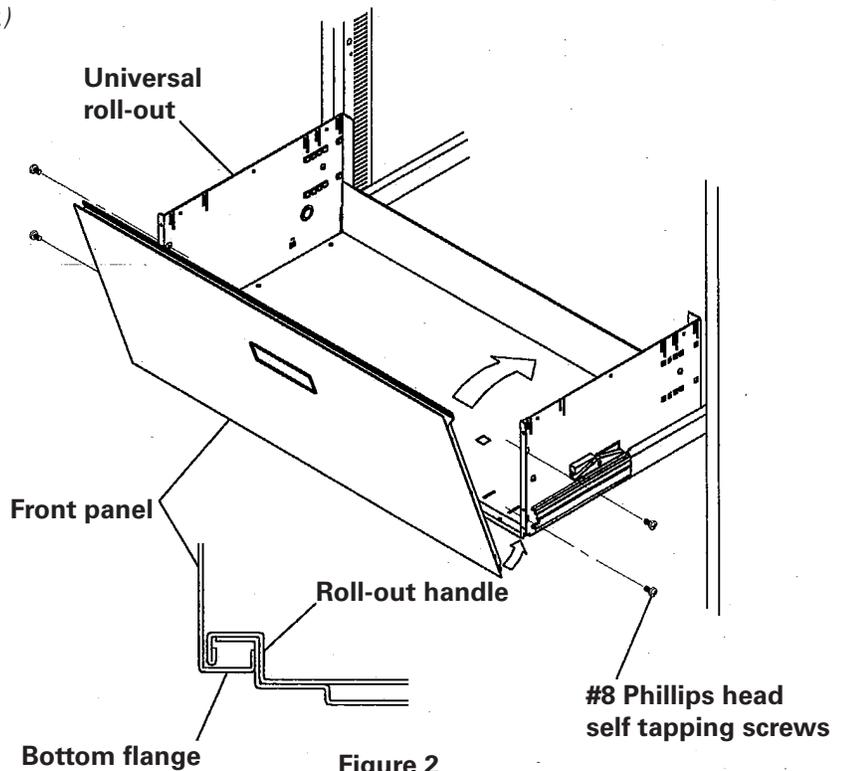


Figure 2



Powering Business Worldwide

LATERAL FILE BARS (UM14-FP and UM20-FP Bin Drawers require only one lateral file bar at the back of the drawer. The lip of the Bin Drawer front will serve as the front file bar.)

Determine the location of the Lateral File Bar(s) using figure 3 as a guide. The long vertical slots may be used for standard height media (low bar position). The shorter slots are for extra tall media (high bar position). **(PLEASE NOTE: the high bar position MUST be used for the AM14-FP and AM20-FP Bin Drawers.)**

Install the Lateral File Bars with the stiffening flanges **AWAY** from the media. While holding the bar above the drawer, insert one end into the desired slot. Lower the opposite end of the bar and insert it into the desired slot. Tap the bar down to seat it onto the bottom of the slots. See figure 4.

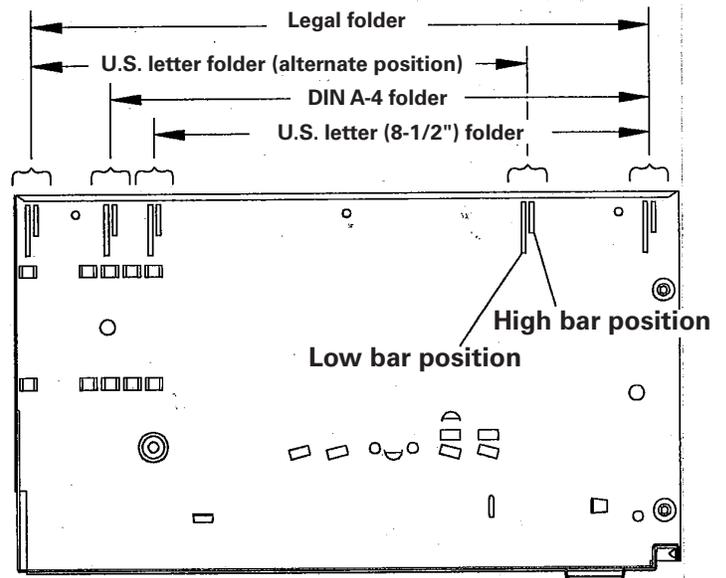


Figure 3

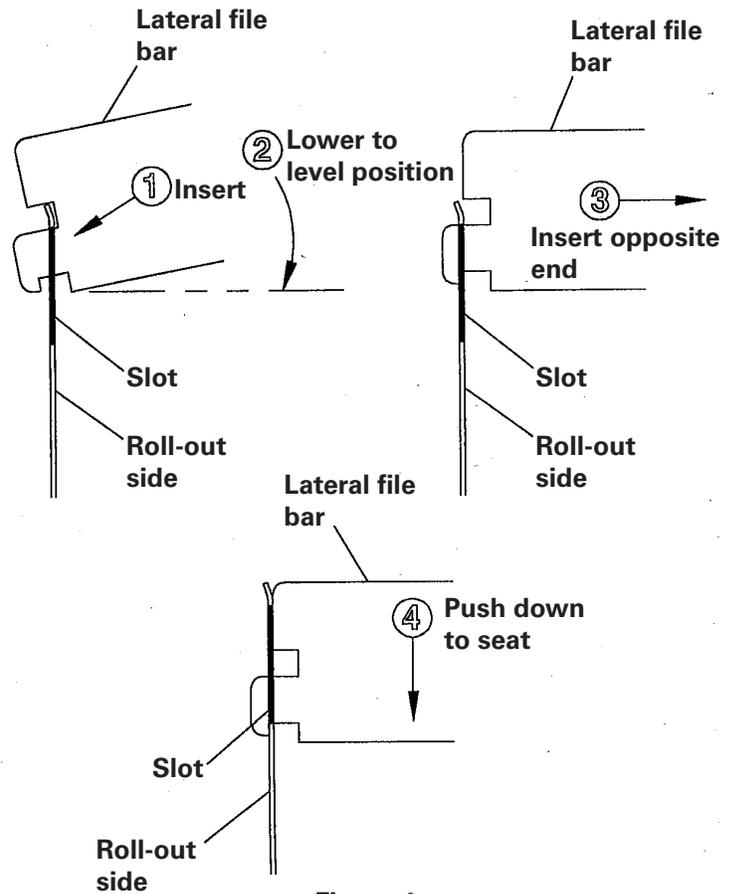


Figure 4



Powering Business Worldwide

CENTER RAILS FOR FRONT-TO-BACK FILING

The Center Rails hang on the two lateral file bars (or in the case of a Bin Drawer, on the rear file bar and the filing lip on the Bin Drawer Front). When hung on two Lateral File Bars, the Center Rails are infinitely adjustable. When the Center Rails are used in a AM14-FP or AM20-FP Bin Drawer, slots in the bin drawer front determine various filing options. See figure 5.

TO INSTALL DRAWER INTO A CABINET

Refer to instruction sheet #66718 to install the assembled drawer into a cabinet.


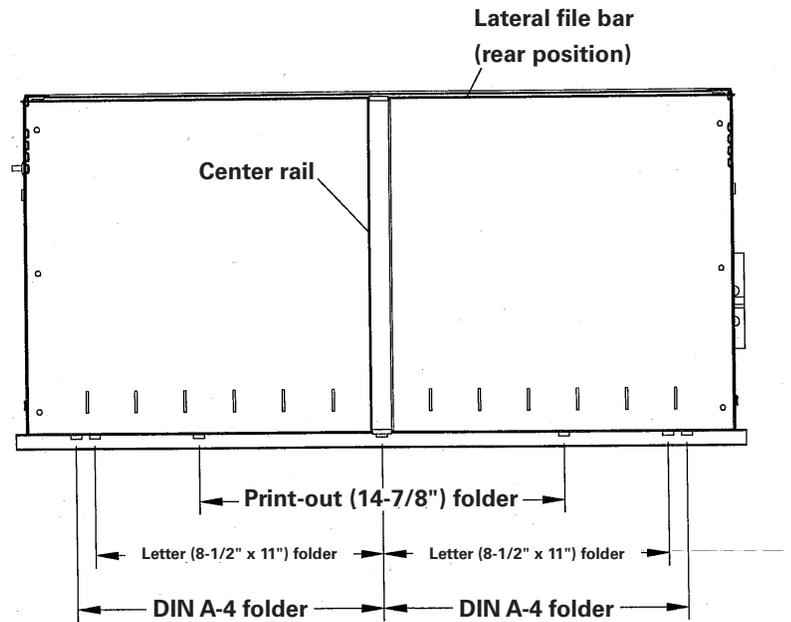


Figure 5

Replacement parts lists

Part no.	Description
1	2642P Weldment, universal roll-out
2	1184P Front, bin drawer-15"
	1185P Front, bin drawer-12"
3	1179X Back panel
4	81902 Hanger rail
5	66095 Support, center
6	81933 Extender, R.H.
7	81932 Extender, L.H.
8	54055 #10 Phillips head self tapping screw
9	68374 #8 Phillips head self tapping screw
10	27157 Suspension
11	81761 Bracket, interlock cam
12	81751 Interlock cam

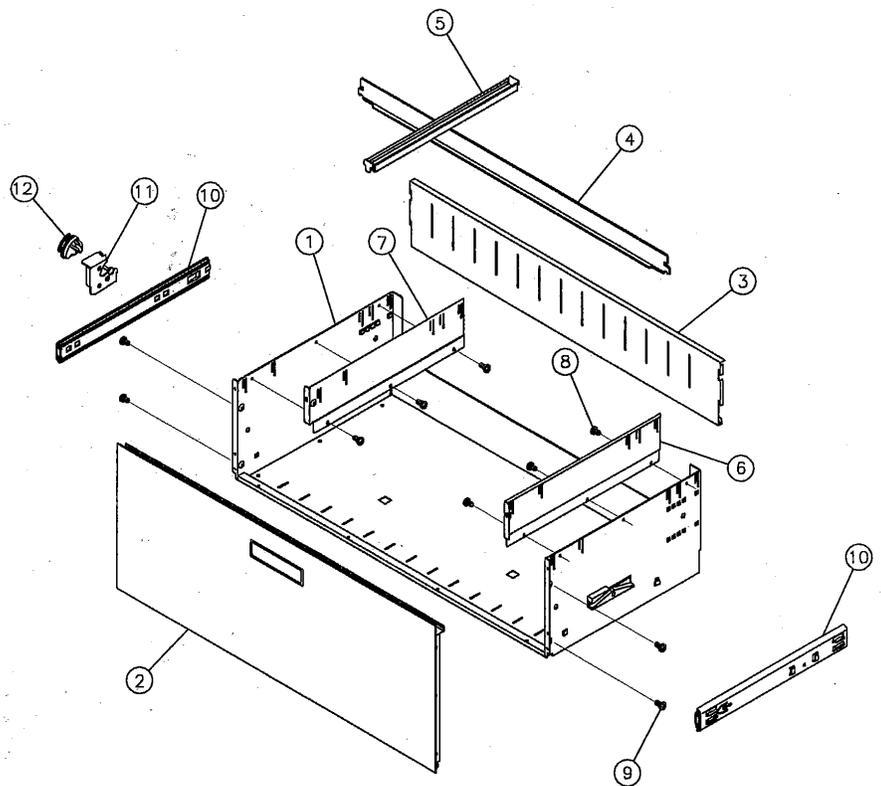

Eaton
1000 Eaton Boulevard
Cleveland, OH 44122
United States
Eaton.com